


MODEL: 681T (Wireless remote control)

1. Batteries install and replacement

- Remove the battery compartment cover by screw driver and open the battery Cover.
- Install two CR2032 button batteries with correct polarity which has been marked in the picture (“+” is upward), and re-fix the screw.(Fig.2)
- When battery goes low, the LED will flash 3 times after press any button, change two new CR2032 batteries immediately.

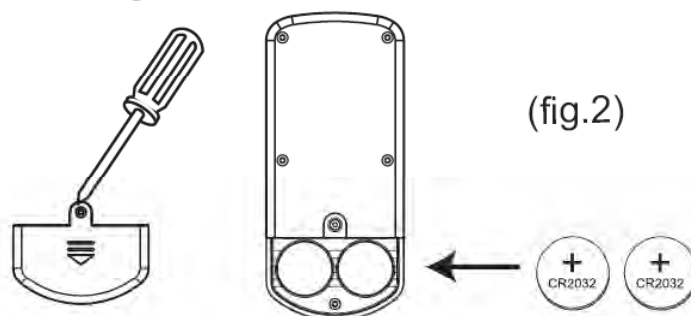

this AC socket are all completed done the LEARN ID CODE. The whole units are standby for use after installation directly. If you involuntary delete ID code or new purchased the remote control, must learn ID code to AC SOCKET unit before use, learn ID code operation see main unit manual “LEARN ID CODE FUNCTION”.

NOTE: the remote control can separate control maximum 4 AC socket, so number 1~4 ID code must learn to different AC socket.

OPERATION

- Press number 1~4 ON or OFF button separate to turn on or turn OFF different AC socket.
- Press ALL ON or ALL OFF button same time turn on or turn off all AC socket

CAUTION

This device complies with part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received. Including interference that many cause undesired operation. Changes of modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.