


**MANUAL FOR INSTALLATION
AND OPERATING INSTRUCTION**

4 USER'S MANUAL

1. Shape and Controls

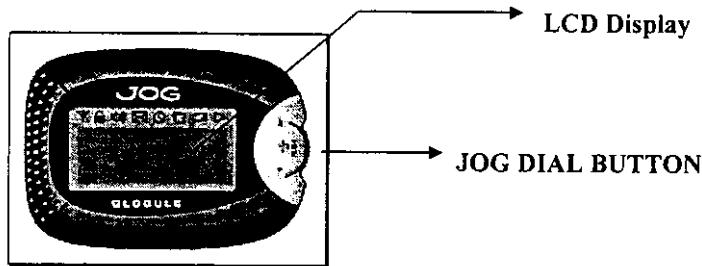


Using the Jog dial button

1st way : Press the Jog dial button for more than 1 second.

2nd way : Click the Jog dial button.

3rd way : Turn(Rotate) the Jog dial button.

2. LCD display & Icons

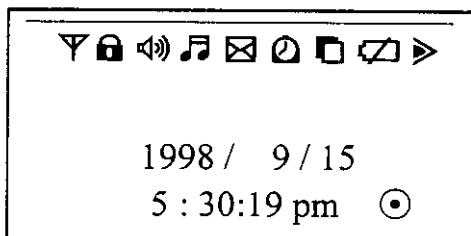

■ : Service area indicator

■ : Locked message indicator

■ : Alert mode indicator

■ : Unread message indicator

■ : Alarm setting indicator

■ : Duplicated message indicator

■ : Low battery indicator

■ : Message continuation indicator

○ (■) :

○ : No unread mail message indicator

■ : Unread mail message indicator

** The LCD display shall be turned off after 8 seconds when there is no button pressing or turning for saving power consumption.


This device complies with Part 15 of the FCC Rules.

Operation is subject to the condition that this device does not cause harmful interference.

Caution : Any change or modifications in construction of this device which are not expressly approved by the party responsible authority to operate the equipment.


3. Entering from empty screen to standby screen

Either click or turn the button to move to the standby screen.

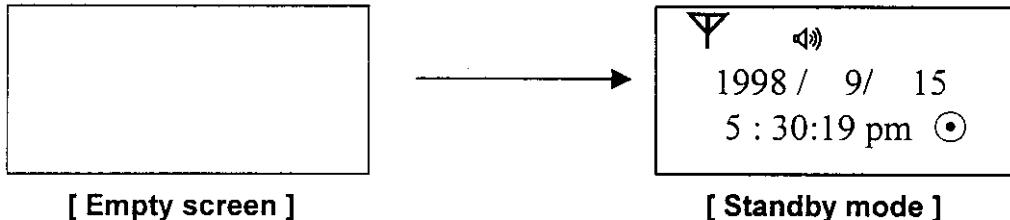


4. Message reading

If clicking the button from the standby mode above, the menu 1 screen will be shown as below. And then just keep clicking the button to see the message as follows.

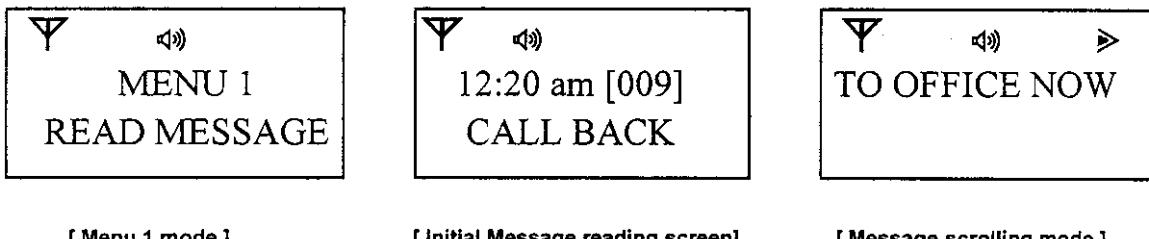

- 12 : 20 am : Message Time stamping.
- [009]: Indicates this message is the ninth message.


100 messages could be stored up to maximum English 240 characters
When all the message slots are full, the screen shall be displayed as follows.

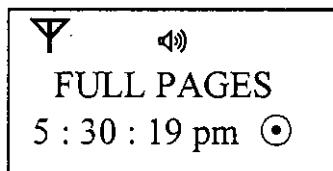

- 4.1. Turn the button up and down to see the initial part of each message received, at the status of **Initial message reading mode**.
- 4.2. Just click the button to move to message scrolling mode in order to the other whole part of the message and turn the button to read the whole message.
- 4.3. Press the Jog dial button for more than 1 second to select individual message locking & deleting.

5. Individual Message locking & deleting

Press the Jog dial button for more than 1 second at the status of [Message Scrolling mode] and the following mode will be shown.

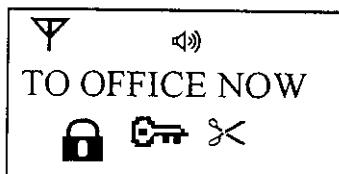

[Individual message Locking and Deleting mode]

Individual Message Locking

: Click the button when the mark  is selected and, the current message is locked and the icon  will be shown on the top of the screen.

Message Unlocking :

: Click the button when the mark  is selected and, the current message is unlocked and the icon  will disappear.


Individual Message Deletion

: Click the button when the mark  is selected, and the current message will be deleted.

6. Menu screen


Click the button to enter Menu Mode from Standby mode.

Turn the button up and down to select one of total 14 different modes.

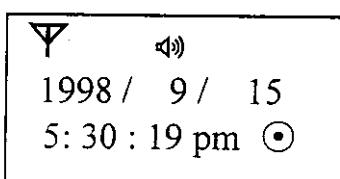

[Standby Mode]

Click the button

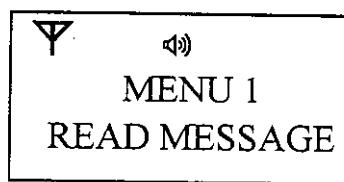

[Menu Mode]

6.1. Menu 1 (Message Reading function)

Click the button to enter [Initial message reading screen] from the Menu mode.

And click the button to keep reading the remaining whole message


* Refer to the way shown on the previous pages.

6.2. Menu 2 (Read mail function)


Turn the button down for a move to **MENU 2 mode** which is **mail reading mode**.

When MENU 2 mode is shown, click the button again for a move to **[Mail Selection Mode]** as shown below.

Each mail message can be selected at the status of **[Mail Selection Mode]**

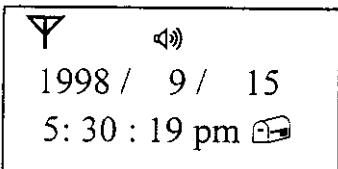

[Standby Mode]

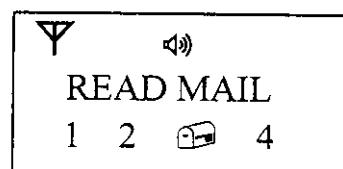

[Mail Selection Mode]

If (s) is seen on **[Mail Selection Mode]**, it(they) means there is[are] [an] unread mail message(s).

When a selected, click the button to read the unread mail message.

In case of the above example, 3rd mail message will be read since it has been unread.

Each slot could store up to maximum 4 mail messages.

Press the button for more than 1 second to select individual mail message locking & deleting.

6.3. Menu 3 (Call alert selecting)

Turn the button for a move to the MENU 3 mode at the status of **[Menu Mode]** and then click the button to get into the following **[Alert Selection Mode]**.

Turn the button again to select one of three mail alert modes (1) Tone, (2) Melody, and (3) Vibration mode.



[Alert Selection Mode]

Tone Selection :

When icon and # beside together are selected marked in black, click the button and the currently selected tone will beep and the tone # only will be marked in black.

Turn the button up and down to select one of 8 kinds of tones and the 8 different tones will beep sequentially.

After user selects one of them, stop turning and click the button to set up the tone and press the button for more than 1 second to come back to the standby mode.

Melody Selection :

When  icon and # beside together are selected marked in black, click the button and the currently selected melody will beep and the melody # only will be marked in black

Turn the button up and down to select one of 4 kinds of melodies and 4 different tones will beep sequentially.

After user selects one of them, stop turning and click the button to set up the melody and press the button for more than 1 second come back to the standby mode.

Vibration Selection :

When  icon is selected marked in black, just click the button to set up the vibration.

Press the button for more than 1 second to go back to the previous screen.

6.4. Menu 4 (Mail alert)

Turn the button for a move to MENU 4 at the status of **[Menu Mode]**.

And then, click the button to go to **[Mail Alert Selection mode]**.

**[Mail Alert Selection Mode]**


When  is selected, the selected tone will beep when a mail message is received

Press the button for more than 1 second come back to the previous screen.

6.5. Menu 5 (Adjust Time)

Turn the button for a move to MENU 5 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[ADJUST TIME MODE]**.

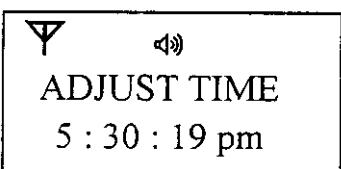**[Adjust Time Mode]**


Click the button to store the selected time and turn the button to change the time.

If the pager was adjusted time, back to the standby screen automatically.

6.6. Menu 6 (Adjust Date)

Turn the button for a move to MENU 6 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[ADJUST DATE MODE]**.

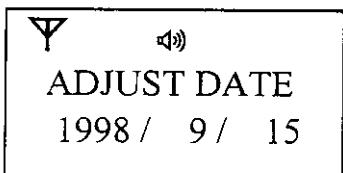

[Adjust Date Mode]


Click the button to store the selected date and turn the button to change the date.

If the pager was adjusted date, back to the standby screen automatically.

6.7 Menu 7 (Alarm on / off)

Turn the button for a move to MENU 7 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[ALARM ON/OFF MODE]**

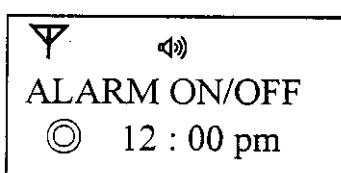


[Alarm On/Off Mode]

Turn the button to activate the Alarm function from the above mode.

Click the button to store the selected alarm time and turn the button to set up the time.

If any alarm time is set, the  icon will be shown on the top part.


During the alarm time, the screen shall be displayed as follows and the alarm tone shall be continued for 30 seconds.

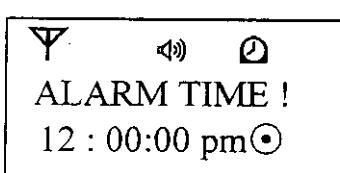

6.8. Menu 8 (Auto on/off)

Turn the button for a move to MENU 8 at status of [Menu Mode].

And then, click the button to go forward to the following [AUTO ON/OFF MODE]

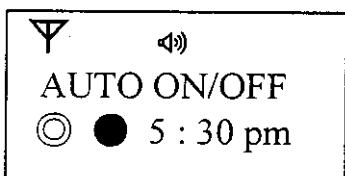

Turn the button to activate the Auto on/off function.

If user wants to set up the Auto ON time, click the button while ● icon is displayed.

And then, when hour is selected, turn the button to adjust hour.

(In order to adjust minute, repeat the same method as the above)

If user set up the Auto OFF time, click the button while ○ icon is displayed.

And then, when hour is selected, turn the button to adjust hour.


(In order to adjust minute, repeat the same method as the above)

When the pager is in auto on state, ◆ is displayed at the standby mode.

6.9. Menu 9 (Erase call)

Turn the button for a move to MENU 9 at status of [Menu Mode].

And then, click the button to go forward to the following [ERASE CALL MODE]

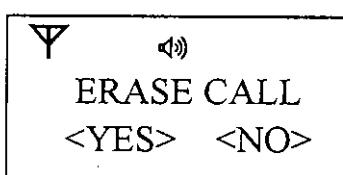

[Erase Call Mode]


Turn the button to select either <YES> or <NO>.

And then, click the button to erase all the unlocked messages when <YES> is selected.

6.10 Menu 10 (Erase mail)

Turn the button for a move to MENU 10 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[ERASE MAIL MODE]**

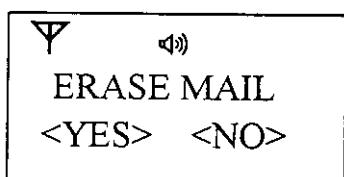


Turn the button to select either **<YES>** or **<NO>**.

And then, click the button to erase all the unlocked mail messages when **<YES>** is selected.

6.11. Menu 11 (Remind Alert)

Turn the button for a move to MENU 11 at status of **[Menu Mode]**.


And then, click the button to go forward to the following **[REMIND ALERT MODE]**

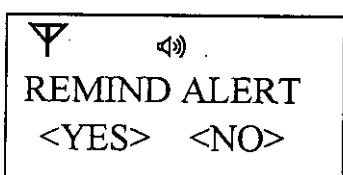

Turn the button to select either **<YES>** or **<NO>**.

Click the button when the **<YES>** is selected, in order to activate the Remind Alert.

***Remind Alert : You can hear the alert tone for 2 seconds every 1 minute when there is unread message and the following screen displayed like "UNREAD [###]" shall be shown and the  icon is shown in the upper while reading the message.*

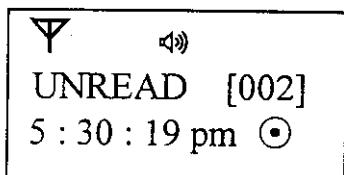


This function shall be activated only with pager power on.

6.12. Menu 12 (Zoom mode)

Turn the button for a move to MENU 12 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[ZOOM MODE]**

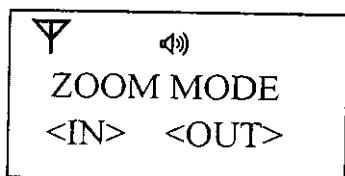

[Zoom Mode]

Turn the button to select either **<IN>** or **<OUT>**.


If user wants 2 lines displayed, click the button when the **<IN>** is selected.

If user wants 4 lines displayed, click the button when the **<OUT>** is selected.

6.13. Menu 13 (LCD Contrast)

Turn the button for a move to MENU 13 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[REMIND ALERT MODE]**

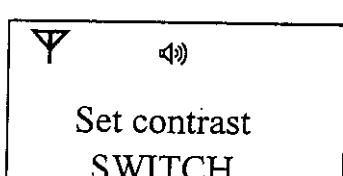

[LCD Contrast Mode]


Turn the button up and down to adjust the level of brightness.

Click the button when user wants to set up the adjusted brightness.

6.14. Menu 14 (Pager off)

Turn the button for a move to MENU 14 at status of **[Menu Mode]**.

And then, click the button to go forward to the following **[PAGER OFF MODE]**

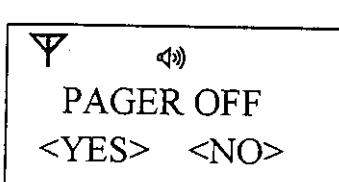

[Pager Off Mode]

Turn the button to select either **<YES>** or **<NO>**.


If user wants to turn power off, click the button when the **<YES>** is selected and the pager shuts off displaying nothing but a blank screen.

If user wants to turn power on, press the button for 2 seconds or longer while the pager displays nothing but a blank screen.

All the messages, regardless of locked or unlocked, will be protected when user turns pager off.

7. Low battery warning

When the battery nears the end of its life, the standby screen is replaced as follows and  icon is displayed in the upper.

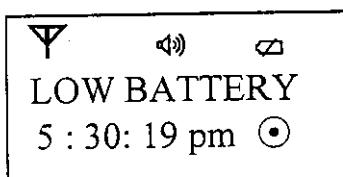

8. Back light

If user wants turn on the backlight, press the Jog dial button for more than 1 second the button at the any status of screen.

9. Replacing battery

When user replaces battery, the full screen and standby mode shall be sequentially displayed and at the time, tone and vibration shall beep for 2.

In case the battery replacing time is long, all messages (locked or unlocked) and mails could be deleted.

(How to change the cap-code by itself)

1. REMOVE battery
2. INSERT battery while pushing the button.
3. LCD will display "PASSWORD".
4. Turn and click the button for entering the PASSWORD. (Password = 8765432)
5. INPUT Personal cap-code
6. INPUT Group cap-code
7. INPUT mail address....
8. ADJUST bade rate...
9. When LCD displays "CHANGE ?" , select "YES"
10. You can see UPDATED!!!