



POWER PONYTAIL™ SOFTBALL

RADIO CONTROL PITCHING MACHINE

Instructions to the User:

In order to maintain compliance with FCC regulations, Sport Fun, Inc. does not recommend changes or modifications to the Power Ponytail™ Softball

DO...

1. Read all instructions prior to use.
2. Operate your Power Ponytail™ Softball machine at a maximum distance of 25 feet. If you get too far away, the signal may get too weak and may not function properly.
3. Operate in dry open area.
4. Turn On/Off switch to *Off* position when not in use.
5. Store in a cool, dry location.

DO NOT...

1. Do not operate near wet surfaces or in the rain. Water can damage the electronic and mechanical parts.
2. Do not play in or near streets.
3. Do not operate near high voltage electrical wires or large steel reinforced concrete buildings. Radio interference is caused by other radio controlled products operating on the same frequency as Power Ponytail™ Softball. Try to avoid these if possible.

SPORT FUN IS FAMILY FRIENDLY. WE ARE COMMITTED TO CUSTOMER SATISFACTION:
NEED HELP? CALL OUR CUSTOMER SERVICE 1-888-FUN-8998

HOURS: MON-FRI 8 AM TO 4PM P.S.T

WEB SITE: WWW.SPORTFUN.COM

THANK YOU FOR YOUR SPORT FUN PURCHASE

SPORT FUN®

MANUFACTURED BY SPORT FUN, INC.,
LOS ANGELES, CA 90039

AUTHORIZED LICENSEE OF RAWLINGS SPORTING GOODS CO.

©1999 SPORT FUN, INC. ALL RIGHTS RESERVED.




POWER PONYTAIL™ SOFTBALL

RADIO CONTROL PITCHING MACHINE

ITEM# 939012


READ ALL INSTRUCTIONS
PRIOR TO USE.

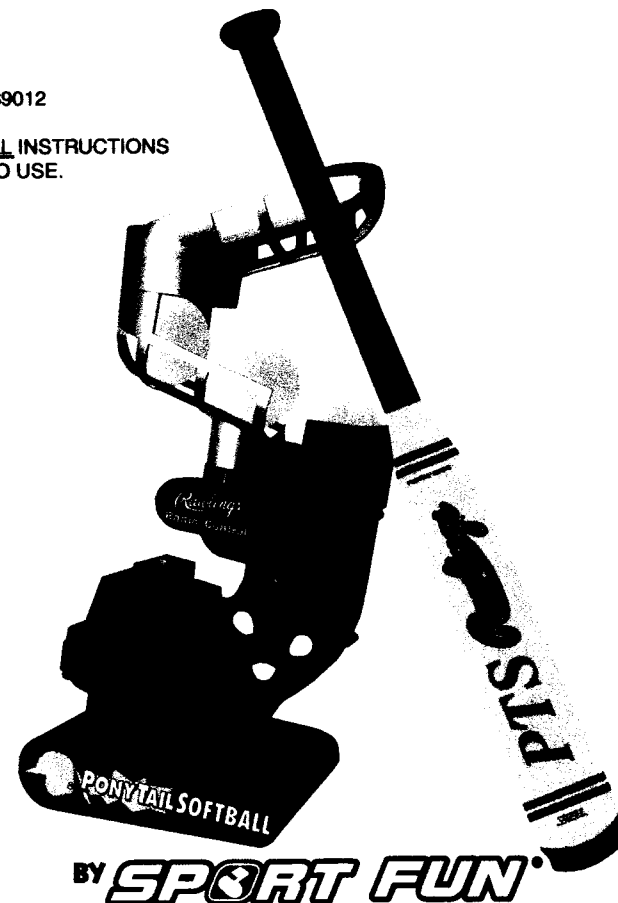

⚠ WARNING

- 1) Keep face and head away from opening of motor unit.
- 2) Do not put fingers or hand into motor unit.
- 3) Be prepared for pitch at all times.
- 4) Use only the balls included with this set.
Do not put other objects into unit.
- 5) Turn off motor at end of play.
- 6) Do not mix old and new batteries.
- 7) Do not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.


• **BATTERY INSTALLATION:** REMOVE COVER AND INSTALL BATTERIES MAKING SURE TO MATCH THE NEGATIVE AND POSITIVE TERMINALS. ALKALINE BATTERIES REQUIRED.

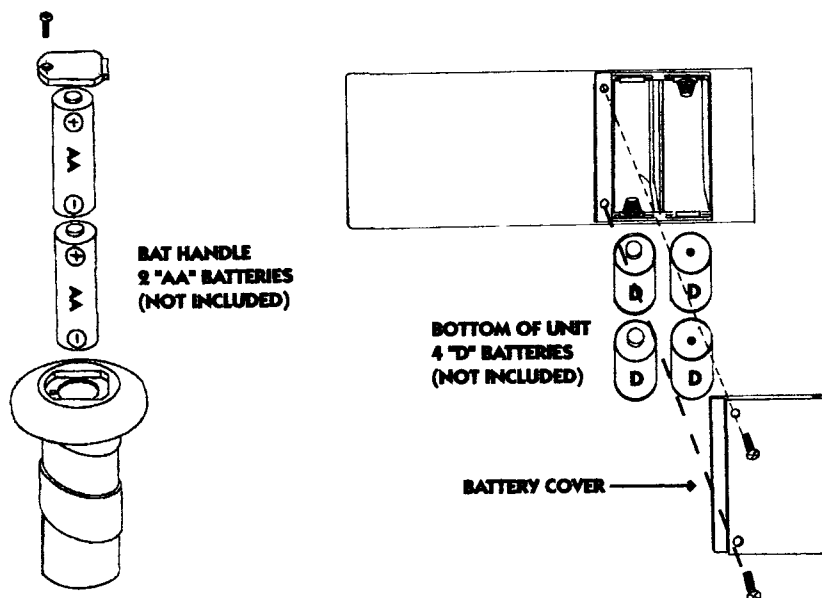

• **SAFETY PRECAUTIONS:** TO ENSURE THAT YOUR CHILD'S PLAY WITH THIS PRODUCT IS BOTH SAFE AND FUN, ADULTS SHOULD REVIEW THE OPERATING INSTRUCTIONS AND SAFETY RULES WITH THEIR CHILD. THIS PRODUCT IS RECOMMENDED FOR CHILDREN EIGHT YEARS OF AGE AND UP.

• **TO PLAY:**

1. INSTALL ALL BATTERIES. SWITCH UNIT ON (FIG. 1)
2. REFER TO "FREQUENCY FINE TUNING" (ON OPPOSITE PAGE).
3. ATTACH TURNABLE FEEDER INTO POSITION. (FIG. 2)
4. SET THE UNIT THE DISTANCE YOU WANT TO PITCH (UP TO 25 FEET FOR MAXIMUM PERFORMANCE).
5. ADJUST THE ANGLE AND DISTANCE OF PITCHED BALL BY ROTATING THE BALL CHANNEL UP AND DOWN (FIG. 3). USE THIS ADJUSTMENT FEATURE TO ADAPT FOR INDIVIDUAL "STRIKE ZONE".
6. UNIT "POWERS ON" WHEN BALLS ARE LOADED INTO TURNABLE FEEDER AND WILL "POWER DOWN" WHEN TURNABLE FEEDER IS EMPTY. NOTE: TURN UNIT OFF WHEN NOT IN USE.
7. TAKE YOUR NORMAL BATTING POSITION. WHEN READY, SIMPLY PUSH THE RADIO CONTROL BUTTON LOCATED ON THE BAT (FIG. 4) AND BE PREPARED TO SWING!!! FOR BEST PERFORMANCE, WAIT 10 SECONDS BETWEEN PITCHES.

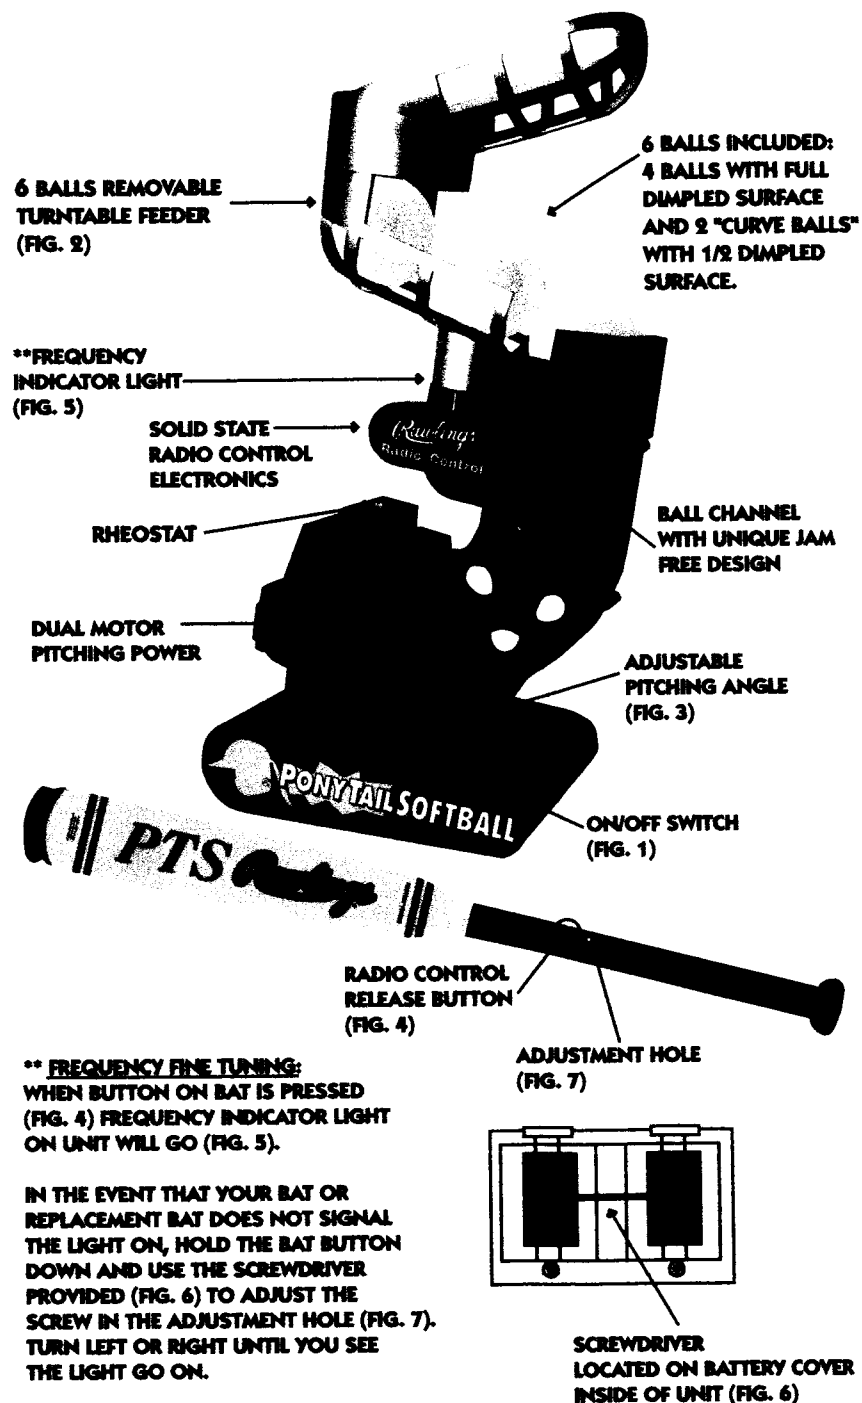

**** FREQUENCY FINE TUNING:**
WHEN BUTTON ON BAT IS PRESSED
(FIG. 4) FREQUENCY INDICATOR LIGHT
ON UNIT WILL GO (FIG. 5).

IN THE EVENT THAT YOUR BAT OR
REPLACEMENT BAT DOES NOT SIGNAL
THE LIGHT ON, HOLD THE BAT BUTTON
DOWN AND USE THE SCREWDRIVER
PROVIDED (FIG. 6) TO ADJUST THE
SCREW IN THE ADJUSTMENT HOLE (FIG. 7).
TURN LEFT OR RIGHT UNTIL YOU SEE
THE LIGHT GO ON.