


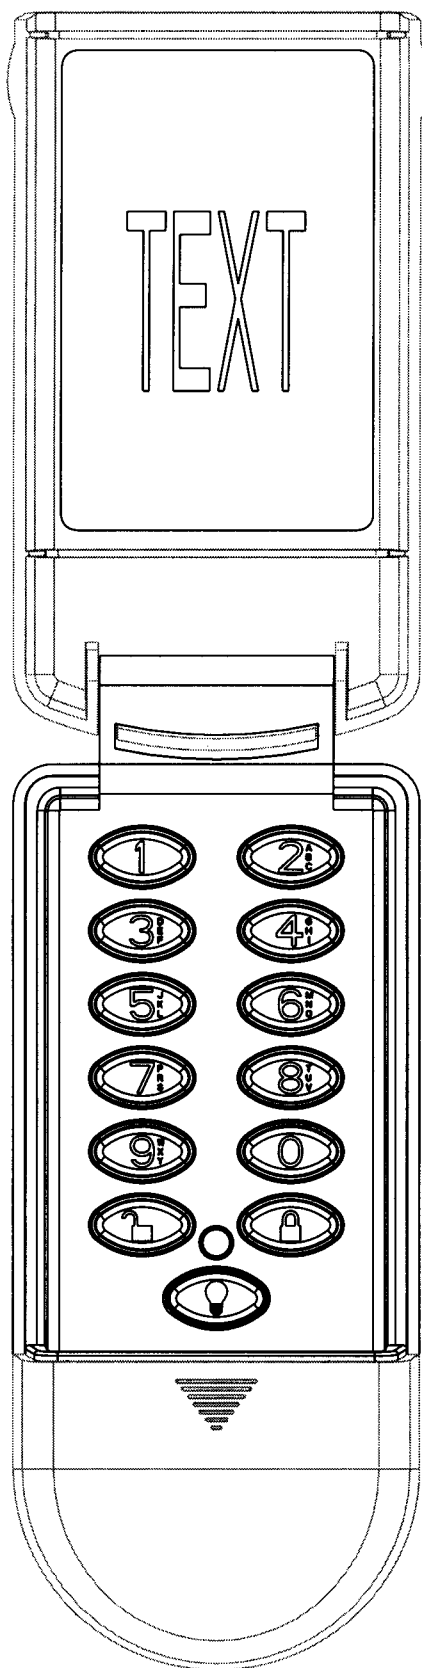

Kwikset Model Number 898 Remote Keypad

Kwikset Corporation, 2000 Programming Remote Keypads (Model number 898)

To light up the keypad, push any key before proceeding...

Changing a PIN:

1. Enter the PIN you wish to change, the Action LED illuminates green
2. Simultaneously push and hold the "1" and "5" buttons, the Action LED will flash red once, releasing "1" and "5" buttons, the Action LED will flash green once
3. Once the LED starts to flash green, release the "1" and "5" buttons and enter the new PIN (up to 6 digits long)
4. Push LOCK to store new PIN, the Actions LED will extinguish

Enabling/Disabling the Auxiliary PIN:

1. Enter your Master PIN, the Action LED illuminates green
- 2a. To enable the Auxiliary PIN, simultaneously push the UNLOCK and "2" buttons, the Action LED will flash green two times
- 2b. To disable the Auxiliary PIN, simultaneously push the LOCK and "2" buttons, the Action LED will flash red two times

Resetting PINs to Factory Presets:

1. Simultaneously push and hold the LOCK and "5" buttons, the Action LED will flash red
2. After 5 seconds, the keypad will shut down and the Master and Auxiliary PINs will be reset to 1-2-3 and 4-5-6 respectively. The Auxiliary PIN will be disabled.
3. All AccessOne Receivers need to be reprogrammed to recognize the Keypad

Low Battery Indicator:

Under all conditions, the Action LED will flash red once for each keystroke. When batteries are low, the Action LED will flash red-green with each keystroke. Replace batteries immediately to prevent a lock-out situation.

Toll Free Installation Information 1-800-327-LOCK USA & Canada

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: NUL-898

Canada: 7811111