



 
MJO#: SN8F-008
JUNE 17, 1998
FCC ID: NUQPCT001G

OPERATION MANUAL

*** SEE SEPARATE ENCLOSURE FOR THE OPERATION MANUAL.**

The enclosed manual is for the EUT name. As you will notice on page 1 of this manual is the FCC WARNING about radio and television interference as per the requirement set forth in Part 15 of the FCC Rules.

MIKADO PROGRAMMABLE GARAGE DOOR REMOTE

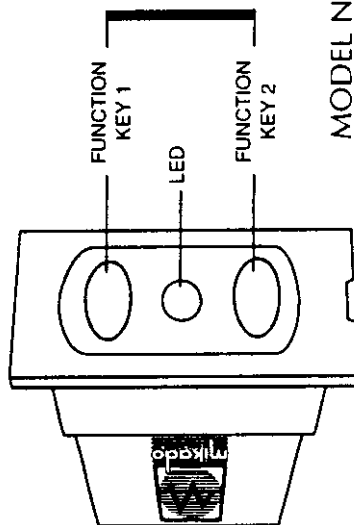

WORKS WITH ALL MAJOR BRANDS OF GARAGE
DOOR & SECURITY GATE OPERATORS

FUNCTION
KEY 3

NOT COMPATIBLE WITH ROLLING CODE
SYSTEMS, SUCH AS GENIE® INTELLICODE.

MODEL NO: MT-PCAT200G


FREQUENCY	SOURCE TRANSMITTER
390Mhz	GENIE, SEARS, LIFT-MASTER, WAYNE DALTON & MASTER MECHANIC, CHAMBERLAIN
310Mhz	STANLEY 310, LINEAR, MOORE-O-MATIC
300Mhz	STANLEY 300, MULTI-CODE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.


FUNCTION	INSTRUCTION	LED INDICATOR	LED PULSE
Empty Code	Ready to program new code. If indicator displays rapid pulse see Resetting Function or Changing Secret Code Function .	- Single short pulse - LED off	
Select Frequency	Choose either 390Mhz, 310Mhz or 300Mhz (frequency must match source transmitter) See "Remote Assembly Diagram".		
Duplicating Secret Code	Select source of transmitter (i.e., Genie car garage opener). Hold both transmitters together. Press and hold both the source transmitter and the Mikado Transmitter function keys moving about until LED indicator begins to pulse rapidly (rapid pulse indicates location of source transmission) until there are 3 solid pulses on the Mikado Transmitter .	- Locate transmitter pulse - Rapid pulse 3 solid pulses	
Changing Secret Code	On the Mikado Transmitter , press the key that you wish to change for 10 seconds (until LED is off). While pressing the key, repeat the step above Duplicating Secret Code .	- Rapid pulse (10 sec) until LED off - Rapid pulse 3 solid pulses	
Resetting 1st or 2nd function keys with programmed secret code	Press the function key that you wish to reset, (either the 1st or 2nd), for 10 seconds (until LED is off). Do not release that key! While holding that key, press the other key 4-7 times until LED pulses 5 times and then turns off. Result: Empty Code.	- Rapid pulse (10 sec) until LED off 5 solid pulses - Reset complete	
Resetting 3rd function key with a programmed secret code	Press the 3rd function key (hold both keys) for 10 seconds (until LED is off). Hold either key while pressing the other key 4-7 times until LED begins pulsing, then hold both keys until LED is off. Result: Empty Code.	- Rapid pulse (10 sec) until LED off 5 solid pulses - Reset complete	

NOTE: = Short Pulse = Solid Pulse = No Pulse (off)

REMOTE ASSEMBLY DIAGRAM

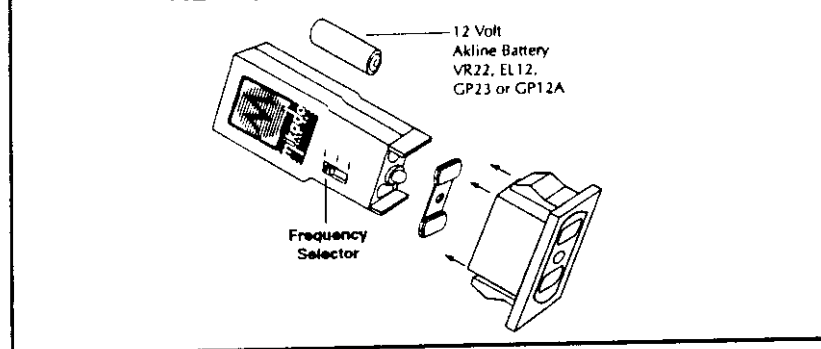

FACE PLATE REMOVAL DIAGRAM

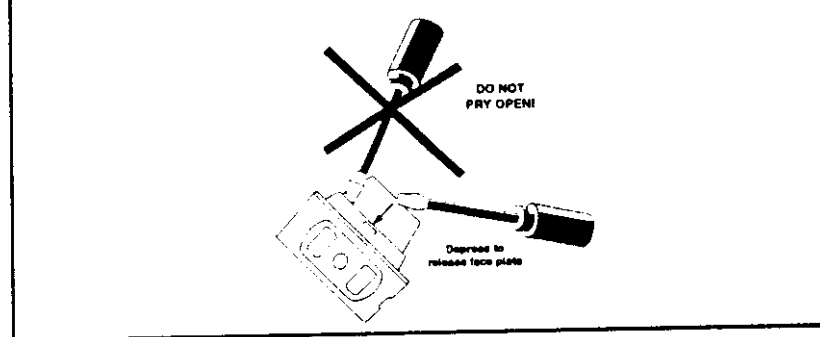

WARRANTY

&
OWNERS MANUAL



LIMITED WARRANTY

This product is warranted by Mikado Technology against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase. Except as provided herein, Mikado makes no express warranties. Any implied warranties, including those of merchantability and fitness for a particular purpose, are limited in duration to the duration of the written limited warranties contained herein. Exception as provided herein; Mikado shall have no liability or responsibility to the customer or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use or performance of the product or arising out of any breach of this warranty, including, but not limited to, any damages resulting from inconvenience, loss of time, data, property, revenue, or profit or any indirect, special, incidental or consequential damages.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.




In the event of a product defect during the warranty period, take the product and the sales receipt as proof of purchase date the store where purchased. The store will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of nature, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, or excess voltage or current; (b) repairs other than those from an authorized service facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) costs of removal, installation, set-up or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Mikado Technology 1-888-9-MIKADO

Mikado Technology
MJO#: SN8F-008
FCC ID: NUQPCT001G

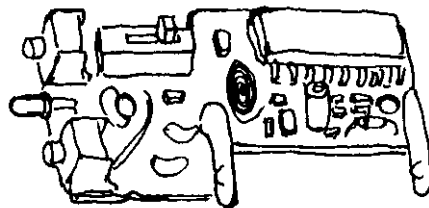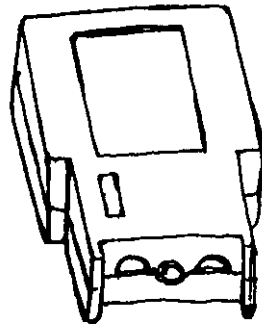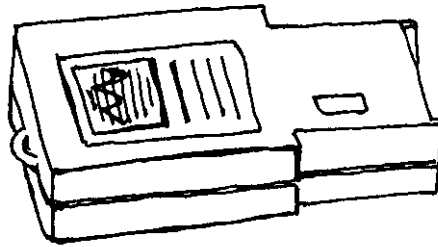

Mikado Technology
MJO#: SN8F-008
FCC ID: NUQPCT001G