



Click on this icon for an Acrobat Reader  
printable/viewable version of this chapter.



## CPE INSTALLATION MANUAL

Chapter 5 revision 2.1 25-Sep-01

Software version S2.3.0

TABLE OF  
CONTENTS

INTRODUCTION

INSTALLATION  
PLANNING

INSTALLATION  
PROCEDURES

PARTS LIST

TROUBLE-  
SHOOTING

### TOPICS:

[Panel LEDs](#)

[Faults detected by network manager](#)

### FAULTS DETECTED BY INTERNAL SELF TESTING:

THIS SECTION IS UNDER DEVELOPMENT

### FAULTS DETECTED BY NETWORK MANAGER:

The network manager can remotely detect and diagnose a variety of faults and conditions. This may lead directly to identification of a component to be replaced, or may require on-site troubleshooting while in contact with the network manager.