

Exhibit E

User's Manual

ALOHA HOUSEWARE CO., LTD.

FCC ID.:NV5UC7094T


Transmitter of Remote Control

INSTRUCTIONS FOR OPERATION

Page : 2-1

SETTING THE OPERATING CONTROLS

1. This unit operates on a 9 volts battery (not included). To prevent possible damage if the battery should leak, be sure to remove the battery when the unit is not use.
2. Store the controller away from excess heat or humidity.
3. This remote control unit is equipped with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.
4. Operation buttons on the panel of transmitter.
HI key - For fan High speed.
MED key - For fan Medium speed.
LO key - For fan Low speed.
OFF key - For fan speed Off.
LIGHT key - For light brightness and ON/OFF control.
REVERSE key - For fan speed Reverse.
5. Start the fan :
Press the selected speed button to run the fan at the desired.
6. Turn off the fan :
Press the OFF button.
7. Light control :
Turn the light on or off by only touching the LIGHT button.
Keep pressing the button in excess of 0.7 second it becomes a dimmer.
the light varies cyclically in 0.8 second.
One of the important feature of this control is AUTO-RESUME. After power on, it allows the light return to where it was off.

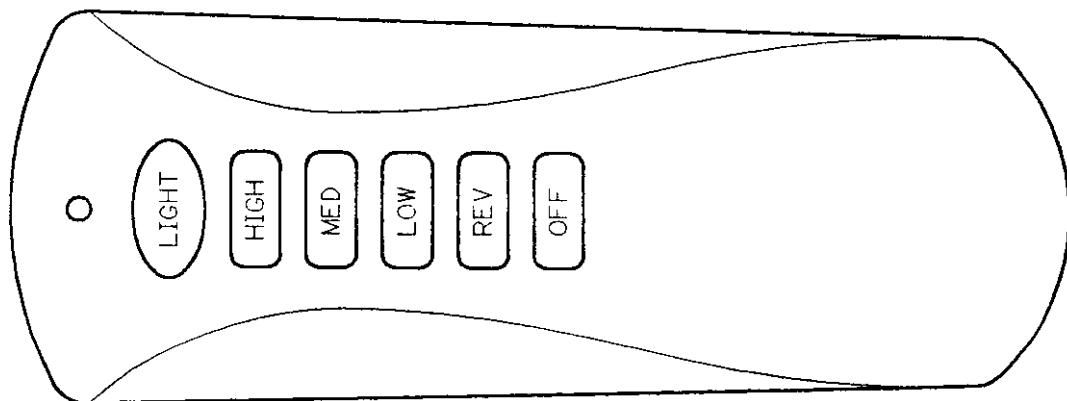

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . There are five buttons (HI, MED, LO, OFF, REVERSE) to control the fan speed and off. The Light Dimmer button will control the light brightness dimmer and ON/OFF. The red indicator on the transmitter will light when the button is pressed.

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

A. Setting the code on your new transmitter.

1. Remove battery cover.
Press firmly below arrow and slide battery cover off.
2. Slide code switches to your choice of UP and DOWN position.
Factory setting is all UP. Do not use this setting.
Use ball point pen or small screwdriver
Slide firmly up or down.

B. Setting the code on your new Receiver unit.

1. Slide code switches to the same positions as set on your transmitter.
They must be set to same positions to work.
2. Replace battery cover on transmitter.
3. Make sure the code switches are on the right positions.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.