

## USER MANUAL FOR MODEL 3981 (FCC ID : NVU3981)

 


You control the fun with this radio controlled rat. This nasty rodent will scare your friends and family with its fast action and lighting eyes.

**Battery Installation:** Remove the back cover of the controller handle. Insert a 9 volt battery (not included) into the controller handle. Insert 3 AA size 1.5V batteries (not included) in the proper (+) (-) positions as indicated. Turn the power switch ON and set the rat on a smooth flat floor. Press the buttons on the controller to activate the rat to move forward or spin and turn.



### SYMBOLS




Keep this packaging as it contains important information.

Item No. 3981  
**WESTMINSTER**

2001 Westminster Inc. Atlanta, GA U.S.A.  
MADE IN CHINA



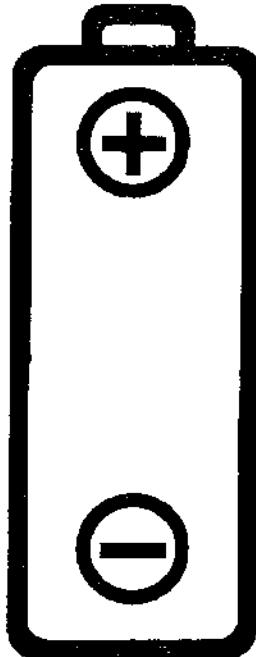

## USER MANUAL FOR MODEL 3981 (FCC ID : NVU3981)

13-JUL-2001 09:48

96%

P.02

### Important Battery Information:

- ▶ Insert batteries with the correct (+) (-) polarity.
- ▶ Do not mix different types of batteries or new and used batteries.
- ▶ Non-Rechargeable batteries are NOT to be recharged.
- ▶ Use only batteries of the same or equivalent types as recommended.
- ▶ Exhausted batteries are to be removed from the toy.
- ▶ The supply terminals are not to be short-circuited.
- ▶ Do not use rechargeable batteries.

# USER MANUAL FOR MODEL 3981 (FCC ID : NVU3981)

## RADIO CONTROL RAT USER MANUAL

**WARNING : DO NOT MIX OLD AND NEW BATTERIES.** Do not mix standard, Alkaline or rechargeable batteries. DO NOT use rechargeable batteries.

### 1) Batteries:

**Transmitter unit :** Use 1 9-Volt Alkaline battery. Slide the battery cover back and install battery. Replace battery cover.

**Receiver Unit:** Use 3 "AA" Alkaline batteries. Remove the small screw using a Philips head screwdriver. Slide the battery cover back and insert the batteries in the indicated direction. Replace cover and reinsert screw.

### 2) Operation:

Switch ON/OFF button to ON position.

Pressing the activation buttons on the transmitter will cause the red lights in the eyes of the Rat to illuminate and the Rat to operate.

Pressing the curved arrow button on the left side of the controller causes the Rat to spin.

Pressing the straight arrow button on the right side of the controller causes the Rat to move in a straight direction.

**Warning :** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

