


OWNER'S MANUAL

Galanz

Microwave Oven

WP1000L23-3/ WP1000SL23-3

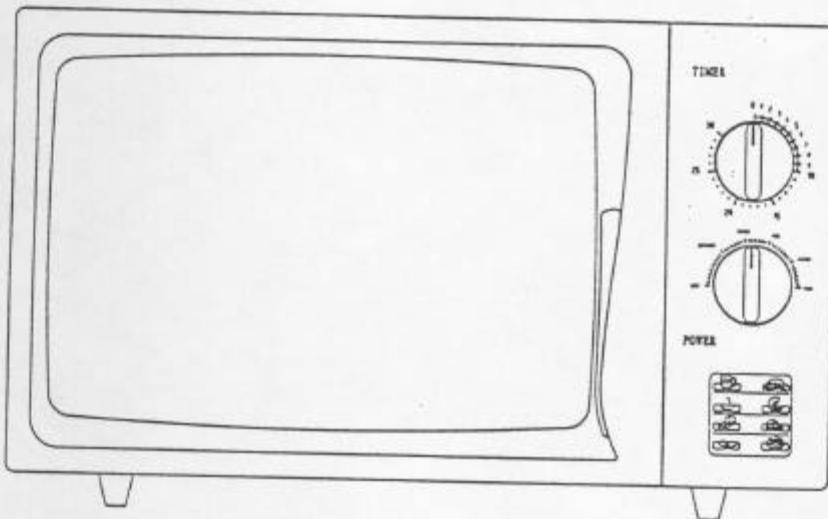

1. READ these instructions carefully before installing and operating the oven. Keep them for future reference.
2. Record in the space below the SERIAL NO. found on the nameplate on your oven and retain this information for future reference.

SERIAL NO.:

3. Complete and return the attached warranty card.

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	1
IMPORTANT SAFETY INSTRUCTIONS.....	1
MICROWAVE TIPS TO AVOID OVEN DAMAGE.....	2
INSTALLATION.....	3
CONTROL PANEL	5
OPERATION.....	5
SPECIFICATIONS.....	6
TROUBLE SHOOTING	6
FEATURE DIAGRAM.....	6
CARE AND MAINTENANCE.....	7

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- B. Do not place any object between oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- C. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the (1) Door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- D. The oven should not be adjusted or repaired by any one except properly qualified service personnel.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electrical shock, fire, injury to persons or exposure to excessive microwave energy:

- 1. **READ ALL THE INSTRUCTIONS BEFORE USING THE APPLIANCE.**
- 2. Read and follow the specific "Precautions to avoid possible exposure to excessive microwave energy" found above.
- 3. This appliance must be grounded and properly polarized. Connect only to a properly grounded and polarized outlet. See "Grounding Instructions" in "Installation" section.
- 4. Install or locate this appliance only in accordance with the installation instructions described in this manual.
- 5. Some products such as whole eggs and sealed containers, such as closed glass jars, may explode and should not be heated in this oven.
- 6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or defrost food. It is not designed for industrial, laboratory, or commercial use. It is intended for home use only. Do not use for drying clothes, linens, newspaper, or other non-food type items.
- 7. Make sure that all persons using this appliance, especially children, are closely supervised and properly instructed on how to use this appliance.
- 8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- 9. This appliance should be serviced only by

qualified service personnel. Do not attempt to service or repair this appliance.

- 10. Do not cover or block any openings on the appliance.
- 11. Do not store this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- 12. Do not immerse cord or plug in water.
- 13. Keep cord away from heated surfaces.
- 14. Do not let cord hang over edge of table or counter.
- 15. When cleaning surfaces of door and oven that come into contact with each other, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
- 16. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food, especially starchy items such as potatoes and fatty items such as bacon. Carefully attend appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
 - c. If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - e. Do not put metal inside the oven, except as specifically described in the manual.

(Continued on page 2)

IMPORTANT SAFETY INSTRUCTIONS

(Continued from page 1)

17. Use only microwave safe cooking utensils and accessories. Use aluminum foil only as directed in this book.
18. Do not use outdoors.
19. Do not pop popcorn in anything other than a microwave oven popper unless it is a specially treated bag labeled: "Microwave popcorn intended for use in the microwave". Never use brown paper bags, glass or plastic bowls, or other unsuitable containers to pop popcorn. To avoid scorching and burning, remove popcorn after popping has slowed to two or three seconds between pops. Prolonged popping can cause smoking from overheated oil, breakage of dishes, damage to oven and eventually a fire.
20. Do not remove the outer case or the turntable gear inside the oven cavity.
21. Briskly stir liquids or pureed baby food before heating and re-heating to incorporate air. This prevents abrupt boil-overs that sometimes occur after air-depleted liquids are heated, especially in tall, narrow containers.
22. Do not fry or deep fat fry in this microwave oven. Hot oil can damage oven parts and utensils and even result in skin burns.
23. Plastic wrap: Use only those types designed for microwave oven use and avoid forming an airtight seal. Fold back a small corner or cut a small slit to allow steam to escape. Use pot holders when handling heated container covered with wrap-covers.
24. Stay near the appliance while it is in use and check cooking progress frequently. Leaving the appliance unattended may result in overcooked food and possibly a fire in your oven.
25. Do not mount any portion of oven over a sink near water or heating appliances, such as a gas / electric range or dishwasher with a hot, damp surface.
26. Do not store flammable materials next to, on top of, or in the oven as these could be fire hazards.
27. Do not operate the microwave when empty.
28. Small quantities of food or foods with low moisture content can dry out, burn or catch on fire when overheated. If a fire occurs, turn oven off and leave oven door closed. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
29. Heat only 1 frozen dinner or entrée in the oven at a time. If dinner or entrée is heated in a foil tray, leave at least 2.5cm (1") of space between foil tray and oven walls.
30. Drying meats, fruits, vegetables and herbs is not recommended.
31. Do not use your oven for home canning or the heating of any closed jar. Pressure will build up and the jar may explode. In addition, the microwave oven can not maintain the food at the proper canning temperature. Improperly canned food may spoil and be dangerous to consume.

SAVE THESE INSTRUCTIONS

MICROWAVE TIPS TO AVOID OVEN DAMAGE

Do not operate microwave oven when unit is empty.

Do not operate the oven without the glass turntable tray in place.

Never use sharp-edged utensils in or near the oven.

DO NOT USE WHITE CERAMIC BROWNING DISHES IN THIS OVEN. High heat from underside of dishes can permanently scorch oven turntable.

USE ALUMINUM FOIL only as directed in this book. Small strips of foil on meats are helpful in shielding microwaves to prevent overcooked areas. Low-sided aluminum foil pans, such as TV dinner trays, may be used.

Use care to keep aluminum foil at least 1 inch

away from oven walls, door or top. Metal placed closer than 1-inch from interior surfaces can cause arcing (electrical sparks). If this occurs, stop microwave and remove foil.

Dyes used in microwave popcorn bags can discolor oven's turntable. Before microwaving, place bags on microwave-safe surface.

PREVENT BURSTING OR EXPLOSIONS FROM FOOD AND CONTAINERS

Pierce microwavable plastic bags and pouches for frozen foods before heating. Pierce foods with heavy skins such as potatoes, whole squash, apples and chestnuts before cooking. Piercing allows steam to escape and eliminates pressure build-up.

(Continued on page 3)

MICROWAVE TIPS TO AVOID OVEN DAMAGE

(Continued from page 2)

CONTAINERS WITH RESTRICTED OPENINGS
such as narrow-necked soda bottles or salad dressing bottles should never be placed in the microwave for either defrosting or heating. These can explode from heat build-up even if the top has been removed.

RAW EGGS IN THE SHELL OR HARD COOKED EGGS should never be microwaved. Eggs heat so quickly that pressure build-up might not be avoided, and an explosion could occur.

Do not use recycled paper products when microwaving. They may contain small metal

fragments which could ignite.

METAL CONTAINERS or dishes with metallic trim should not be used. Arcing (sparking) may occur.

DO NOT use CONVENTIONAL THERMOMETERS in the microwave oven. They may cause arcing.

Do not use paper towels or cloths which contain a synthetic fiber woven into them, such as nylon. The synthetic fiber may cause the towels or cloth to ignite.

INSTALLATION

INSTALLATION

This oven was carefully packed and shipped in good condition. If you find shipping damage, such as a misaligned door, damaged door or door seal, dents inside the oven cavity or on the door, do not operate and return to place of purchase for replacement or refund.

Remove all packing materials both outside and inside the oven before using it.

This microwave oven is designed for household use only. It is not intended for commercial or industrial use.

This model is designed as a countertop unit only and not intended for built-in applications.

The oven can be set on any sturdy counter, shelf, table, room divider or rolling cart.

Keep unit a distance of at least 4 inches away from both side walls and 5 inches from the rear wall. Also, make sure there are at least 8 inches from the top of the unit to any objects overhead.

The oven requires free movement of air for proper operation. DO NOT BLOCK AIR VENTS located on the back and underneath the oven. Also, do not remove the rubber footings from the bottom of the oven.

DO NOT place near hot damp surface such as a gas or electric range or dishwasher.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a grounding wire

WARNING

To provide continuous protection against electrical shock, connect to properly grounded outlets only.

Improper use of the grounding plug can result in a risk of electrical shock.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OFF THE 3RD GROUNDING PRONG.

and plug. The plug must be plugged into a 120 volt, 15 or 20 ampere outlet that is properly installed and grounded in accordance with applicable electrical codes. Using a higher voltage is dangerous and may result in a fire or other accident causing oven damage. Galanz is not responsible for damage resulting from the use of the microwave with other than specified voltage.

For proper operation, no other appliance should be on the same circuit as the microwave oven.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

EXTENSION CORDS

If it is necessary to use an EXTENSION CORD, use only an extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

(Continued on page 4)

INSTALLATION

(Continued from page 3)

DO NOT USE EXTENSION CORDS FOR BUILT-IN APPLICATIONS. CONSULT A QUALIFIED ELECTRICIAN TO INSTALL THE APPROPRIATE RECEPTACLE.

GLASS TRAY

- A. DO NOT operate the oven without Roller Ring and Glass Tray in place
- B. Only use Glass Tray specifically designed for this oven. Do not substitute any other glass tray.
- C. If Glass Tray is hot, allow to cool before cleaning or placing in water.
- D. DO NOT cook directly on Glass Tray. Always place food in a microwave-safe dish, or on a rack set in a microwave-safe dish.
- E. If food or utensil on Glass Tray touches oven walls, causing the tray to stop moving, the tray will automatically rotate in opposite direction.

ROLLER RING

- A. Roller Ring and oven floor should be cleaned frequently to prevent excessive noise.

- B. Roller Ring must always be used of cooking along with Glass Tray.
- C. Always place Roller Ring and Glass Tray in their proper positions.


INTERFERENCE WARNING

Microwave ovens generate radio frequency energy during operation and, if not installed properly, may cause interference to radio and television reception. You can determine if this unit is causing interference by turning it on and off while the interference is occurring. If interference occurs it may be corrected by one or more of the following measures:

- a. Relocate the TV, radio, or microwave oven.
- b. Plug the oven into a different outlet so that it and the receiver are on different circuits.

If the interference persists, you may want to consult an experienced radio/television technician for additional suggestions.

CONTROL PANEL

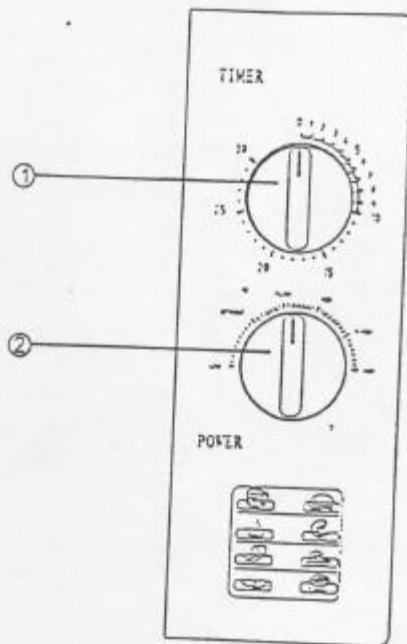

(1) Timer 0~30 Minutes

(2) Power Select Control


High:	100%	Power Output
M. High:	85%	Power Output
Med:	66%	Power Output
M. Low:	48%	Power Output
Defrost:	40%	Power Output
Low:	17%	Power Output

OPERATION

To set a cooking program:

Place food in oven.

CAUTION: Do not operate when microwave oven is empty or without glass turntable tray in place.

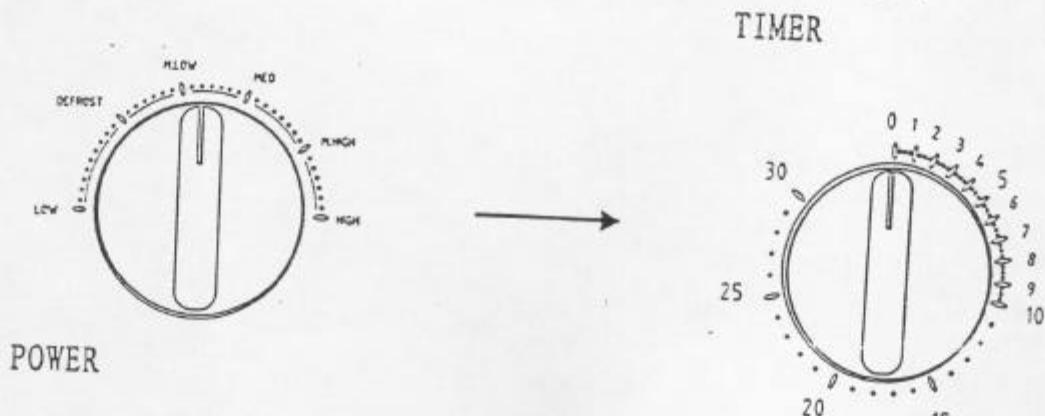

* Turn Power Select Control to
the required power level.

* Select correct cooking time
using timer.

NOTE: As soon as Timer is turned, oven will start cooking food.

When selecting time for less than 2 minutes, turn timer past 2 minutes and then return to correct time.

CAUTION: ALWAYS RETURN TIMER BACK TO ZERO position if food is removed from oven before set cooking time is complete or when oven is not in use.

TO STOP OVEN, pull the door handle and open door. Oven will stop automatically. If cooking is complete, turn timer back to zero position before closing the door.

SPECIFICATIONS

Power Consumption:	120v 60Hz 1500w(Microwave)
Output:	1000W
Operating Frequency:	2450MHz
Outside Dimensions:	12"(H)x20"(W)x16 "(D) or 305mm(H)508mm(W)x405mm(D)
Oven Cavity Dimensions:	8 1/2"(H)x13 3/4"(W)x13"(D) or 215mm(H)x350mm(W)x330mm(D)
Oven Capacity:	0.8CU.FT
Cooking Uniformity:	Turntable system 12 3/8"(314) diameter
Uncrated Weight Approx.	34.41bs.(15.6kg)


TROUBLE SHOOTING

If the unit fails to operate:

- a) Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- b) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- c) Check to see whether the control panel is programmed correctly and that the timer is set.
- d) Check to make sure that the door is securely closed, engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

FEATURE DIAGRAM

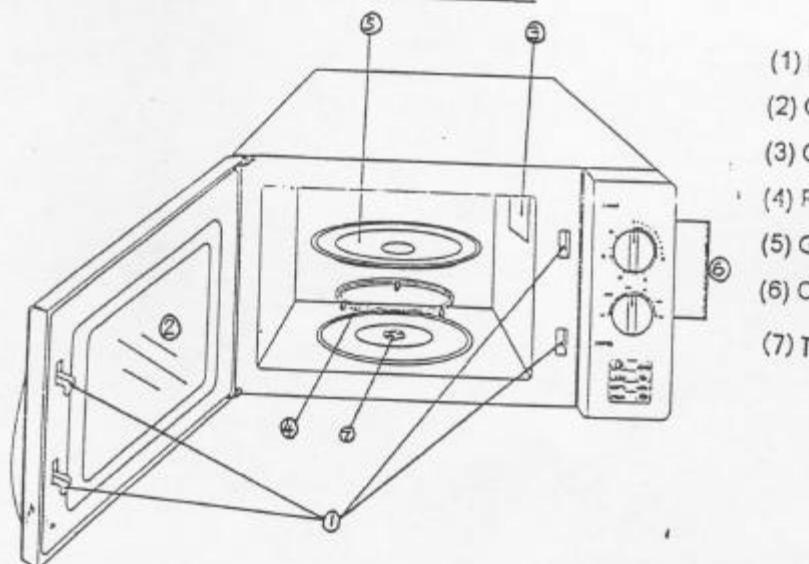

- (1) Door Safety Lock System
- (2) Oven Window
- (3) Oven Air Vent
- (4) Roller Ring
- (5) Glass Tray
- (6) Control Panel
- (7) Turntable Gear

CARE AND MAINTENANCE

CLEANING

IMPORTANT: ALWAYS UNPLUG OVEN AND BE SURE OVEN IS COOL BEFORE CLEANING.

To maintain the appearance of your oven, never use abrasive cleaning agents (such as cleansing powders, scouring pads or steel wool pads). Also, never use commercial oven cleaners on any part of your microwave oven.

Some liquid cleaners can remove the shiny surface on plastic or vinyl. Therefore, never spray or pour liquid cleaners directly onto a surface. Spray or pour cleaner onto a cloth or sponge and then clean, if the microwave is very dirty, otherwise, use a damp cloth.

OUTSIDE SURFACES

COVER - Clean the outside of the oven with a glass-cleaning agent, a liquid cleaner or mild detergent and water. Use a damp cloth or sponge. Rinse and dry.

PLASTIC - Use a liquid or glass-cleaning agent and a sponge or cloth. To prevent scratching the plastic surface, do not use paper toweling.

DOOR and CONTROL PANEL - Clean with a damp cloth or sponge. Use dishwashing detergent and water or a liquid glass-cleaning agent to remove soil. Rinse with a damp cloth and dry with a soft cloth to prevent scratching the plastic outer door panel. Some paper towels can scratch the plastic door panel, therefore, use a soft cloth to dry the door. When cleaning the control panel, keep oven door open to prevent oven from accidentally turning on.

POWER CORD - Be sure oven is unplugged. Wipe cord with a damp sudsy cloth, rinse and dry.

thoroughly before plugging cord back into outlet.

INTERIOR SURFACES

Be sure oven interior is cool before cleaning. Never use commercial oven cleaner on any part of your microwave oven.

OVEN WALLS - Use a mild liquid dishwashing detergent and water, rinse and dry. To loosen dried-on soil: Place a cup of water in oven. Microwave on HIGH for 3 minutes. Leave hot water in the oven and allow the steam to soften the soil. Then, wash with hot sudsy water, rinse and dry.

To keep oven clean and odor free, open oven door for a few minutes after cooking. Allow moisture to evaporate or wipe interior with dry clothes. Occasionally, wipe walls with a solution of baking soda and water to keep interior fresh.

OVEN FLOOR AND TURNTABLE - Wash with hot sudsy water, rinse and dry. Do not use excessive amounts of water when cleaning the oven, especially around turntable. Do not allow water or cleaning agents to seep into turntable gears located underneath.

If a stain should still remain, remove stain with a paste of two parts baking soda and three parts water. Apply paste to stain, let stand one or two hours, then wipe with a clean damp cloth, rinse and dry.

REPLACING OVEN LIGHT BULB:

DO not attempt to replace the bulb.

This bulb is to be replaced by qualified service personnel only.