



**E9000
Club User's Guide**

Rev 1.0
1998

Table of Contents

Table of Contents.....	2
Features.....	2
Precautions.....	3
Operation	4
Log in Operation.....	4
TV Operation	4
CD Operation.....	4
Cassette Operation	5
Other functions	5

Features

- Personalized TV and Near Video-On-Demand service
- Multiple audio sources, including TV, CD, or Cassette
- Wireless transmitter for use with EZone headphones
- Automatic logon and channel switching capabilities
- Automatic logoff and reset capabilities
- 3D spatial sound processor, specifically engineered for the E9000

Precautions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to contact EZone Networks Inc.

This Production complies with DHHS Rules 21 CFR Sub-Chapter J applicable at date of manufacture.



CAUTION

This device contains a compact disk player that includes a Class I laser. The compact disk player should not be adjusted or repaired by anyone except properly qualified service personnel. Use of the system, other than in the manner specified here, may result in hazardous radiation exposure.

Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment, void the warranty, and violate FCC approval.

Your E9000 will have been installed and set up by a qualified E9000 installer. Any changes to the setup, including adding or removing an E9000 unit, changing the location of an E9000 unit, or changing the wiring to or from an E9000 unit should be done by qualified service personnel.

Operation

Your E9000 unit consists of a TV, and CD player, and a Cassette player. The E9000 is only accessible through the use of EZone headphone products containing an E-Link sensor.

Log in Operation

The E9000 unit will allow you access if you own an EZone headphone. Follow these steps:

1. Ensure your EZone headphones are turned on.
2. Press **START** on the E9000 until the “Scanning for headphones” screen appears.
3. Align the E-link sensor on your headphone with the E-link sensor on the E9000, while holding the headphones within three inches of the E9000.
4. The E9000 unit will indicate when you have been successfully logged on.

If the above procedure does not work:

1. Ensure that you have fresh batteries in your EZone headphones.
2. Ensure that the E-Link sensors are properly aligned (the “E-Link” lettering on the E9000 and your headphones should be facing each other)

If you are still having problems, press **INFO** on the E9000.

TV Operation

The TV is controlled by five keys on the front panel of the E9000. Control of these keys may be disabled upon logon until certain video sequences have finished playing.

1. **TV On/Off** : Allows you to enable or disable the TV display. Note, this will turn off video only – screen text will still appear.
2. **+** : Changes channel; hold in this key to scroll through channels quickly.
3. **-** : Changes channel; hold in this key to scroll through channels quickly.
4. **TV**: Switches the audio source to TV audio. Use this key to return to TV audio if you are listening to a CD or Cassette.
5. **MUTE**: Enables or disables audio. Press to switch states.

CD Operation

The CD operates like an in-dash car CD player. To insert a disk, align the disk with the slot on the E9000 and gently insert until the mechanism starts to load. Do not attempt to push or jam a CD into the slot.

When a CD is inserted, the audio source will automatically be switched to the CD.

The CD is controlled by five keys on the front panel.

1. **CD** : Switches the audio source to the CD. Use this key to return to the CD, if you were listening to TV or Cassette audio.
2. **FF**: Tap this key to move to the next track. Hold down to play CD in fast mode.
3. **RW**: Tap this key to move to previous track. Hold down to play CD in fast reverse.
4. **EJECT**: Ejects CD.
5. **MUTE**: Enables or disables audio. Press to switch states.

Note: CD-ROM's and DVD's can not be played in the CD player.

Cassette Operation

The cassette operates like a full logic in-dash car Cassette player. To insert a cassette, align the cassette with the slot on the E9000 and gently insert until the mechanism starts to load. Do not attempt to push or jam a cassette into the slot.

When a cassette is inserted, the audio source will automatically be switched to it.

The cassette is controlled by five keys on the front panel.

1. **TAPE** : Switches the audio source to the cassette, or switches cassette programs.
 - Use this key to return to the cassette audio, if you were listening to TV or CD audio.
 - Use this key to switch programs if you are already listening to the cassette.
2. **FF**: Tap this key to start fast forwarding the tape, or to return to play mode if the cassette is currently in fast forward or reverse mode.
3. **RW**: Tap this key to start reversing the tape, or to return to play mode if the cassette is currently in fast forward or reverse mode.
4. **EJECT**: Ejects the cassette.
5. **MUTE**: Enables or disables audio. Press to switch states.

Other functions

Press INFO at any time for help on using the E9000.

Press MENU once you are logged on to access advanced functionality of the E9000. This functionality is dependent on which E9000 you are using, and details on how to use the functionality is included in the MENU screens.

Trouble Shooting and Service

The E9000 should only be configured, removed, and repaired by trained personnel. Please contact your installer or EZone Networks for help.

EZone Networks Inc.
#600, 520 5th Ave S.W.
Calgary, Alberta, Canada, T2P 3R7
Phone: 403.508.7610