

Safety Instructions

When using this or any product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use the product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or swimming pool.
5. Do not place the product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Do not allow anything to rest on the power cord. Do not locate the product where the cord will be abused by persons walking on it.
7. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
8. Never push objects of any kind into the product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
9. To reduce the risk of electric shock, do not disassemble the product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the product is subsequently used.
10. Unplug the product from the wall outlet and refer servicing to qualified personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product had been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment or other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
11. Avoid using the product during an electrical storm. There may be a remote risk of electric shock from lightning.
12. Do not use the product near a gas leak.

FCC Requirements

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency and energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

The consumer shall operate this equipment in a lawful manner and shall comply with all Federal, State, and Local laws, and all FCC Rules and regulations. The consumer shall not service, repair, adjust, deface, or remove any identification from this equipment.

Limited Warranty

IMPORTANT!

SALES SLIP OR EVIDENCE OF PURCHASE DATE REQUIRED

This limited warranty gives you specific legal rights; you may also have other rights which vary from state to state.

The limited warranty is extended only to the original consumer and is valid only with respect to consumers within the United States of America. Subject to the following conditions, should this product prove defective by reason of improper workmanship of material:

During the period of one (1) year from the date of original purchase, Company will repair or, at its option, replace the product without charge for parts or labor. If Company elects to replace the product, such replacement may be accomplished with a factory-reconditioned unit. This limited warranty does not apply: (a) to any product damage by accident, misuse, improper line voltage, lightning, fire, water, or other acts of nature, (b) if the product is altered or repaired by anyone other than Company or one of its authorized warranty stations or if the FCC approved antenna is removed or altered. This limited warranty does not cover broken or marred cabinets. Except to the extent prohibited by applicable law, all implied warranties made by Company in connection with this product are limited in duration to a period of one (1) year from the date of original purchase, and no warranties, whether expressed or implied, shall apply to this product after said period.

Should this product prove defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as is herein-above provided. Under no circumstances shall Company be liable for any loss or damage, direct, consequential, or incidental arising out of the use of or inability to use this product.

In order to obtain warranty service, you must provide evidence of purchase date. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of purchase date.

Before returning the product,
call the Consumer Helpline at
(602) 770-7285

Important Information

Consumer shall indemnify Company against, and hold harmless from, any and all claims, actions, proceedings, expenses, damages, and liabilities including attorney's fees, arising in connection with the product and/or service, including without limitations, its manufacture, selection, purchase, delivery, possession, use, service, operation or return, and the recovery of claims under policies thereon. Company is not responsible for the failure of the equipment to perform the task for which it was purchased by the consumer except as provided under the Operating Instructions included herein.

All rights pertaining to intellectual property including, but not restricted to, copyrights, patents, trademarks, design, and operation are expressly reserved. Consumer shall themselves not, nor shall they authorize any breach of these rights. Design and specifications are subject to change without notice.

SAVE THESE INSTRUCTIONS

Operating Instructions

Put Your Business Card Here!	<input type="checkbox"/> Mic	<input type="checkbox"/> Sw
	<input type="checkbox"/> On	<input type="checkbox"/> Rec

Installation

Plug the AC Adapter into a 115 VAC electrical wall outlet.

The Power On Light will illuminate.

Tune any FM radio to preselected frequency to listen to message.

Note: If the AC Adapter is unplugged, wait 30 seconds before plugging it back in.

Recording

Press and release the Record Switch.

The Record Light will illuminate indicating the product is in Standby Mode.

The product will remain in Standby Mode for 10 seconds. If the Record Switch is not pressed again, the product will return to Playback Mode. This will prevent recording a message if the Record Switch is accidentally pressed.

Press and release the Record Switch to begin recording a new message.

The Record Light will blink indicating the product is in Record Mode.

To end recording, press and release the Record Switch.

Message Playback will automatically begin.

Note: If the recording exceeds approximately two minutes, the product will automatically stop recording and return Playback Mode.

Should you have additional questions or require assistance, please call the Consumer Helpline at (602) 770-7285