

Units: mm

Actual Scale

Printing colors :

K

AW

History:

VO1 (FM/SM): For production, brief: 'C24515US1_KDUS BRIEF_WIP_240326.pptx'

EN

297 mm

Safety precautions

- The transformer, power supply or battery charger used with this electric toy shall be regularly examined for damage to the supply cord, enclosure or other parts. In the event of damage, it shall not be used until the damage has been repaired.
- This toy contains batteries that are non-replaceable.
- This toy is only to be connected to equipment bearing either of the following symbols:  or . The power delivered by the charger must be between 0.75W and 0.75 Watts required by the radio equipment, and max 7.5 Watts in order to achieve the maximum charging speed.
- Please do not use the KURIO SMARTWATCH if you have or had symptoms/signs of skin irritation. To reduce the potential for irritation please follow the simple measure: 1. Keep the watch and strap clean; 2. Keep them dry; 3. Don't wear it too tight. Give your wrist a rest by removing the watch for an hour after extended wear.
- Do not attempt to disassemble, repair or modify the product or replace the batteries. This will void the warranty. There is danger of explosion if the battery is replaced incorrectly.
- Use only the cable supplied with the KURIO SMARTWATCH for charging the battery. Do not damage or deform the magnetic pins or the USB port. If it is damaged or deformed, it may cause electric shock or malfunction when used. Charging should only be made by an adult or a child of 8 years of age and above.
- If for any reason, the screen (display) is cracked or broken, stop using the product immediately.
- Do not drop the product or subject it to severe impact.

Warnings:

- Do not expose the device to flames.
- If you feel discomfort or any pain using the KURIO SMARTWATCH, please stop using it.
- If a small part is coming out of the watch, don't try to remove it.
- To clean up the screen, simply use a soft damp cloth. Do not use alcohol, solvent, or abrasives.
- WARNING: This toy produces flashes that may trigger epilepsy in sensitised individuals.

EU Declaration of conformity

Hereby, Diset, S.A. declares that the radio equipment type K05124 is in compliance with directives 2014/53/EU RE DIRECTIVE and 2014/35/EU EMC DIRECTIVE. The full text of the EU declaration of conformity is available at the following internet address: http://kurioworld.com/download/K05124_EU.pdf

CAUTION:

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting a battery with a sharp instrument. Leaking a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.

This device is subjected to extremely low air pressure can result in an explosion or the leakage of flammable liquid or gas.

--- This symbol indicates DC voltage.

Statement of FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

Made and printed in China

Diset, S.A.
Calle C. nº 3, Sector B,
Zona Franca,
08040 Barcelona
España

GALT TOYS INC
U.S.A.
distribution centre 1
C/O Total Biz Fulfillment
One Corporate Drive
Grantsville, MD21536
U.S.A.

James Galt & Co Ltd
Sovereign House
Stockport Road
Cheadle
Cheshire
SK8 2EA
U.K.

Model K05124
FCC ID: NXM-K05124



Waste Electrical & Electronic Equipment must not be disposed of with household waste, these ones must be collected and treated separately. Please check with your local authority to know the collecting areas.

UK
CA
CE
RoHS

Model K05124
C24515US1_GALTUS_AW_UM_US_01_005_240619

Getting Started

We recommend fully charging your device before use. A full charge takes about 1 hour and a half. To charge your KURIO SMARTWATCH, connect it to a USB port or a charger with the Magnetic USB cable included that works by magnetic connection for easy use.

How long the battery lasts will depend on the device usage. More frequent usage drains the battery more quickly. Additionally, some activities require more battery consumption, such as games, activity tracking, Bluetooth®, etc.

* Do not use a charger exceeding 5V 1A for charging.

** Never charge the battery if the watch or strap is wet or while wearing the product.

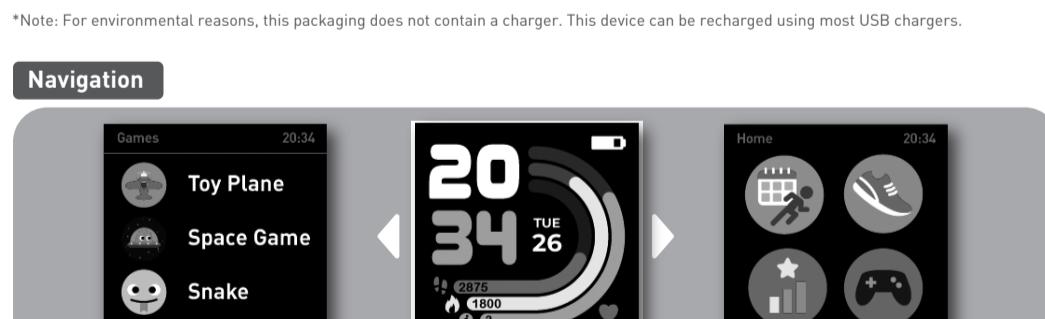
Once the watch is fully charged:

1. Turn on: Press and hold the power button for a few seconds to turn it on. The time screen of the watch will be displayed after booting.

2. When the watch screen is OFF you can press the power button to wake up the screen. If the Motion Switch is ON in the settings, you can also wake up the screen by just turning the wrist.

3. Shut down: In Settings, press on System / Shut down and click to shut down OR press on the power button for few seconds to turn it off.

*Note: For environmental reasons, this packaging does not contain a charger. This device can be recharged using most USB chargers.

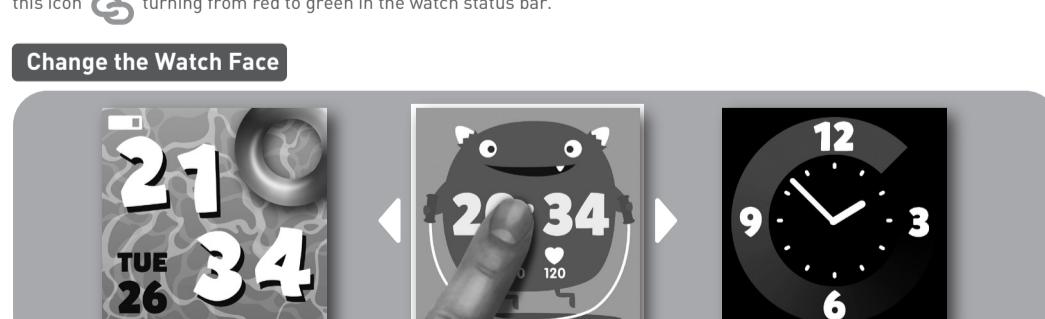
Navigation

Swipe Left and Right / Up and Down to navigate through the menus. Press an icon to select it.

- From the Time screen, swipe to right and display the Games list.
- From the Time screen, swipe to left 1 or 2 times to access the 2 pages of the Home menu.
- From the Time screen, swipe down and display the Battery, Bluetooth, Date, Brightness, Sports, Alarms, Settings icons.
- From the Time screen, swipe up and display the Heart Rate menu. Swipe up again and display the Daily activity results storage information.

Bluetooth Connection

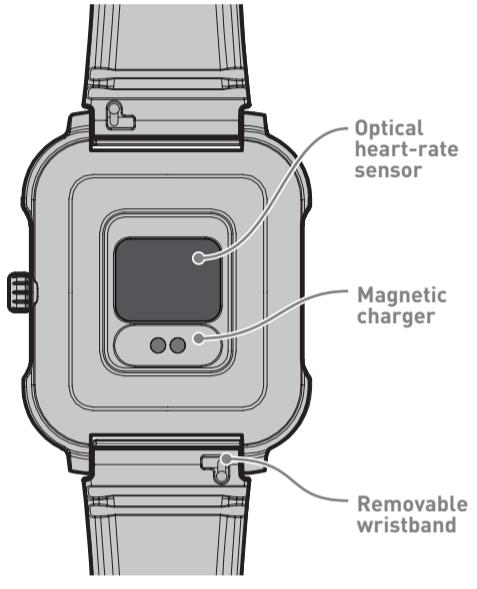
Turn on the Bluetooth connection on your mobile phone. Turn on your KURIO SMARTWATCH. In the app, look for "KURIO" into your bluetooth connections and select to pair. Once the connection is successful you will see this icon  turning from red to green in the watch status bar.

Change the Watch Face

The KURIO SMARTWATCH comes with many attractive and useful watch faces to customize your watch. You can choose between digital and analog watch faces. To choose one face, press and hold anywhere on the screen for 2 seconds to enter the Customization Mode. Swipe left or right to select different watch faces. Press the screen when you've found a watch face you'd like to select. You can also rotate the Home button up or down to pick a watch face.

Kurio
SAFE TECH FOR KIDS

**SMART
WATCH**

USER MANUAL**Main Features**

- Large touch screen
- Waterproof*
- Up to a week of battery life**
- 5 sports to track on your wrist
- Activity tracker
- Heart rate tracking***
- Sleep monitor
- 4 built-in games
- 5 alarms
- Customizable watch faces
- KURIO FIT APP to view stats
- Lots of watch faces to choose from****
- Magnetic charger
- Auto screen wake

* Waterproof up to 1,5 m deep
** Battery life varies with use and other factors
*** This feature is not intended to diagnose or treat any medical condition and should not be relied on for any medical purposes
**** To load from the KURIO FIT app

Get a move on!

The KURIO SMARTWATCH has been specially designed to track kids' activity and workouts, and encourage them to lead a more active life through gentle reminders.

Included

- KURIO SMARTWATCH with rechargeable Lithium battery*
- Magnetic USB cable**
- User Manual

* Battery is not replaceable
** Power adaptor not included

Download and install the KURIO FIT App

You can set up the watch through the "KURIO FIT" App for iOS (iOS 13 and above) or Android devices (Android 7 and above). You can download the app from Apple Store or Google Play Store.



Or you can scan the QR code to download the app, or go to: <https://kurioworld.com/KurioFit/us/>

**Basic Functions**

- Daily Activity**
The watch will display the user's total number of steps you have made during the day, walking distance, calories burned on the same day, and the data will be cleared at 0 o'clock (midnight) every day. Connect the watch to the app every day before midnight to keep record of your stats.
- Sports Session**
Sports function allows you to select between different sports modes such as walking, running, hiking, cycling and other sports. Record a session and keep track on the stats.
- Sleep**
If you have been wearing the watch during the night the watch will display the user's sleep time of the previous night. (Sleep measure time from 8:30pm to 12:00 of next day).
- Games**
There are 4 great built-in games for hours of fun:
Toy Plane: Use one finger to go left and right to shoot obstacles to gain as many points as possible.
Space Game: Keep pressing with your finger to go up with the flying saucer and avoid obstacles. If you do not press with the finger, the flying saucer goes down.
Snake: Swipe up, down, left or right to give the direction to the snake and eat as many apples as possible. Be careful: if you touch the edge of the screen, you lose.
Tic Tac Toe: you can play in 1 or 2 player modes. Players take turns placing their X or O symbols in the squares, aiming to create a line of three symbols in a row to win the game.
- Timer**
You can use the KURIO SMARTWATCH as a chronometer (left up icon) or as a count down timer (right up icon).
- Chronometer**: Tap on the green icon to start and tap on the blue icon to stop. Tap on the red icon to reset to 0.
- Count down timer**: Choose the time you want to start count down from and tap the green icon. Tap the red icon to reset.
- Settings**
Includes the different languages you can choose from.
- Date & Time**: Set the Date and Time and chose your hour format.
- Screen Display**: Including Change Watch face, Brightness, Screen time, Motion Switch setting.
- Do not disturb**: Set enter or exit do not disturb mode. Do not disturb mode: the watch will not vibrate except for the alarms.
- Vibration**: Set vibration intensity.
- Alarms**: You can set up different alarms in the Kurio Fit app. When an alarm is set the watch will pop a reminder message and vibrate.
- System**: Including System version, Shut down, Reset settings.