



FCC ID: NXR-CRT038

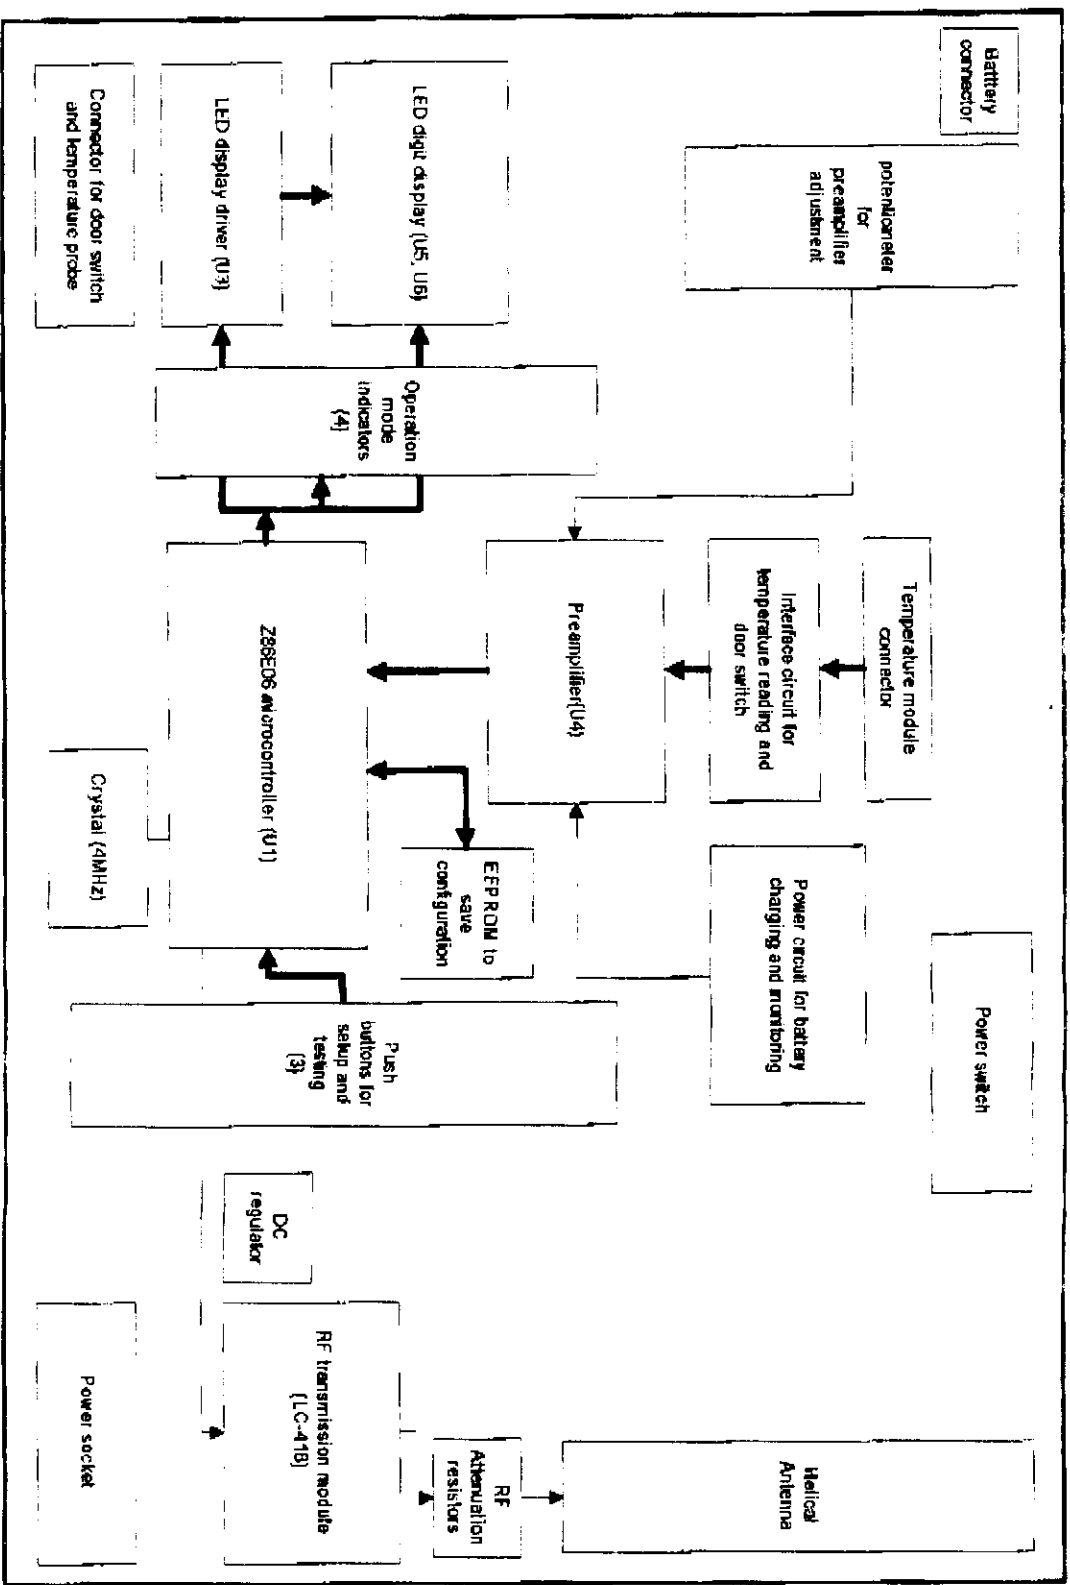

Block diagram

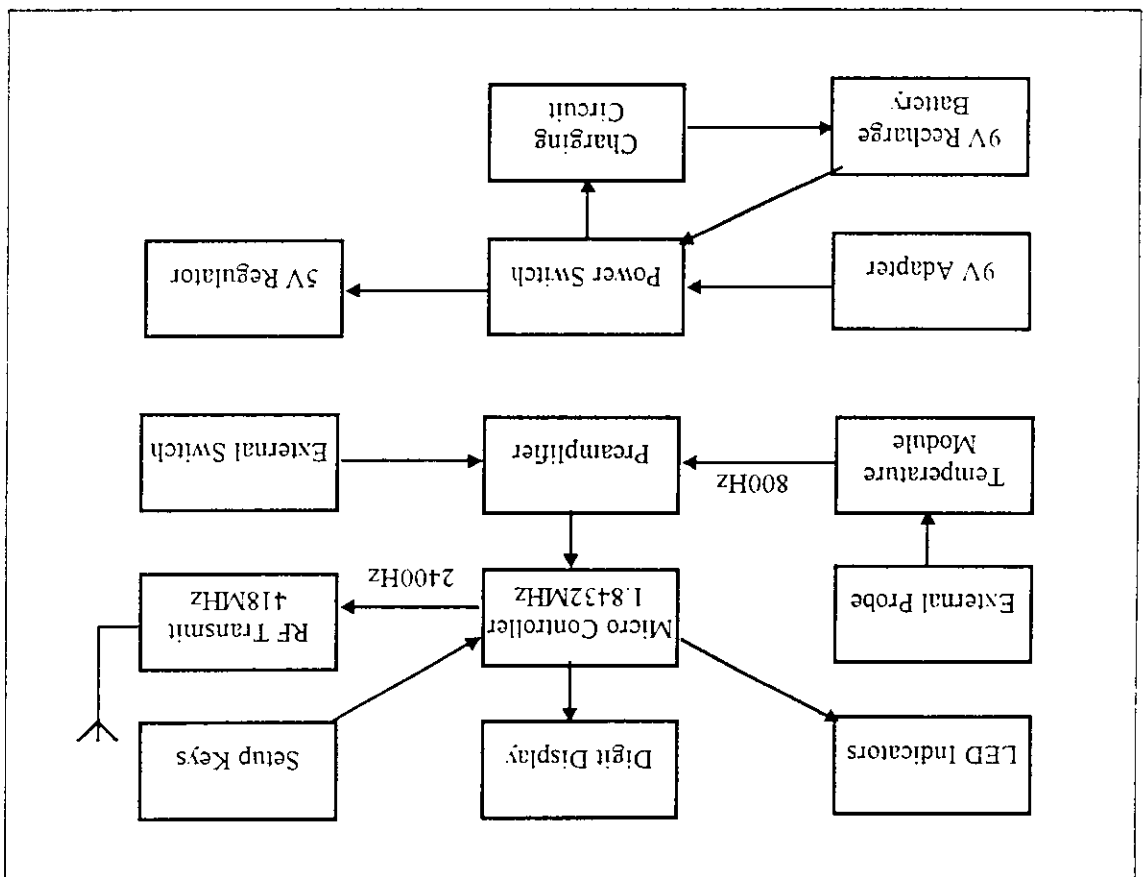

Installation

Each transmitter unit needs to be setup before it is installed. There are four parameters: group ID, unit ID, low temperature limit, and high temperature limit. Each system has a unique group ID which is used by its receiver to identify signals from the system. Each transmitter in a group should have the same group ID. Each transmitter of a group has a unique unit ID. The high and low temperature limits are used to send warning signal. Using the three keys (MODE, UP, and DN) in the front panel of the device, the transmitter should be setup in the following way:

Power up the transmitter

Connect the line power adapter to the transmitter, and switch on the unit. The green power indicator should be ON, and the temperature display will show temperature value.