

## OPERATION INSTRUCTION OF THE BMW - Z4

- ① Erect the rod antenna of the transmitter by screwing into the top opening of the transmitter.
- ② Expect a better control of the car, please extend the full length of the 6A6B antenna when playing the car.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio / TV technician for help.

### In the case of defects observe the following points:

1. Are batteries / accumulator correctly inserted?
2. Are there any other model cars with radio controls somewhere around, perhaps transmitting on the same frequency?
3. Are walkie - Talkies nearby?
4. Transmit or power masts often cause un-controlled running characteristic.
5. Batteries / accumulator in the transmitter / car are used up in this case, change the batteries or re-charge the accumulator.

### BATTERY INSTALLATION-RECEIVER (CAR):




1. Unscrew battery door.
2. Open battery door.
3. Install 6 "AA" (LR6/UM-3) batteries.
4. Close battery door and replace screw.

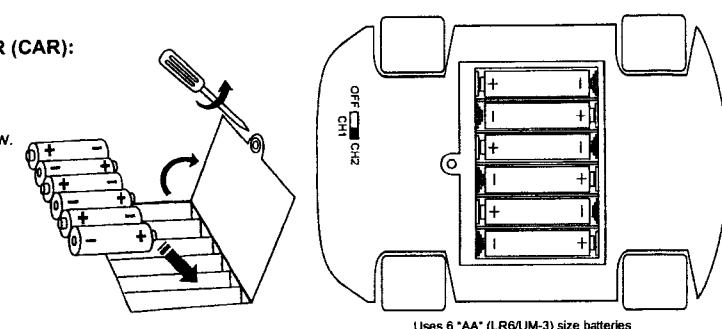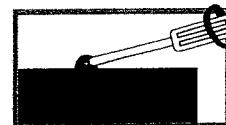

### TRANSMITTER (RADIO CONTROL):


#### BATTERY INSERTION METHOD:

**TRANSMITTER (RADIO CONTROL):**  
Use a screwdriver to loose the transmitter door screw, and insert 4 pcs. "AA" (LR6/UM-3) batteries. Close the battery door by fastening the screw.

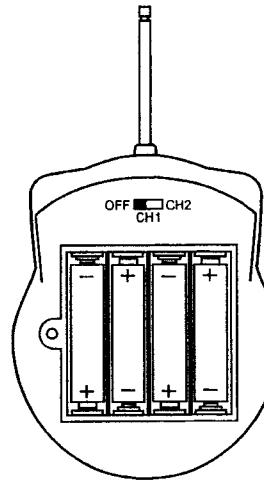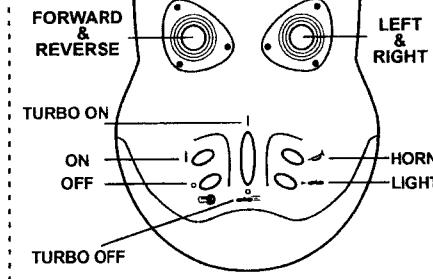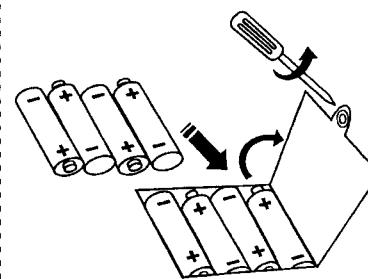

### SPECIFICATIONS:

 - full functionable radio control
- 8 driving functions: forward - left - right - backward - left - right - stop - Turbo
- fast speed
- with sound effect and lights



**BMW Z4**  
INSTRUCTION  
Z0704AA5501