

遥控 玩具 说明书

R/C TOY

Directions
FOR USE

企业标准:Q/IHBY01-1997

奇童 JT MADE IN CHINA

Play Direction:

1. Insert 8 pieces Size "AA" 700mAH Nicd Battery into the vehicle(1) and close the battery cover(2), then turn Power Switch to "ON" position(3).
2. Remove the transmitter battery cover and install a 9 Volt Alkaline Battery as shown(4), and then replace the cover.
3. Place the vehicle on paved surface, Control the Left & Right Joysticks to move the vehicle Forward, Reverse, Left Turn and Right Turn(5). If the vehicles meet the barrier, it can Climb Up and Roll.
4. Do not make the vehicle roll continuously. If you do not use the batteries produced by our factory, please avoid the rolling action. Otherwise, the batteries will be used up rapidly.
5. Before control the vehicle, please check the air pressure of the tires. If it is low pressure, you must inflate first.
6. While vehicle and transmitter carry not less than 10% battery voltage, operating range is 15 meter outdoor and 10 meter indoor.
7. Best operation of vehicle is on an OUT-OF-DOORS even and dry surface to avoid furniture damage and minimize noise level.
8. Avoid playing under rain, snow, water or damp location that may damage the vehicle's electronics. If your vehicle accidentally gets wet and stops running, let it dry before trying to run it again.
9. Avoid operating around Motive Automobiles, CB Radios, Baby Monitors, Cordless Phone, Electrical Appliance, Electric Baseboard Heaters, High Voltage Electrical Wires And Steelreinforced Concrete Buildings, all of which may cause interference or reflex of electromagnetic wave.
10. This vehicle is operating under 27MHz. If you want to race with another vehicle, avoid running on the same frequency.
11. Remove all the batteries after playing and always store your vehicle in a cool, dry place and off painted or varnished surface.
12. In case of Using 12 Volt Rechargeable Nicd Battery Pack, insert and Connect the battery pack to the connector on the vehicle(6).
13. You are advised to use the Specialized Batteries for the radio control toys, which are produced by our factory. The vehicle is provided a Charger(7) and an Air Needle(8) for pumping.

Safety precautions:

1. This vehicle is not recommended for children under the age of 8 years.
2. Avoid hitting pets, furniture or people while playing.
3. Do not pick up vehicle when it's moving.
4. Keep hand, hair and clothing away from this vehicle when the power switch is turned to the "ON" position.

Guide for troubleshooting:

Symptom	Probable Cause	Correction
Red light on transmitter doesn't light when operating.	Transmitter battery weak or not connected.	Check connections or replace battery if required.
Erratic operation or only short range possible.	Radio interference likely	Change location.
Vehicle doesn't work normally going through water or snow.	Water in the electronics area	Vehicle will take several hours to dry, Allow to dry before trying again.
The vehicle does not roll. Vehicle runs slowly or stops running	Battery weak Loose battery connection or switch not ON. Flat or uncharged battery weak. 9 Volt transmitter battery weak.	Change the batteries Check connector and vehicle's ON/OFF switch. Charge or replace battery. Replace with fresh alkaline batteries.