

REMOTE RAIN #5917 INSTRUCTIONS

Specifications:

Water Connection – $\frac{3}{4}$ "

Hose Connection – $\frac{3}{4}$ "

Batteries – 4 "AA" (not included)

Low Battery Detection – Flashing light will display on receiver LED

NOTE: Receiver batteries should last 1 season with average usage.

IMPORTANT SAFETY INFORMATION

1. Warning: This product is intended for outdoor, residential applications only. Not intended for indoor or commercial use.
2. Remove Remote Rain from the faucet during freezing weather and store inside. Exposure to temperatures below 32 F (0 C) may damage the unit.
3. Remote Rain should not be submerged in water.
4. Check connections regularly for a tight seal.
5. When storing, make sure the unit is completely empty of water and in a frost-free environment only. Remove the batteries.
6. Use 4 "AA" batteries only. Do not use rechargeable batteries. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Install new batteries at the start of the watering season.
8. Use Remote Rain in proper orientation only; do not use sideways, upside down, etc.
9. No user serviceable parts inside product housing. Opening housing will void warranty.
10. CAUTION: Detach Remote Rain from faucet during freezing weather. Do not use with water exceeding 100 F (38 C) or with pressures exceeding 100 psi (6.8 bars). For pressures exceeding 100 psi (6.8 bars), consult a local plumber for pressure regulation. Avoid pulling or tugging on the hose as damage to the unit may result.
11. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.This device can automatically deactivate the transmitter within not more than 5 seconds of being released.

Caution: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

I. OPERATING INSTRUCTIONS – BATTERY INFO.

1. **INSERT BATTERIES IN RECEIVER.**
 - a. Note: Before every battery change, turn off the Remote Rain's water supply at your outdoor faucet and then remove the unit from the faucet. Tip: Clean metal contacts with a clean cloth when replacing batteries.
 - b. Insert 4 "AA" batteries as pictured inside receiver case.
2. **Key fob battery (included).**
 - a. The key fob runs on an A23 battery. With average use, this battery will only need to be replaced every 2-3 years.

II. ATTACH REMOTE RAIN RECEIVER TO FAUCET.

1. Firmly attach the coupling nut on your Remote Rain to your faucet.

III. ATTACH HOSE TO REMOTE RAIN RECEIVER

1. Firmly attach your hose (with sprinkler or nozzle attached if desired) to the Remote Rain receiver outlet.

IV. TURN FAUCET ON

V. USING KEY FOB

1. Fully extend antenna on key fob.
 - a. Stand within 100' of Remote Rain receiver.
 - i. NOTE: Operation through walls or solid objects will reduce the operating range of the Remote Rain to under 100.'
 - ii. NOTE: Point antenna straight up for maximum distance.
 - b. **TO TURN ON:** Push key fob "ON" button and hold for 3 seconds.
 - i. Light on key fob will flash 2x to indicate water has been turned on.
 - c. **TO TURN OFF:** Push key fob "OFF" button and hold for 3 seconds.
 - i. Light on key fob will stay lit for 2 seconds to indicate water has been turned off.
 - d. Safety Feature: Remote Rain will automatically shut water off after 3 hours of use. After 3 hours have elapsed, you may press the key fob "ON" button for 3 hours of additional watering time.

VI. CHANGING CODES

Your Remote Rain has 4 settings (codes). It comes pre-set from the factory to match your key fob setting (similar to a garage door opener remote).

If you experience interference with neighboring units, etc., you may change the setting by changing the code. (Brad/Scott: Please explain how to adjust.)

VII. REPLACEMENT PARTS

If you happen to lose your key fob, replacements are available from:
L.R. Nelson Co.
One Sprinkler Lane
Peoria, IL 61615
(800) 635-7668
or
LRNelson.com
- Consumer Products

VII. TROUBLESHOOTING GUIDE

PROBLEM	PROBABLE CAUSE	REMEDY
No watering operation	Dead or weak batteries	Replace batteries
No watering operation	Too far away from receiver key fob	Move closer to receiver
No watering operation	Didn't hold key fob button down long enough	Hold continuously for at least 3 seconds
Faucet connection leaks	Missing or damaged hose washer	Install new washer
Faucet connection leaks	Loose connection	Tighten hose connection
Key fob activates a neighbor's Remote Rain	Adjoining units set on same code (frequency)	See instructions for Changing Codes

L.R. Nelson Corporation
Peoria, Illinois 61615 USA
www.LRNelson.com

c 2006 L.R. Nelson Corporation
ALL RIGHTS RESERVED