

Title :

Information Document

NO.

Date

2.3 Operating summary

- ① TRANSMITTER's button is pushed.
- ② TRANSMITTER sends the code by radio frequency.
- ③ RECEIVER gets the code and decodes it.
- ④ RECEIVER judges the code whether it is right code or not.
- ⑤ RECEIVER checks door lock or unlock Tail-Gate state.
- ⑥ RECEIVER drives the actuator.

2.4 Caution

- ① Danger of explosion if battery is incorrectly replaced.
- ② Replace only with the same or equivalent type recommended by the manufacturer.
- ③ Dispose of used batteries according to the manufacturer's instructions.

Title :

Information Document

NO.

Date


3. USER MANUAL

3.1 NAME : BCM system


- This system is BCM and includes RKE.
 - RKE in BCM system is intended for auto door lock or unlock or TAIL-GATE in vehicle.
 - This BCM system is to be installed on motor vehicles as *OE item.
- *OE : Original Equipment.
*BCM : Body Control Module.
*RKE : Remote Keyless Entry.

3.2 SYSTEM CONSTRUCTION

3.2.1 SYSTEM IN VEHICLE

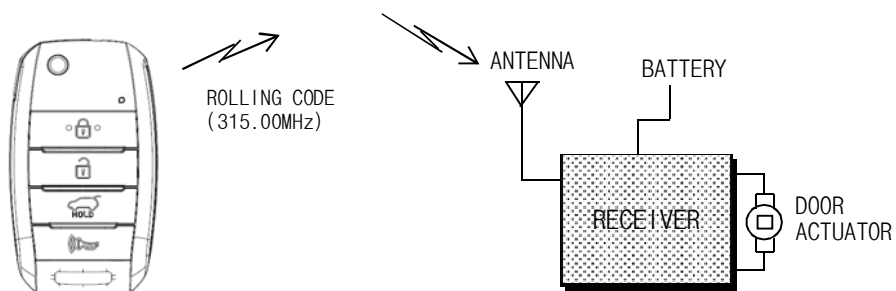

3.2.2 SYSTEM FOR TEST

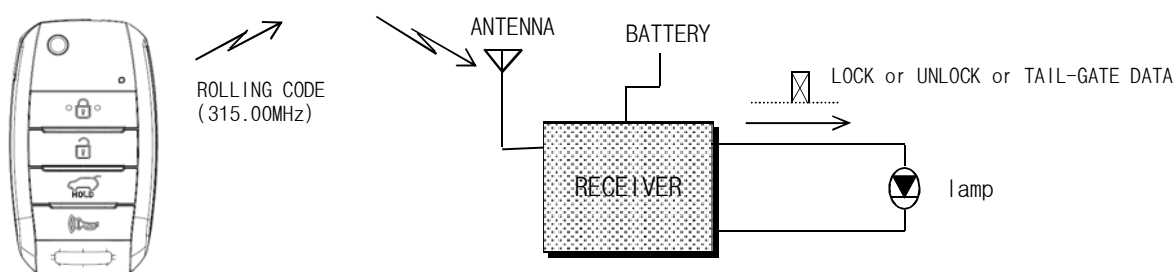

- * Through the use of lamp, operating state is displayed by lamp.
lamp 'ON' means that actuator is operated by door lock or unlock or tail-gate output signal.