


## Operation Description


- Transmitter's button is pushed.
- Transmitter sends the code by radio frequency.
- Receiver gets the code and decodes it.
- Receiver judges the code whether it is right code or not.
- Receiver checks door lock or unlock / panic state.
- Receiver drives the actuator.
- Receiver drives the horn

### System construction

#### System in vehicle

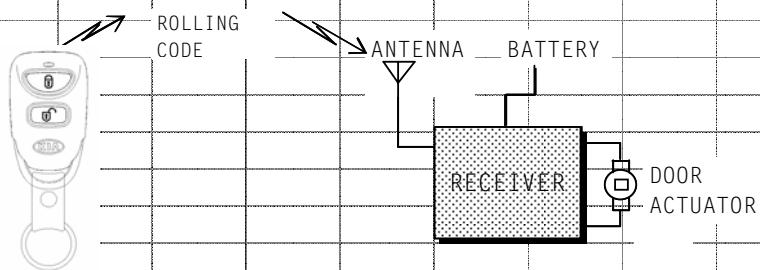

#### System for test

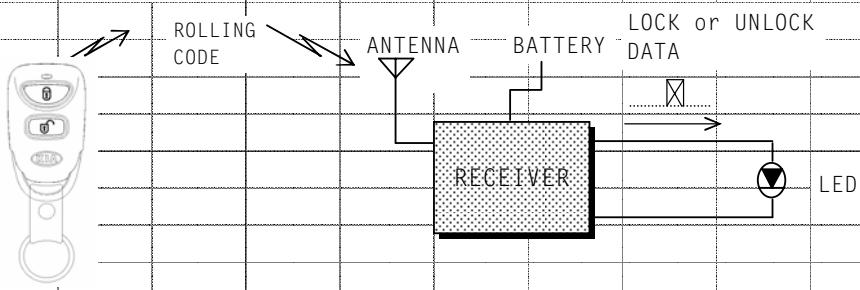

\* Through the use of lamp, operating state is displayed by lamp.

lamp 'ON' means that actuator is operated by door lock or unlock / panic output signal.

