

321387d - P11/11


SPYkids™

SPY KIDS LISTENING BUG
INSTRUCTIONS

OPERATION

ACTIVATING THE LISTENING BUG


- 1 Locate an area where the Listening Bug won't immediately be noticed.
- 2 Flip the Power Switch, on the Receiver to the "ON" position.
- 3 Now, you can hide up to 50 feet away and hear any conversation that occurs in the bug's proximity!

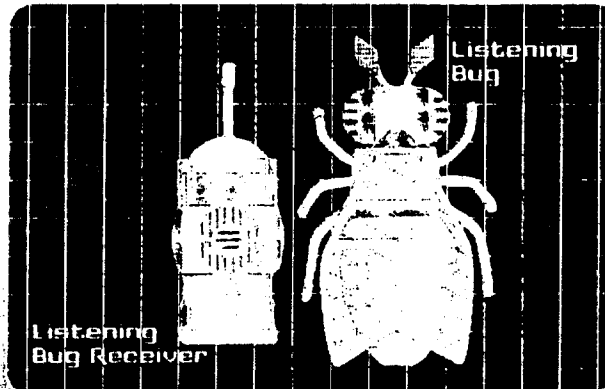

TO REPLACE BATTERIES:

Unscrew hatch on back as shown. Replaces old battery with new 9V battery observing polarity as shown.

CAUTION: Batteries should be replaced by an adult.

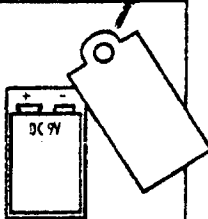

© Minotaur Film Corp. 2001. SPY Kids™ is a trademark and the exclusive property of Minotaur Film Corp. under license from Dimension Films, a division of Minotaur Film Corp. All Rights Reserved.

DIMENSION



FIM NO. 2232
SPY KIDS™ is a trademark of Minotaur Film Corp.
FOR SHOPS AND CHANGES PLEASE CONTACT TECHNICAL SUPPORT
CUSTOMER SERVICE 9 AM-5 PM EST/6 PM-4 PM PST
For complete user information
CONTACT TECHNICAL SUPPORT, INC. • ST. LOUIS, MO 63101 U.S.A. • MADE IN CHINA

1-800-771-1810



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

The Packaging has to kept since it contains important information.

Please remove all packaging material before giving to the children. They are not part of the toy.

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- The packaging has to be kept since it contains important information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.