

INTERTEK TESTING SERVICES


EXHIBIT 7

INSTRUCTION MANUAL

TCC ID. N22-09020-1998-07



cresta
International Ltd.
© 1998 Cresta International Ltd.
a subsidiary of South China Industries
Chaiwan, Hong Kong
All rights reserved.

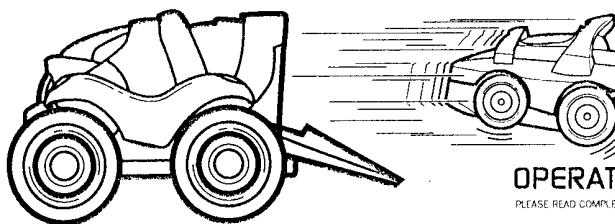

MODEL NO. 123
OPERATION MANUAL
PLEASE READ COMPLETELY BEFORE ATTEMPTING TO OPERATE

Ages 8 and Up


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LAUNCH ROVER™

THE NEXT GENERATION OF RADIO CONTROL!

PSYCHO SPEEDER™ BATTERY INSTALLATION

To operate your vehicle, you will need a 9.6 Volt Rechargeable NiCd Battery Pack (sold separately). Follow manufacturer's charging instructions on the rechargeable battery pack. PLEASE NOTE: The battery pack will become hot during use, so care should be taken whenever you handle it.

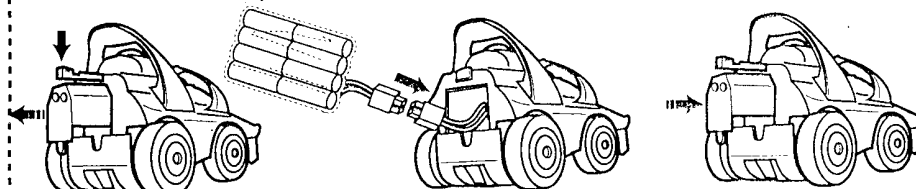

1. Press button and slide out the panel on Psycho Speeder.
2. Locate the connector cord and pull out from the compartment. Attach battery as shown above. Return to compartment contacts forward and arrow up.
3. Push battery completely in, and slide panel in behind it until it locks shut.

REMOTE TRANSMITTER BATTERY INSTALLATION

To operate your transmitter you will need a 9 Volt Alkaline Battery (sold separately). Remove battery cover as shown and install a new 9 Volt Alkaline Battery. Replace the cover. Press either pad and the red LED light will come on. This will show you that the battery is good and the transmitter is operating.

PLEASE NOTE: Vehicle power switch must be in the ON position to receive commands from the transmitter.

SAFETY PRECAUTIONS/PROPER OPERATION

Parents, this toy is recommended for children 8 years of age and older. To ensure that your child's play is both safe and fun, please review the operating instructions and these general safety rules with your child.

CAUTION:

- ❗ DO NOT pick up vehicle while in motion.
- ❗ Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- ❗ If this vehicle is being operated in the presence of children under 8 years of age, adult supervision is recommended.
- ❗ To avoid accidental operation, remove battery when not in use.





 
 
 
 

1. Radio interference is caused by the presence of another radio controlled vehicle operating on the same frequency as your vehicle. Obviously, multiple vehicles should NOT BE OPERATED ON THE SAME FREQUENCY at the same time. Only race 27 MHz vehicles against 49 MHz vehicles.
2. Radio interference can be caused by the operation of your vehicle near HIGH VOLTAGE ELECTRICAL WIRES, LARGE STEEL REINFORCED CONCRETE BUILDINGS and PASSING TRUCKS WITH CB RADIOS. Avoid these if possible.
3. DO NOT operate your vehicle over wet surfaces. Water can damage the electronic assemblies.
4. DO NOT operate your vehicle on streets! They are for real cars.
5. For best results, hold antenna up, not pointed down toward vehicle. If you drive your vehicle TOO FAR AWAY FROM THE TRANSMITTER, your signal strength will become weak and vehicle will not function properly. The maximum range for the vehicle should be between 30 to 65 feet, when operating outdoors.

Tip a mints

1. Operate your vehicle in a dry, open area; avoid sand and water.
2. The radio circuitry in your vehicle and transmitter is sensitive. Do not store vehicle or transmitter

MOTION CONTROLS



Press pad(s) as indicated in the diagrams. Vehicle will move in the manner described.

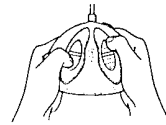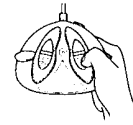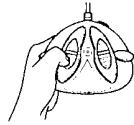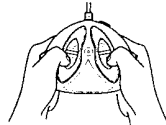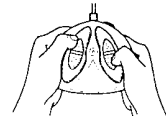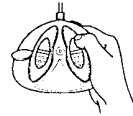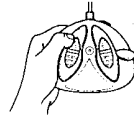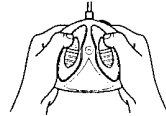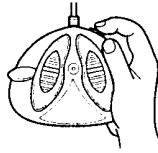


TRICKS AND STUNTS

Here are some of the exciting tricks and stunts you can do. The following tricks and stunts take practice and skill. You can even combine stunts. Attempt simple skill level tricks or combinations before going on to more advanced tricks. Remember you will need to practice to achieve these stunts. For best result use fully charged battery.


LAUNCH ROVER

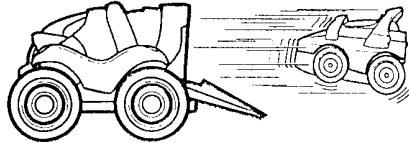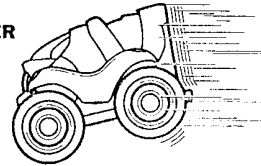


PSYCHO SPEEDER

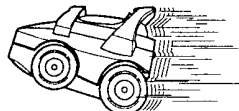 


1. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

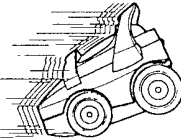


2. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

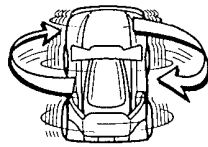


1. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

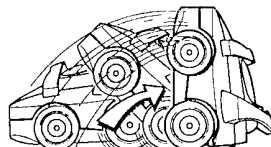


2. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

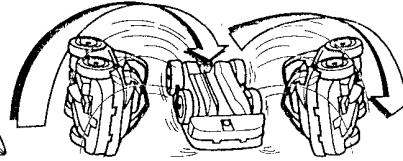


2. FORWARD WHEELIE: From stopped position press both control pads quickly backward.

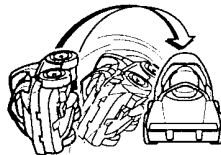

1. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

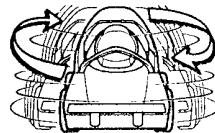

2. FORWARD WHEELIE
From stopped position press both control pads quickly backward.

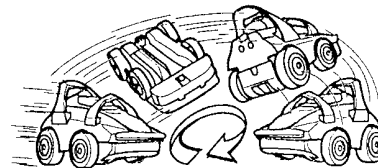

2. FORWARD WHEELIE: From stopped position press both control pads quickly backward.

TROUBLESHOOTING

Press pad(s) as indicated by solid arrows. Vehicle will move in direction as indicated by outlined arrow.