

FieldPro



Remote Bird Launcher Owner's Manual

**Thank you for purchasing
FieldPro equipment !**

Your new equipment uses
state of the art electronics so
that we can offer you a quality
product at an affordable price.



TABLE OF CONTENTS

TRANSMITTER (ProTX)

Getting started.....	1
Controls.....	1


RECEIVER (ProRX)

Getting started.....	2
Setting the ProRX color code switch..	3
Mounting to the E-Z bird launcher...	4
Adjusting the launcher.....	5
Ready to go.....	5

STORAGE AND RATINGS..... 6

WARRANTY AND SERVICE..... 7

FieldPro, ProTX, and ProRX are Trademarks of FieldPro, LLC
First Printing April 1999

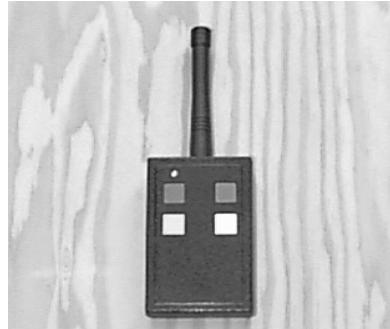

GETTING STARTED WITH THE ProTX

1. Replacing the battery (included): The ProTX is designed to operate from one 9-volt alkaline battery. Open the battery compartment on the back of the ProTX by sliding the door away from the ProTX antenna. Install the battery and re-install the battery door.

CONTROLS

1. Testing the control buttons: The ProTX was designed to operate up to four ProRX's. Each button on the top of the ProTX will operate one ProRX. Press each button and make sure the red LED turns on when you press each button and turns off when you release the button.

2. Operation: The unit will operate up to 100 yards consistently. It will operate the best under line of sight conditions. The unit will not operate over hills but down in a valley is fine. Pressing the button for under one second will operate the ProRX if the above conditions are followed. The unit is not waterproof but it is water resistant. Humidity and dampness will not affect the unit adversely.

Note: Hold the ProTX away from your body for optimal range.

3. Color coding: All the ProTX buttons are color coded to match the ProRX so that you can tell which button on the ProTX will operate which ProRX. Refer to the section titled "Setting the ProRX color code switch" to learn more about that subject.




GETTING STARTED WITH THE ProRX-1

1. Replacing the batteries (included): The ProRX is designed to operate from four AA alkaline batteries. Make sure the power switch on the right side of the unit is set to OFF. Open the battery compartment on the front of the ProRX by sliding the door to the right. Install the batteries and re-install the battery door. Turn the unit ON to position the arm of the ProRX correctly then turn the unit back OFF.

SETTING THE PRORX COLOR CODE SWITCH

1. Opening the unit: Lay the unit on a flat surface with the battery door facing up. Remove the screws from each corner of the unit. Remove the top and place it to the right of the unit.

2. Setting the color code switch: The color code switch is located at the top-center, below the antenna. The picture below shows the default color code switch setting, which is RED. To set the unit to another color, simply flip the RED switch down to match the others, then flip the desired color code switch up.

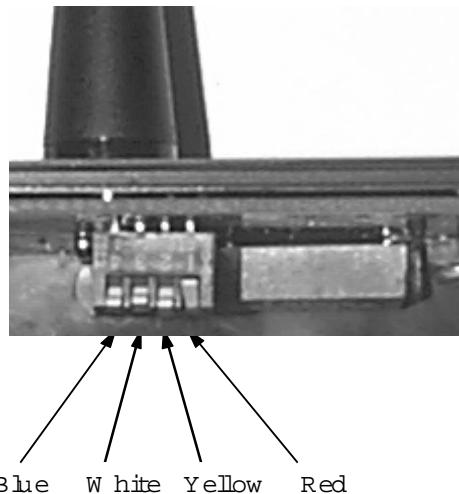

3. Closing the unit: Place the top back on the unit and install the four screws. Do not overtighten!

4. Color coding the receiver: Once the color code switch has been set, you might want to mark the outside of the unit with that color. Use the appropriate small color stickers provided to do that. Use the large color sticker to wrap around the antenna if you would like to see it from a distance.

MOUNTING TO THE E-Z BIRD LAUNCHER

- 1. Removing the hardware:** Unscrew the two bolts from the back of the unit. Keep them together with the lockwashers for later.
- 2. Getting ready for mounting:** Set the E-Z bird launcher, as shown below. Tie the launcher arm together so that it will not launch accidentally while installing the ProRX.




- 3. Finding the right placement:** Place the ProRX against the E-Z bird launcher so the etalam of the unit just touches or is a little bit above the arm of the E-Z bird launcher as shown below.



4. Installing the hardware: Take the bolts and lockwashers from step 1 and screw them into the ProRX from the inside of the E-Z bird launcher.

A D J U S T I N G T H E L A U N C H E R

1. Adjusting for a fast launch: It is important on the medium and large E-Z bird launchers that you set them so that they are "hair trigger". The picture below demonstrates this. You might also want to bend the arm of the E-Z bird launcher up to touch the arm of the ProRX for a very quick release.

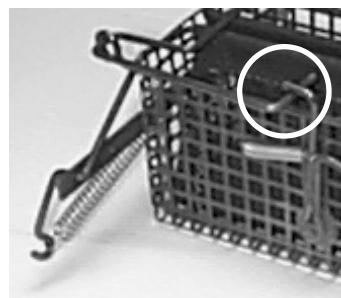

R E A D Y T O G O

1. Operation: Go ahead and turn the power switch on the right side of the unit to the ON position. Press the corresponding color coded button on the PRO tx to test the ProRX. Turn the unit to the OFF position when you are done testing and when not in use. The unit is not waterproof but it is water resistant. Humidity and dampness will not affect the unit adversely.

Note: Severe weather conditions like rain and high winds can limit the operating range.

STORAGE AND RATINGS

Storage Temperature:

-45 degrees C to +85 degrees C

Operating Temperature:

-20 degrees C to +70 degrees C

Operating Range:

100 yards

ProTX Specifications:

Size - 2.375" (L) x 1" (W) x 3.75" (H)

Weight - 2.9 ounces (without battery)

Battery Requirements - (1) 9 volt alkaline

ProRX Specifications:

Size - 6.25" (L) x 1.75" (W) x 3.625" (H)

Weight - 10.9 ounces (without batteries)

Battery Requirements - (4) AA alkaline

Factory Warranty

Both the ProTX and the ProRX are covered by a one year warranty on parts and labor from date of purchase. The warranty does not cover misuse, abuse, or any unauthorized alterations or modifications.

Service

If you have a problem with your equipment and need to get it repaired or have questions regarding your equipment, please call **330-658-7705** or email us at **email@FieldProLLC.com**

WARRANTY REGISTRATION
(Please fillout and return for our records)

Name _____
Address _____ Apt. No. _____
City _____ State _____ Zip _____
Telephone No. _____
Email Address _____

Date of Purchase _____
Location Purchased _____

ModelNo. ProTX-1 SerialNo.

- ProRX-1 SerialN o. _____

*The SerialN o. is located on the front of the ProRX and on the back of the ProTX.

Comments and Suggestions:

SEN D TO : **F ieldP ro**
14120 Galehouse Rd.
D oy lestow n , O H 44230





Contact Information:

Phone: 330-658-7705
E-mail: email@FieldProLLC.com
Website: www.fieldprollc.com