

P2/2



Moose Mountain Toymakers Limited

Unit 704-6, 7/F, Energy Plaza, No. 92 Granville Road, Tsim Sha Tsui East, Kowloon, Hong Kong.
Tel: (852) 23692302 Fax: (852) 27226182

USER MANUAL OF "REMOTE CAR"

This device complies with Industry Canada Standards RSS210 Issue 2. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.


Importer Address: Moose Mountain Marketing, Inc.

Parsippany, N.J. 07054 U.S.A.


Style No.: 5970 Plastic & Electronic Remote Control Custom Car

Carrier Frequency : 27 MHz

Field strength and measurement distance: 64.5 dB. μ V / m at 3 meter.

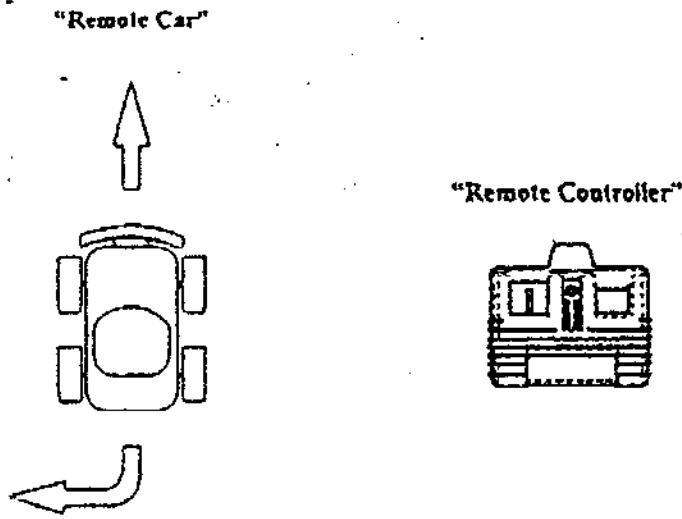


VEHICLE OPERATION

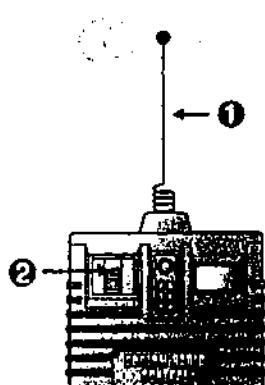


① WHIP ANTENNA

② FORWARD AND TURNS IN REVERSE JOYSTICK

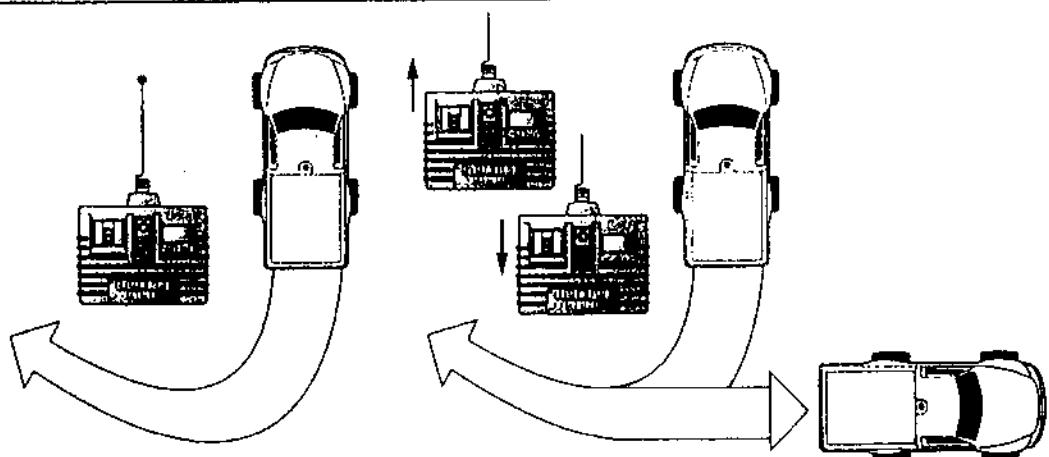


1. Insert battery on the remote control. Switch vehicle "ON".
2. Your vehicle will run backwards and to the left.
3. Push control stick forward to steer straight ahead.
4. Release control stick to turns in reverse. Push control stick up to go forward when vehicle is facing the direction you want.


SAFE OPERATING RULES

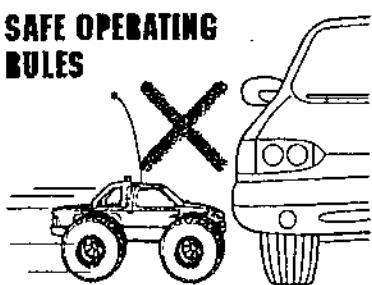

1. Select a **SAFE** place to play. Never operate your vehicle in the street near pedestrian traffic.

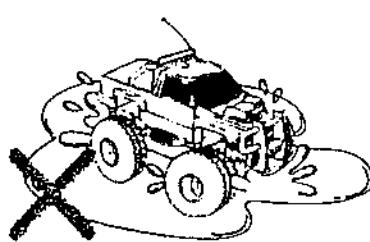


2. **NEVER** play with your vehicle in sand, dirt, mud, or water. Keep your vehicle clean and dry.

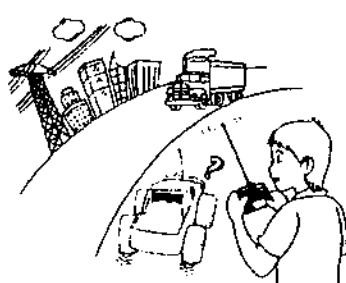

3. Keep the Vehicle and Transmitter away from **HIGH VOLTAGE ELECTRICAL WIRES, LARGE STEEL REINFORCED CONCRETE BUILDINGS AND PASSING TRUCKS WITH CB RADIOS**, that may cause radio interference.



4. Radio interference is caused by the presence of another radio controlled vehicle operating on the same frequency as your vehicle. Multiple vehicles should **NOT BE OPERATED ON THE SAME FREQUENCY** at the same time.

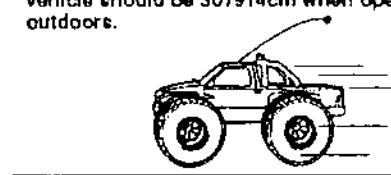

30' / 914cm



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

BATTERY INSTALLATION



REMOTE CONTROL

1. Open battery compartment cover.
2. Use one 9 Volt 006P Battery.
Type: (Carbon, Alkaline) Size: 6LR61.
ATTENTION: Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.
3. Insert batteries in the correct polarity as shown.
4. Close battery compartment cover.
5. Remove all batteries over long periods of no play.

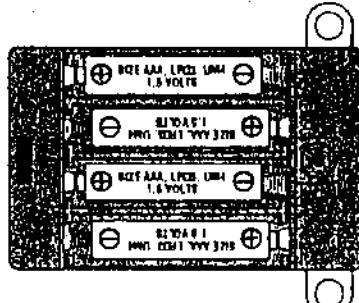

BATTERY COMPARTMENT

1. Open battery compartment cover with a Phillips screw driver.
2. Use four 1.5 Volt Batteries.
Type: (Carbon, Alkaline) Size: (AAA), LR03, UM4.
ATTENTION: Do not mix old and new batteries. Do not mix Alkaline and Standard (Carbon-Zinc) Batteries. Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.
3. Insert batteries in the correct polarity as shown.
4. Close battery compartment cover.
5. Remove all batteries over long periods of no play. Packing has to be kept since it contains important information.

Conforms to FCC regulations.