



User Guide

1 Welcome

1.1 Exciting Features

Congratulations on becoming a proud owner of the R10 Android mobile phone. You have now joined the millions of satisfied customers spread across the Globe. Your R10 device offers you these exciting features and much more:

- Android 4.0.4
- 4.0 inch Display
- Camera
- 1GHz Processor
- External Memory (Expandable to 32 GB)
- Dual SIM
- Multimedia
- GPS
- Gravity sensor
- Wi-Fi
- GPRS
- Bluetooth 3.0

User Guide

Contents

1	Welcome	2
1.1	Exciting Features	2
2	Phone Layout	5
2.1	Keys and Parts	5
2.2	Icons and Indicators	6
3	Getting Started	7
3.1	Insert SIM card	7
3.2	Insert Memory card	8
3.3	Unlock the Phone	9
4	Placing and Receiving Calls	11
4.1	Make a Call	11
4.2	Conference Call	12
4.3	Disable Phone Calls (Airplane mode)	13
4.4	Using the Touch screen	13
4.5	Using the Phone's Buttons	14
4.6	Open and Close the Launcher	14
4.7	Switch to Recently Used Application	15
5	The Home Screen	17
5.1	Customize Home Screen	18
5.1.1	Add items to the Home screen	18
6	Working With Menus	19
6.1	Context Menus	20
6.2	Options menus	20
6.3	Menu Icons	21
7	Connect to the Internet	21
7.1	Access Internet via Wi-Fi	22
8	Managing Notifications	22

User Guide

8.1 Open the Notifications Panel.....	23
8.2 Respond to Notifications	23
8.3 Close Notifications Panel.....	24
9 Messaging	24
9.1 Create and Send Multimedia Message.....	25
9.2 Forward a message.....	26
9.3 Lock a Message.....	26
9.4 Using the Onscreen Keyboard.....	27
9.5 Enter Various Characters.....	28
10 Multimedia	28
10.1 Camera.....	28
10.2 Gallery.....	29
10.2.1 Share an Album	30
10.3 Music	30
10.4 FM Radio.....	31
10.5 Record Sounds.....	31
11 Manage Accounts	32
11.1 Why Use a Google Account.....	32
12 Connect to Networks and Devices	32
12.1 Connect to Internet.....	32
12.2 Connect to Wi-Fi Networks	32
12.3 Pair With Bluetooth Devices.....	32
12.3.1 Connect to Internet via your Phone	33
12.4 Install Secure Certificate from SD Card.....	34
13 Applications	34
14 Phone Settings	36
15 Health and Safety Information	38
16 Taking Care of Your Device	40

2 Phone Layout

2.1 Keys and Parts

1.receiver
5.back key
9.camera
13.power key

2.screen
6.search key
10.flash
14.headset hole

3.menu key
7.camera key
11.volume key

4.home key
8.speaker
12.USB



User Guide

2.2 Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New missed calls		WLAN is activated
	USB is connected		Bluetooth is on
	The headphone is being used		Battery symbol
	New message		Airplane mode is activated


3 Getting Started

3.1 Insert SIM card

The R10 is a Dual SIM mobile phone allowing you to use the facility of two networks.

To insert SIM card(s):


1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) (See figure below)

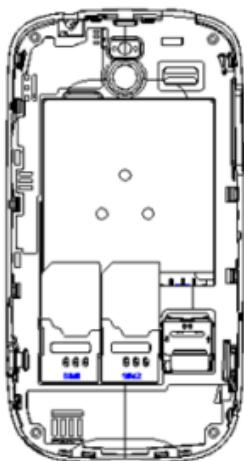

- Finally insert the battery and replace the rear cover of the mobile phone.

3.2 Insert Memory card

- Power off the mobile phone, and then remove the rear cover and battery.
- Insert the memory card into the slot.

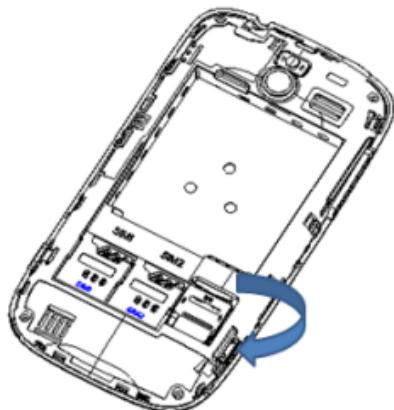

- Finally insert the battery and the rear cover of the mobile phone.

User Guide


Use only compatible memory cards approved by with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

3.3 Unlock the Phone

You may need to provide PIN, Password, or draw a pattern to unlock your phone. To unlock the screen:

1. Press the power key to wake up the phone.

User Guide

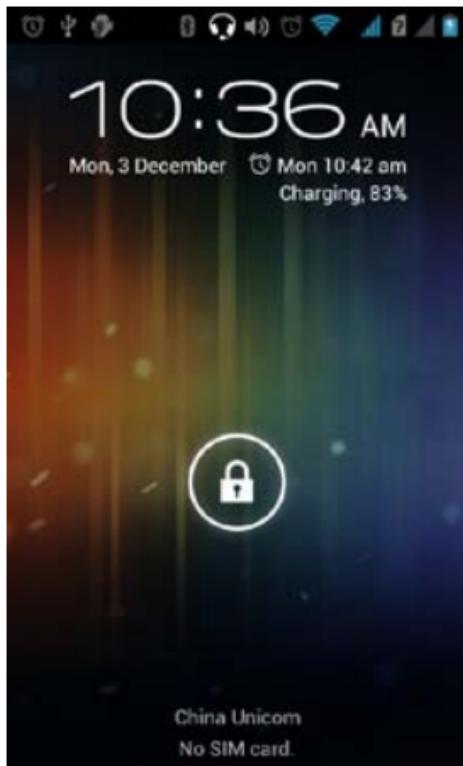

2. Hold and drag the unlock icon to the right to unlock.

You may be required to unlock your phone based on the unlock method in settings.

To set the unlock method:

1. On the main menu, touch **Settings > Security**.

2. Touch Set up screen lock.
3. Choose the type of locking as desired. You can set your screen lock on the basis of pattern, PIN, Password or none.

4 Placing and Receiving Calls

You can dial a phone number or touch a number in your contacts.

You can also place from the Call log or contacts.

4.1 Make a Call



- 1. Tap the icon on main menu or the home screen to dial the desired number...
- Touch the icon on main menu or the home screen to make a call from call log, contact, groups or favorites.
- To dial an international number, touch and hold the 0 key to enter the Plus (+) symbol, and then enter the international country prefix, followed by the phone number
 - Touch the or icon to dial the number.
 - Press the **Volume Up/ Down** keys to adjust the call volume.

- You can access **Call Logs**, **Contacts** from the dialer screen.
- While during a call, touch the  icon to end a call

4.2 Conference Call

If you dial or accept a new call when you are already on a call, you can merge the calls into a conference call.

1. Place a call to the first participant.
2. When you are connected, touch the  icon, the first participant is put on hold and you are prompted to dial the second contact.
3. Place the next call, using the phone tab, the Call log, or your contacts.
4. When you are connected, touch  **Merge calls**. The participant is added to the conference call

4.3 Disable Phone Calls (Airplane mode)

Some locations may require you to turn off your mobile, Wi-Fi, and Bluetooth wireless connections.

1. Press and hold the **Power** button.
2. Touch the **Airplane mode**.

4.4 Using the Touch screen

You can use the touch screen in the following ways:

- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.
- **Touch and hold:** Touch and hold an item on the screen until an action occurs.
- **Drag:** Touch and hold an item and move your finger on the screen until you reach the target position.
- **Swipe or slide:** Quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control zoom, in Maps, and in other applications.
- **Pinch:** In some applications (Such as Maps, Browser, and

Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- **Rotate the screen:** On most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off.

4.5 Using the Phone's Buttons

The phone's buttons offer a lot of functions and shortcuts.

Button	Press
	Back: Opens the previous screen you were working in, even if it was in a different app.
	Home: Opens Home screen.
	Menu: View context menu for working on various screens/applications
	Search: Search can help you find anything you need on your phone or the web.

4.6 Open and Close the Launcher



Touch the Launcher Icon to open the main menu.

You can add an application icon to the Home screen by pressing and holding it until it vibrates and enters Home

User Guide

screen and the release your finger.



The status bar shows the time, signal strength, battery status, on and notification icons.

Slide the Launcher left or right to bring more icons into view.

Touch an application to open it.

Press Home icon or Back icon to close the Launcher.

4.7 Switch to Recently Used Application

1. Press and hold the  icon for a few seconds.

User Guide

2. Touch an icon to open its application. Or press  to return to the current application.

5 The Home Screen

When you sign in, the home screen opens.



The status bar shows the time, signal strength, battery status, and notification icons.

Tap items on the Home screen to open them. Touch and hold an empty spot to add a shortcut to an application, a widget and so on

- The main menu screen is your starting point to access all the features on your phone.
- At the top of the screen, the Status bar displays the time, status, and notifications.

- Touch the main menu icon at the bottom of the screen to view all installed applications.

5.1 Customize Home Screen

You can add applications, shortcuts, widgets, and other items to any part of the Home screen or change the wallpaper.

5.1.1 Add items to the Home screen

1. Press  to open the Home screen.

2. Touch the Launcher Icon  to open the main menu.

You can add an application icon to the Home screen by pressing and holding it until it vibrates and enters Home screen and the release your finger.

- **Widgets:**

To see your widgets:

1. Touch the Launcher Icon  on your home screen.
2. Touch widgets on the top of screen.

From the main widgets screen, you can

- Move between screen: Swipe left or right
- Drag a widget to a home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

You may be asked to make further choices

before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home Screen.

- **Wallpapers:** Wallpapers are images from Gallery, still images included with the system, and live images. They take the place of the default background for your Home Screen.
 1. Touch and hold anywhere on a Home screen that's not occupied.

A list of options appears.

2. Touch a wallpaper source:

Gallery: Choose from pictures that you've taken with camera or downloaded to your device.

Live Wallpaper: Choose from a scrolling list of animated wallpapers.

Wallpaper: Choose from thumbnails of default images.


3. For set wallpaper, touch **corp** at the top of the screen (for Gallery images) or set wallpaper.

6 Working With Menus

The phone provides you with **Context** menus and **Options** menus for accessing the features in an intuitive way.

6.1 Context Menus

- You can open context menu by touching  key.
- Not all screens have context menus. If you touch  key that has no context menu, nothing happens.

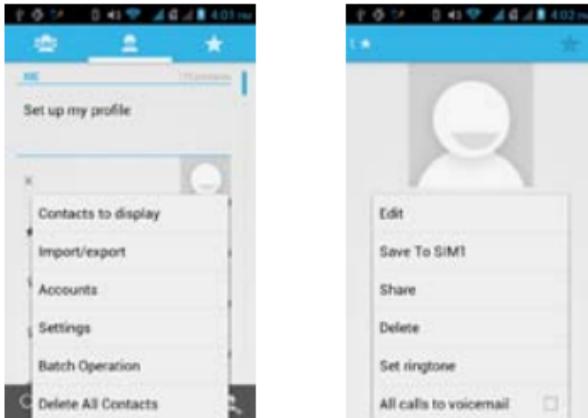

6.2 Options menus

Options menus contain tools that apply to specific items on the screen. You can open an option by touching and holding an item on the screen. Not all items have options menus.

When you touch and hold some items on a screen, an Options menu opens.

6.3 Menu Icons

You have the following menu icons to easily let you access its important features:

	Opens the dialer
	Opens messaging
	Opens the main menu
	Opens the call logs
	Opens the browser

7 Connect to the Internet

To configure your Internet:

1. Go to **Settings > Wireless & Networks > More > Mobile Networks** >Tap **Data Enabled**.
2. By default, your network provider sends the access point name settings via SMS, or it comes with your SIM card. You may need to install these settings. After this, you can

choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.

3. To add any operator Access point Name, go to **settings > More > Mobile networks > Access Point Name**.
4. After you have selected or configured the access point name, go to **Settings > Wireless & Networks > More > Mobile Networks** >Tap **Data Enabled** to enable Internet connection.

7.1 Access Internet via Wi-Fi

To browse the Internet via Wi-Fi:

1. Go to Menu > System settings > wireless & networks and then tap Wi-Fi.
2. Next, go to **Menu > settings > wireless & networks > Wi-Fi Settings** and then enable Wi-Fi. Next, select the WIFI connection listed under Wi-Fi networks.

8 Managing Notifications


Notification icons inform you of new messages and events.

When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

User Guide

8.1 Open the Notifications Panel

Drag the status bar down from the top of the screen as shown below.

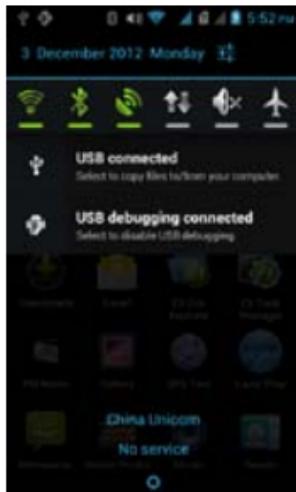

The Notifications panel displays your network provider name and a list of your current notifications.

8.2 Respond to Notifications

 
1. Open the notification panel and touch a notification to respond to it.
2. What happens next depends on the notification.

8.3 Close Notifications Panel

3. Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.

9 Messaging

You can use Messaging to exchange text messages and multimedia messages with your friends.




Touch to open a messaging conversation

Touch to compose a new text or multimedia message.

You can also press the  key and open the context menu to work on messages and their settings.

 User Guide




A Message becomes an MMS if you send it to an email address, or add multimedia media file(s).

9.1 Create and Send Multimedia Message

1. Touch compose new message.
2. Enter or select a mobile phone number.
3. Touch the composition text box and enter your message body.
4. Touch the key to open the context menu.
5. Touch **Attach** to attach various types of files.
6. Send the MMS.

9.2 Forward a message

1. Open a message and then touch that message in a message conversation window.

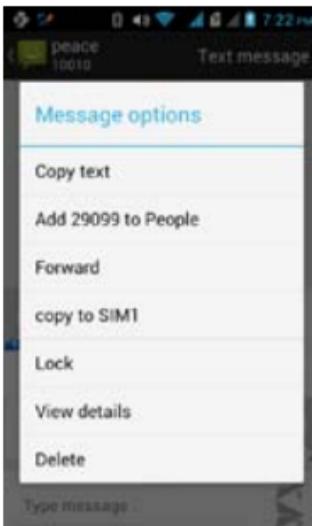

2. Touch **Forward** in the menu that opens.
3. Add a contact.
4. Touch **Send** to send the message.

You can also Copy message text, Save message to SIM card, View message details and delete message.

9.3 Lock a Message

You can lock a message so it won't be deleted if you reach


User Guide

your storage limits.

1. Touch and hold message in a message window.
2. Touch **Lock message** in the menu that opens. Unlock a message by touching and holding it and then touch **Unlock message**.

9.4 Using the Onscreen Keyboard

Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

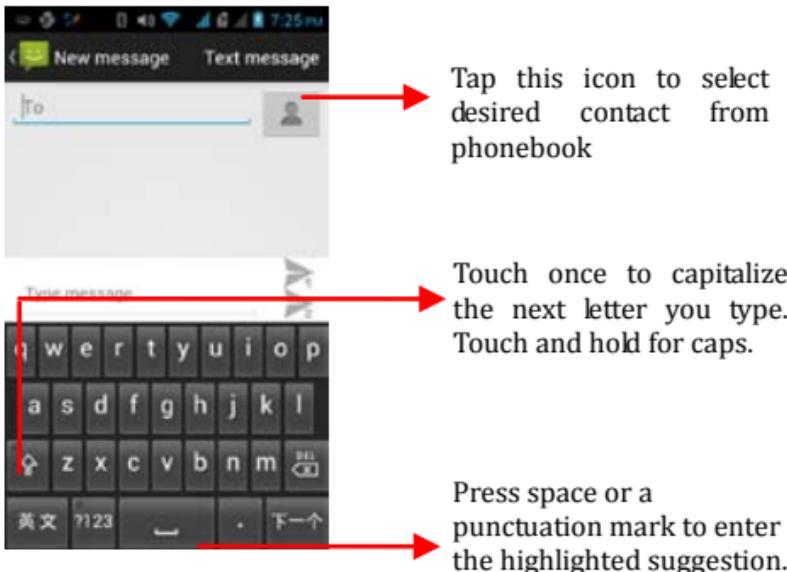

- Use the  icon to erase characters.
- After typing, press  icon to close the keyboard.

9.5 Enter Various Characters

- Press the symbols key to switch to the numbers and symbols keyboard.
- Touch and hold the text field to open a menu and to copy/cut texts.

10 Multimedia

10.1 Camera

Your camera's pictures and videos are stored in both the SD card and device. You can copy pictures and videos from both the SD card and device to a PC and vice versa.



Touch settings to change them

Touch to take picture/video.

View albums and photos

Touch to change between video/camera mode.

10.2 Gallery

You can use the Gallery to view pictures and play videos and share files.

1. Touch the Gallery icon in the main menu or in the camera mode.



2. Open Gallery from the camera by touching

3. Touch an album to open and view its contents.
4. Touch a picture or a video in an album to view it.

10.2.1 Share an Album

1. Open the main Gallery window.
2. Check or uncheck the albums you want to share.
3. Touch the  icon at the top of screen to **Share** via Bluetooth, Email. Or touch the  icon at the top of screen to **Share** via MMS.

You can share via email, Bluetooth, Gmail messaging and so on.

10.3 Music

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

- Touch the  key or the intuitive buttons and icons on the phone in music interface to enjoy the features of your music player.
- Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

10.4 FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.



- Touch the key or the intuitive buttons and icons on the phone in Radio interface to explore and enjoy the features of your inbuilt FM radio.
- Press the phone's volume up/down keys on the left side of the mobile phone to adjust the volume.

10.5 Record Sounds

1. Touch Sound Recorder in the main menu.
2. Tap to start recording a voice clip. "Recording" appears when it is recording a voice clip.
3. Tap to stop and save the recording.

11 Manage Accounts

You can set up a corporate, Google account etc on your device. You can do this by tapping **Settings> Accounts & sync> Add Account**:

11.1 Why Use a Google Account

Your Google Account lets you take full advantage of Google applications and services that you may want to use, such as Gmail, Google Maps, Navigation, Android Market, YouTube, Messaging, and many more.

12 Connect to Networks and Devices

Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

12.1 Connect to Internet

Refer to section 7 for details.

12.2 Connect to Wi-Fi Networks

Refer to Section 7.1 for details.

12.3 Pair With Bluetooth Devices

1. Go to Settings > Wireless & networks> Bluetooth

settings.

2. If Bluetooth is off, check **Bluetooth** to turn it on. Your phone scans and display the Bluetooth devices in range.
3. If the device you want to pair with is not in the list, make it discoverable.
4. If your phone stops scanning before you make the other device discoverable, touch **Scan for devices**.
5. Touch the ID of the other device in the list Settings to pair them. If you are prompted to for a password, enter any password on one device and enter the same password you entered in the other device to be paired.), If the pairing is successful, your phone connects to the device.

12.3.1 Connect to Internet via your Phone

You can browse the Internet on your PC using your mobile phone. To do this:

1. Connect your mobile phone to your PC via the USB adaptor.
2. Go to Settings> Wireless & Networks>More>Tethering & portable hotspot and then touch USB Tethering.

A prompt for installation will appear on your PC. Proceed as suggested.

In case of Linux, Windows 7 and Vista OS, the drivers get

automatically installed.

However, in case of Windows XP, you need to manually install the drivers.

12.4 Install Secure Certificate from SD Card

If your VPN or Wi-Fi Network relies on secure certificates, you must obtain the certificates and store them in your phone's storage, before you can configure access to those VPN or Wi-Fi networks on your phone.

You may need to download the certificates from a website.

1. Copy the certificate from your computer to the root of the SD card.
2. Touch **Settings> Location and Security**.
3. Touch Install from SD card under Credential Storage.
4. Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
5. If prompted, enter the certificate's password and touch **OK**.
6. Enter a name for the certificate and touch **OK**.

13 Applications

The phone has a default configuration including these

User Guide

applications:

Adobe Reader, Aldiko, Angry birds, APK Installer, CineShowtime, Deezer, Ebuddy, ES Task Manager, Eurosport, Lazer play(slideme Market), Invadroid, Solitaire, Worldnews, file management, FM radio, Bluetooth

Discover all others apps at LAZER Play (SlideMe) ressources.

1. Download thousands of applications Android directly from LAZER PLAY (SlideME).
2. Install your own applications from APK files with APK installer
3. Control hardware resources with ES Task Manager & ES File Explorer & Task Manager
4. Stay connected with FM radio, with Bluetooth, with Web Browser through Wi-Fi and Data.

14 Phone Settings

You can go to Settings to customize your phone's preferences and behavior in a variety of ways:

Dual SIM setting	Lets you choose your active SIM and associated features
Wireless & networks	Lets you configure and manage connections to networks and devices by Using Wi-Fi, Bluetooth, and mobile networks.
Call settings	Lets you configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.
Profile Settings	Lets you configure how and at what volume the phone rings, vibrates etc.
Display	Lets you configure brightness and other screen settings.
Battery	Lets you check the battery level and status
Location services	Lets you set the location related settings like wireless network, GPS settings for your phone.

User Guide

Security	Lets you set the security settings for your phone.
Applications	Set preferences for the various application displayed on the phone menus.
Accounts & sync	Lets you add, remove and manage your Google and other supported accounts
Privacy	Lets you manage your personal information.
Storage	Lets you see and manage available space on your phone and on your SD card.
Language & keyboard	Lets you select the language for the text on your phone and for configuring the onscreen keyboard.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Date & Time	Lets you choose preferences such as format and time zones
About phone	View information about your phone, such as system updates, status, and battery use.

15 Health and Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (SAR)

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.
- SAR (specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The true SAR level during phone usage will be far lower than this level.
- The SAR value of the phone may change depending on factors such as how close you are to a network tower, use of accessories and other enhancements.
- The highest SAR value of the device is 0.662 W/kg (head) and 1.112 W/kg (body) averaged over 1 gm of human tissue.
- The SAR value may differ depending on national reporting, testing requirements and the network band.

User Guide

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the

manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations instruct you to do so.

- Do not carry the wireless device in the breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

16 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its

User Guide

moving parts and electronic components can be damaged.

- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. will not be responsible for user's safety

User Guide

when using unapproved batteries or accessories.

Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.info.com/weee.php.

Disclaimers

- *The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.*
- *The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the*

User Guide

later shall govern.

- Keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.
- For devices with external power supplies, plug socket should be placed in short distance and easily accessible.
- Using the wrong type battery replacement there is a danger of explosion, be sure to follow the instructions disposal of used batteries

Copyrights:

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of is strictly prohibited.

For Product Support:

- Helpline number: 01144770044
- Working Hours: Monday to Saturday 10:00 AM to 6:30 PM (Except National & Public holidays)
- Email Support: service.superfone@info.com
- For more information, please visit our website www.info.com.

User Guide

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: Venus(FCC ID: ZCL-KA1000) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.613W/kg and when properly worn on the body is 1.03W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the

User Guide

following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

User Guide

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.