

Operating Instructions for your GUIDE model

- 1) Install battery connections.
- 2) Locate the Red switch (Main Power) on the bottom the decoy, press once to turn power on, press again to turn power off.
- 3) Locate the Green and Yellow buttons under the shell on the top of the circuit board toward the rear of the decoy behind the battery. The green button cycles thru all of the start functions of the decoy, the yellow button stops all the functions of the decoy,
- 4) Press the Green Button once for Hi speed wing function. Press the Green Button again for Low speed wing function. Press the green Button one more time for the Timer (start and stop) wing function. You can roll thru all the functions without pressing the yellow button in between. Set to your desired function.
- 5) Press the yellow button to stop any wing function at any time.
- 6) Only the Red (Main Power) switch disconnects power to the circuit board. Make sure power switch is set to off before recharging battery. The excess power of charging could damage the electronics of your decoy.

7) REMOTE OPERATION:

- A) Button 1 (left button) controls the stop function (same as yellow button in manual mode),
- B) Button 2 (right button) controls the different modes (same as green button in manual mode),
- C) Just like the manual operation, you can roll thru all of the different functions without stopping in between.

RX-3302D Remote Control Duck Decoy, TX-3312N Xmtr Keyfob 2 Channel

THIS EQUIPMENT COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

American Plastics, Inc.
15001 Mail Route Road
Little Rock, AR 72206
(501) 888-7407