


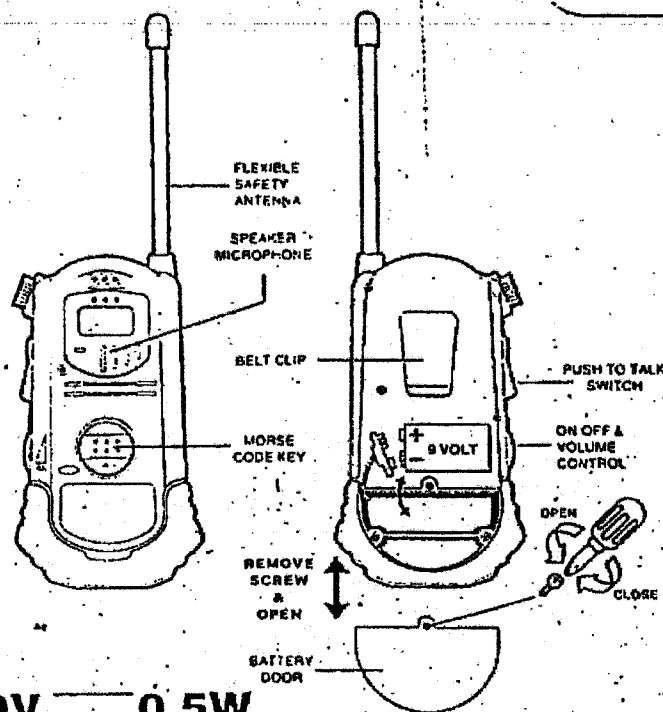

9V — 0.5W

**EACH UNIT USES ONE 9V BATTERY (NOT INCLUDED)
COLOR & DESIGN MAY VARY**

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Replacement of batteries must be done by an adult.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**FOR PRODUCT QUESTIONS,
CALL 1-800-8363126**



© 1999 200 TOY INC.
MILFORD MASSACHUSETTS 01757, U.S.A. MADE IN CHINA

HOW TO OPERATE YOUR TRANSCEIVER

1. Remove screw and open battery door and snap in a 9-volt battery. (Alkaline batteries recommended)
2. Turn the "ON-OFF" switch to "ON" position. Your transceiver is now ready to operate.
3. Press the "PUSH TO TALK" switch for transmitting.
4. Release "PUSH TO TALK" switch for receiving.
5. When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
6. Best transmission and reception are obtained when the antenna is held in a vertical position.
7. Operation range - up to 200 feet, line of sight, in open area without obstruction & interference.

HOW TO USE MORSE CODE FUNCTION

1. For transmitting a signal, turn the "ON-OFF" switch to "ON" position.
2. While pushing the push to talk button, press the morse code button momentarily and release for desired signal.
3. And for receiving a signal, adjust volume control for normal listening level.
4. When back to communications again, use normal push to talk operation.

CAUTION

1. Your transceiver set has been fully adjusted prior to shipment from the factory and be sure not to touch the internal components other than battery.
2. When the sound becomes weak, it is time to change the Battery.
3. After use, always return the ON-OFF Switch to the OFF position.
4. Keep your set in dry and clean place.



ITEM NO. 10046



200 TOY (HK) LTD.
FCC ID : O4Y 10046
JOB # : 295BH0

EXHIBIT # :

4