 
 
 


## **ITEM NO. 10663**

 
### **GETTING STARTED**

1. Pull TAB and slide off belt clip before remove screw and open battery door.
2. According the correct polarities as shown, insert 4 AA batteries (Alkaline batteries recommend) into each unit and secure battery cover.
3. Press and hold  key for 3 seconds to turn each unit on.
4. LCD screen displays all icons for 2 seconds then goes to time 00:00
5. Use Volume Control Knob on side to adjust volume level
6. When transitting, speak clearly in a normal voice, holding the set about 3 inch from your mouth.
7. Best transmission and reception are obtained when the antenna is hold in a vertical position.
8. Item will now function as a walkie talkie. Press "PUSH TO TALK" button and starting to talk after finish hearing the TX signal. Push to talk, listen to receive.
9. If left idle for 3 minutes the screen will displays the word "IDLE"
10. Push any key to go back to time on screen.

### **SETTING RING TONE**

1. Press  key then use  and  to select "TONE" from menu and press .
2. Use  and  to select from 4 ring tones and press "ENTER" for the one you choose.

### **SENDING PRE SET TEXT MESSAGES**

1. Press  key then use  and  to select "MESSAGE" and press .
2. Select "TEMP" then press  again.
3. Choose your pre set message from the list and punch in the number or sign.

 
1. WHERE ARE YOU?
2. CALL ME AS SOON AS POSSIBLE.
3. HEY, WHAT IS YOUR PLAN?
4. WHAT ARE YOU DOING?
5. LETS PLAY WITH WALKIE TALKIES.
6. HOW ARE YOU?
7. TOYS ARE FUN.
8. CAN YOU PLAY?
9. KIDS, ARE YOU THERE?
10. OVER AND OUT.

\*

#

4. Press  , select from channels 1 through 4 and press  again to send.

### **WRITING YOUR OWN TEXT MESSAGES**

1. Press  key then use  and  to select "MESSAGE" and press .
2. Select "WRITE" and press  again.
3. Press the number key of the letter you want once for the first letter, twice for the second letter, or three times for the third letter on the number.
4. When the cursor appears after the letter you choose, enter the next letter or sign in your message up to 36 characters.
5. Press  to delete the unwanted number(s)/or letter(s).
6. Press  to move cursor forward and  backward.
7. Press  , select from channels 1 through 4 and press "ENTER" again to send.


## RECEIVING NEW TEXT MESSAGES

1. Unit will beep when new messages are received.
2. After reading your message press  to select "REPLY" or "DELETE".
3. Messages will be automatically saved after 10 seconds if you do not use the  key.

## READING SAVED TEXT MESSAGES

1. Press  key then use  and  to select "MESSAGE" and press .
2. Use  and  to Select "READ" and press .
3. Use  and  to select inbox 1 through 4 and press .
4. Each inbox holds up to 4 messages of 36 characters long/each message.
5. Messages are replaced by the last message received after the inbox is filled
6. When you have read your messages you may store them in the inboxes or press  to using  and  to select "REPLY" or "DELETE"

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

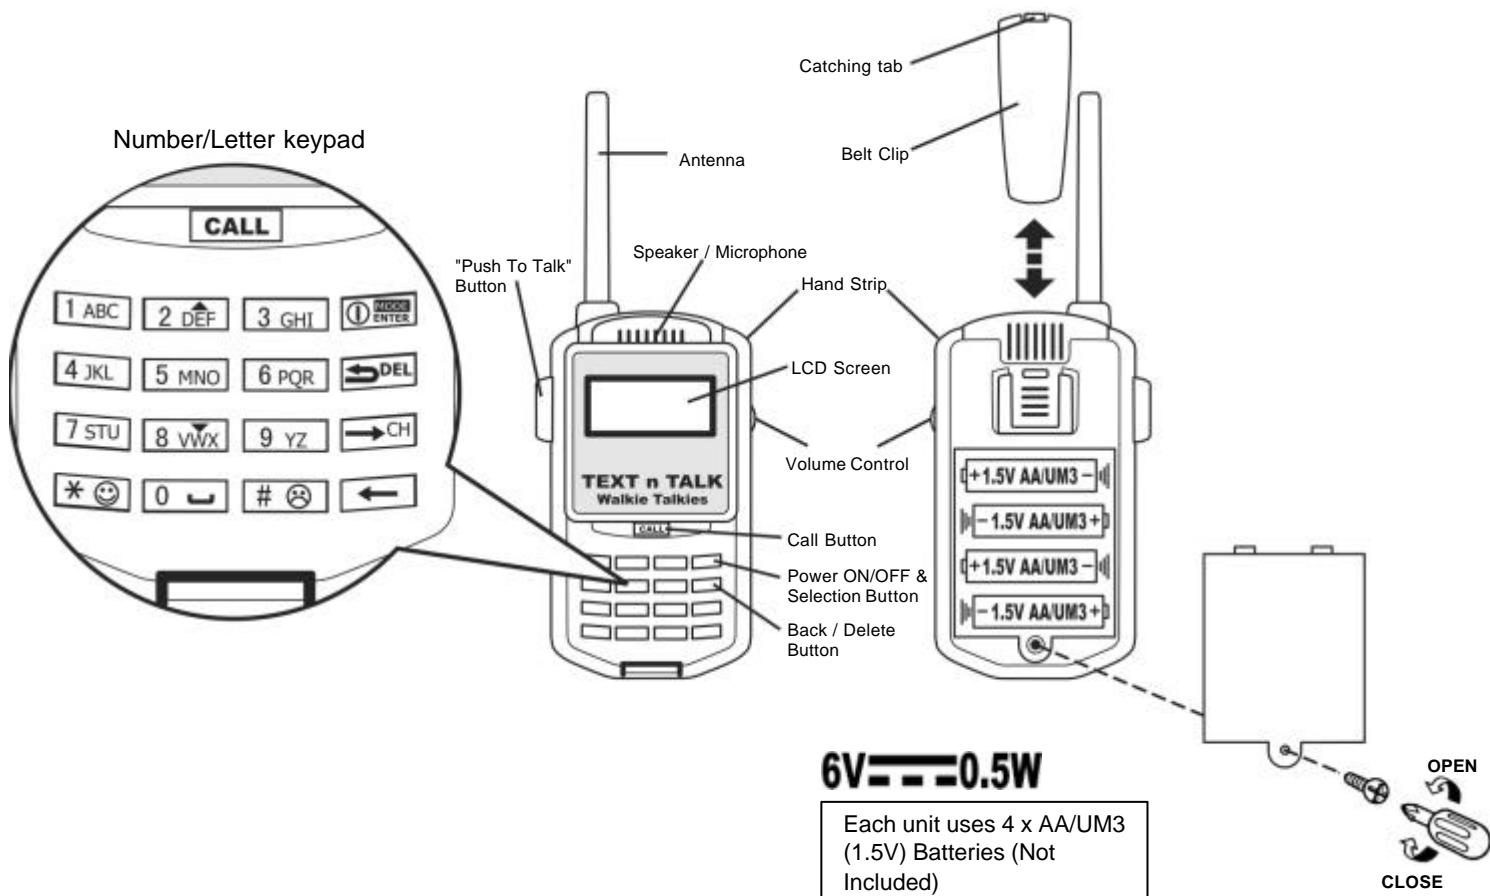

This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
1. This device may not cause harmful interference, and  
2. This device must accept any interference received,  
including interference that may cause undesired operation.