


BACK

- DO NOT drive the shark into walls, doors or furniture.
- DO NOT drive the shark off elevated surfaces or drop from furniture.
- DO NOT drive the shark into people or pets.
- DO NOT sit on the shark or do anything to restrict its jaw from chomping.
- DO NOT drive the shark through water. Do not submerge shark in water.
- This is an electronic toy and should not be exposed to water.
- If the shark performs erratically or stops working properly, turn the shark and remote off, then on again. If the problem persists, replace any old batteries with fresh, new batteries.

ASSEMBLY

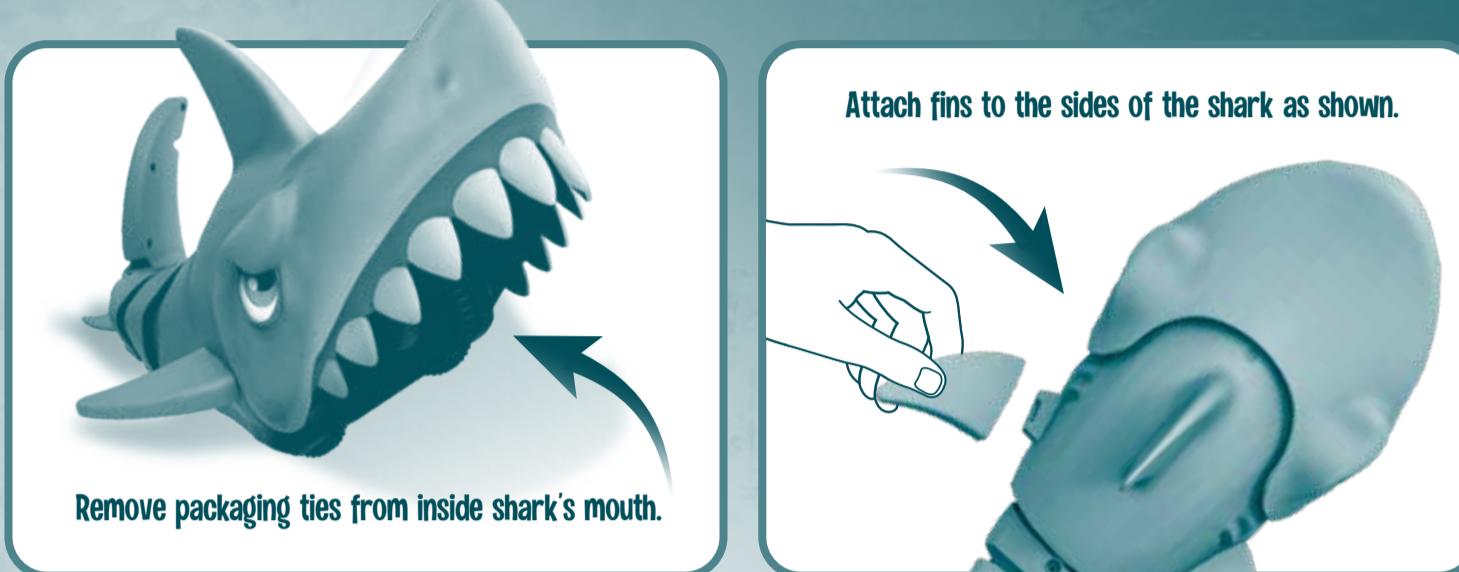

Processing of electric and electronic equipment at the end of their service life (applicable in member countries of the European Union and other European countries operating a selective waste collection system). This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased. During the replacement of your used batteries, we request that you follow the current regulations as to their disposal. Please do not dispose of them in a normal household waste bin.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

Remove all packaging attachments before giving the toy to a child. Not suitable for children under 3 years due to small parts that could be swallowed.

Conforms to product safety standards ASTM F963. Keep instructions for future reference. Do not discard.

The information presented in these instructions are believed to be currently accurate and reliable; however no warranty, either express or implied, is made.

Any recommendations or suggestions are made without warranty or guarantee, since among other reasons, the conditions of storage and use are beyond our control.

Questions or comments? Please email support@skyrockettoys.com

©2022 Skyrocket LLC, Los Angeles, CA 90066 USA. All rights reserved. Mega Chomp and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Skyrocket UK LTD, Office BG9, Lancaster Court, 8 Barnes Wallis Road, Fareham PO15 5TU.

Skyrocket Toys LLC, C/O Regional Express GMBH, Darmstrader Landstr 116, 60598 Frankfurt am Main, Sachsenhausen, Germany

MADE IN CHINA

FCC ID: O5318493RX24G

REMOTE FCC ID: O5318493TX24G

ITEM# 18493

SKYROCKET

18493_US_G1

FRONT

4+

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

BEWARE OF SHARK INFESTED FLOORS!

Mega Chomp is the mega-sized great white shark you control on land. Chomp anything in its path!

BATTERY SPECIFICATIONS & CAUTIONS

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
- Batteries must be inserted using correct polarity (+ and -).
- Remove exhausted batteries as soon as possible and discard properly.
- Remove all batteries from compartment if it is not used for a long period (7 months).
- The supply terminals are not to be short circuited.


WARNING: Batteries are harmful if swallowed. Please keep away from children.
Battery Disposal: Dispose of batteries according to the local laws and regulations of your region. Some batteries may be recycled, and may be accepted for disposal at your local recycling center. If you are not able to identify the applicable rules in your area, please check the instructions of the battery manufacturer.

ADULT SUPERVISION REQUIRED

INSTALL FRESH BATTERIES FOR BEST PERFORMANCE

Have an adult install fresh batteries into both the remote and shark.

6x 1.5V AA LR06 (not included)

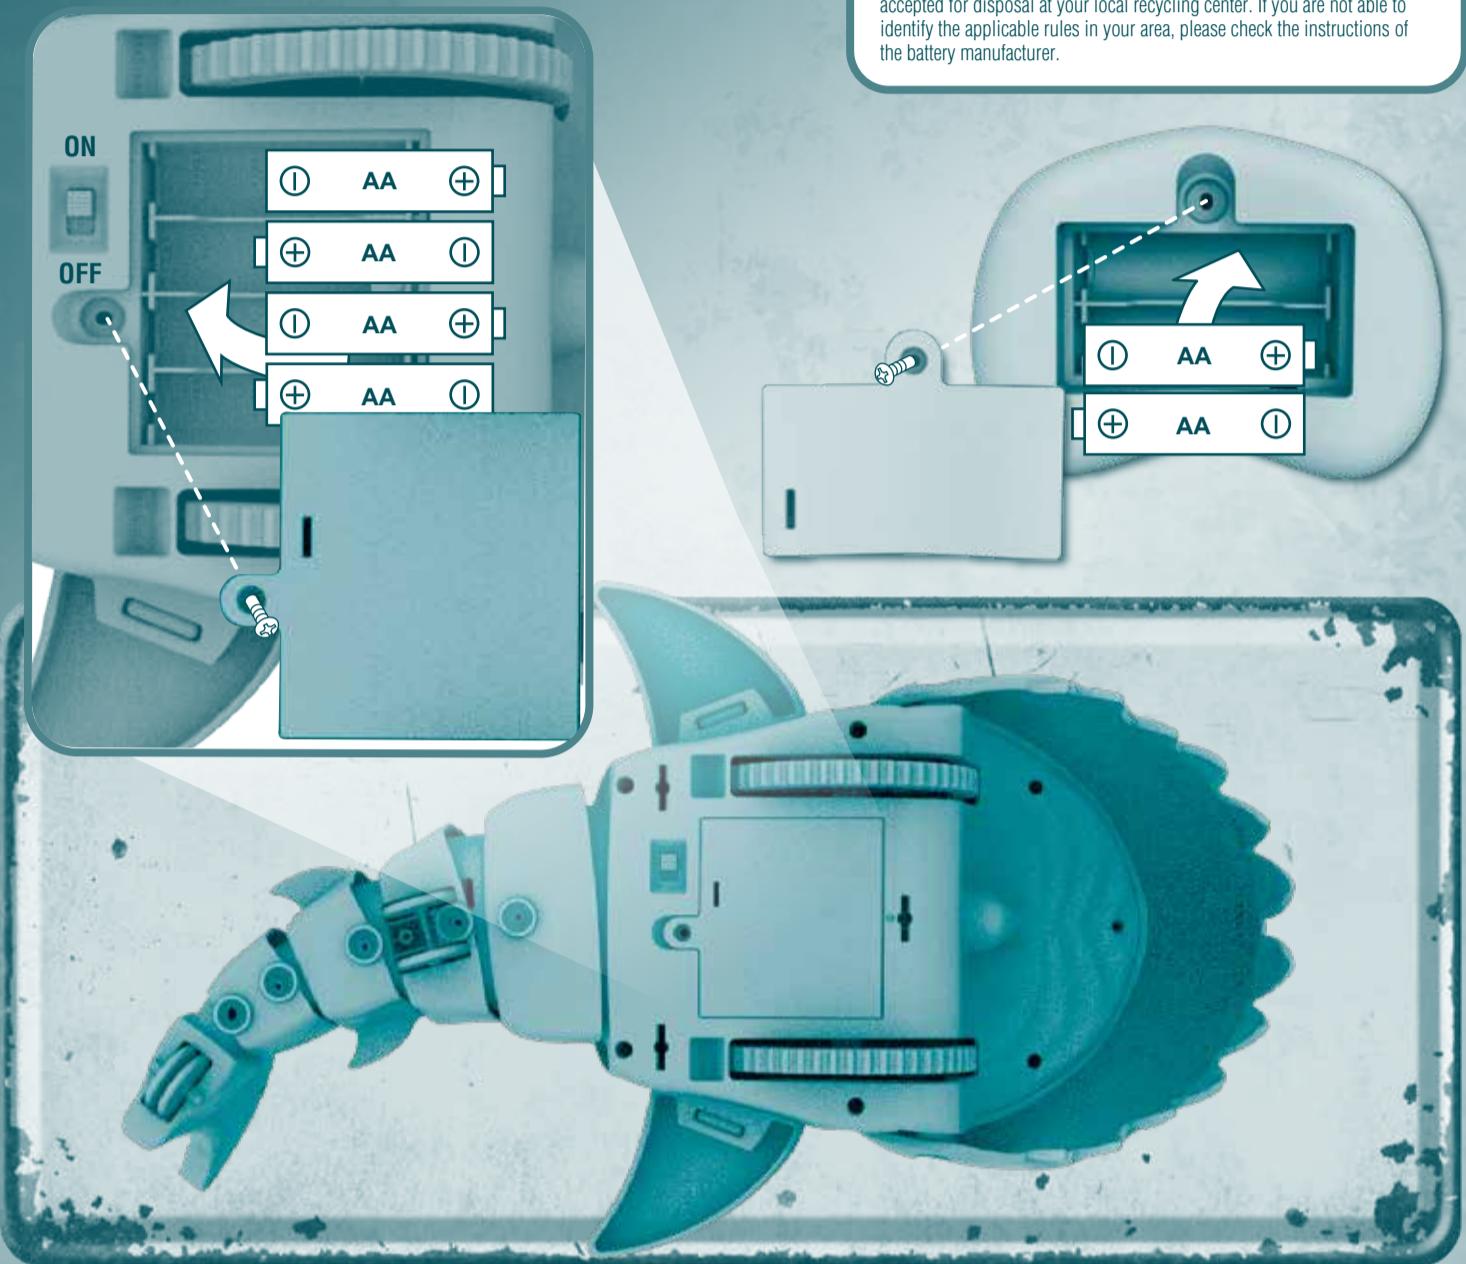


INSIDE

CONTROLLING MEGA CHOMP


Turn on the shark and remote, then place the shark on the floor in a large open area. The shark is easiest to control when standing behind it. The jaw will automatically chomp as it moves forward.



Slide HEAD up to swim forward

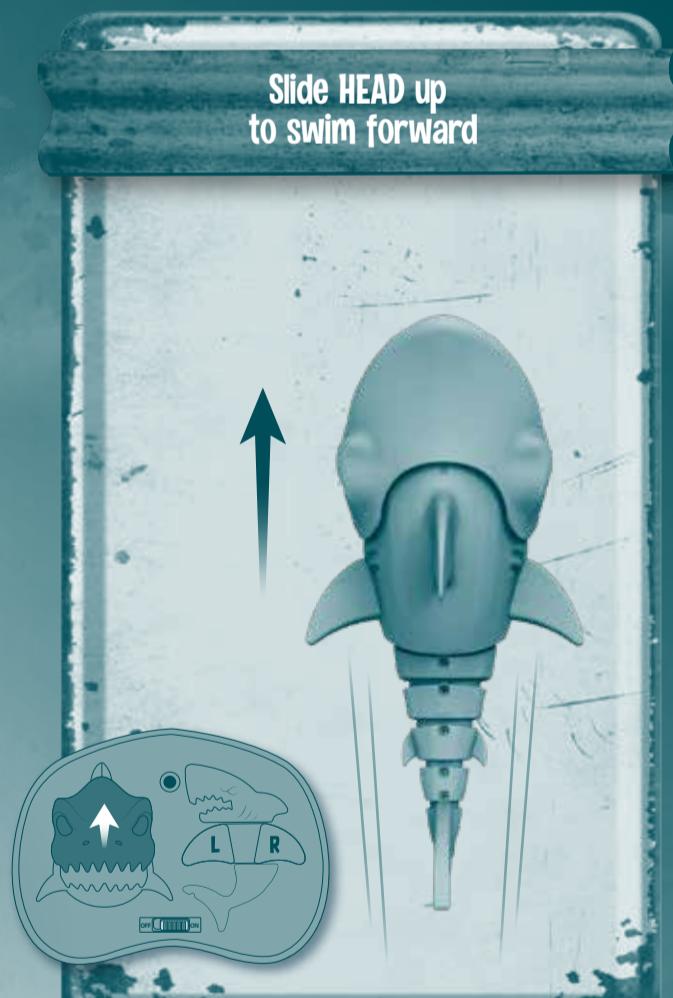

Slide HEAD all the way up to swim faster

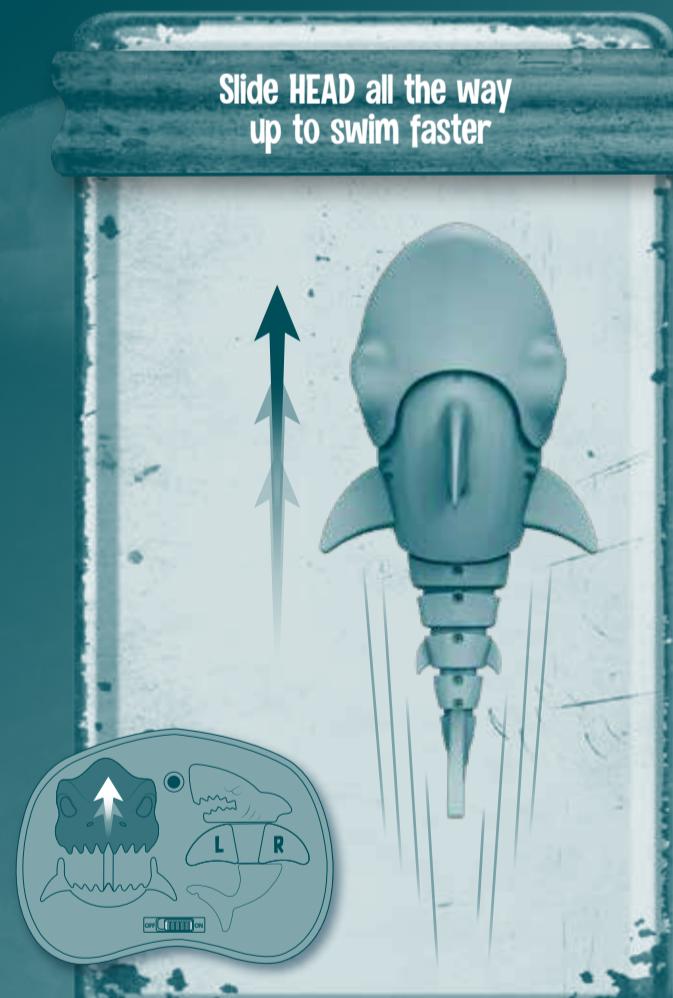


Slide HEAD down to back up




Slide HEAD and FINS left to turn left



Slide HEAD and FINS right to turn right

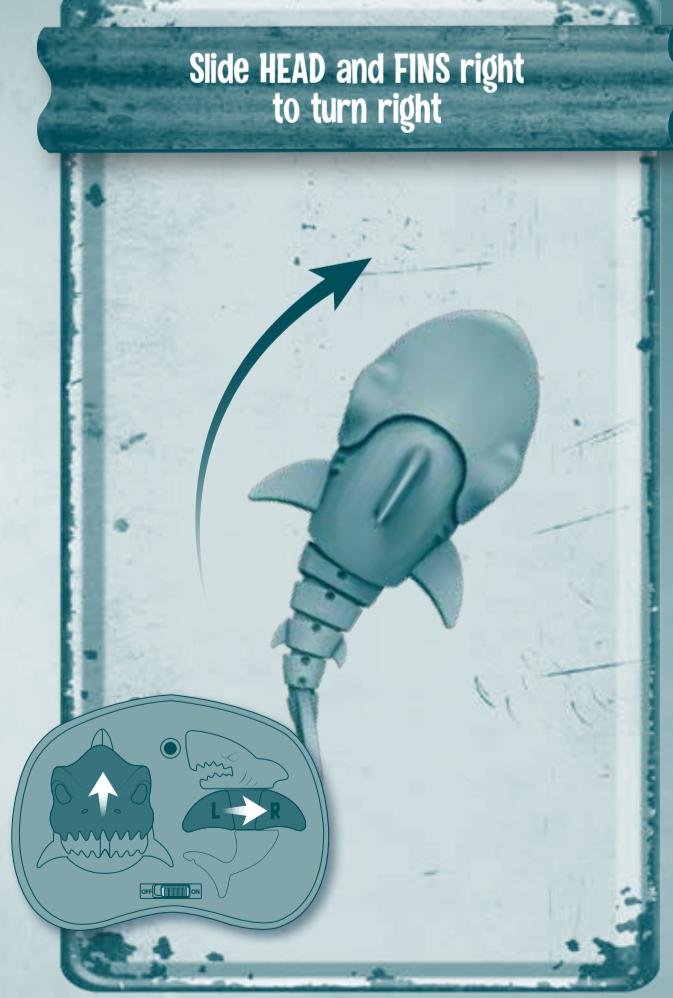

Slide FINS left to spin left

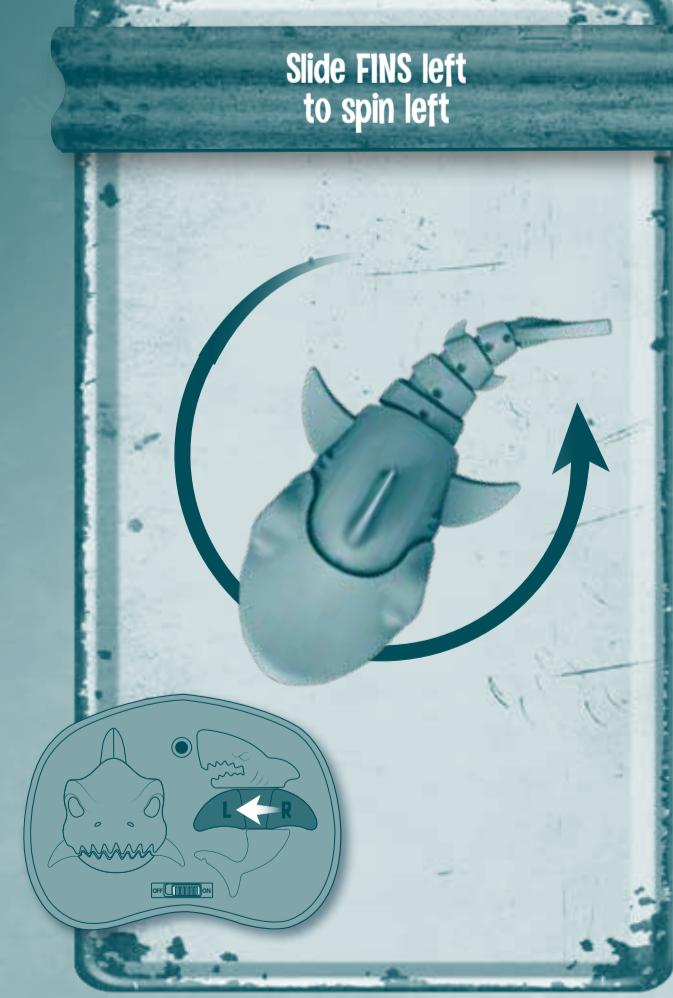

Slide FINS right to spin right

