FIXO 240L

Android 12 is the Operating System for your MT6761.

INTRODUCTION

Thanks for choosing FIXO 240L , Android, 4G smart phone based on 2.0 GHz Quad Core Processor. This smartphone is running on Android 12 OS.If you'd like your phone to live a long and furitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

Contents

1	1 Safety3				
	1.1	Safety Precautions	3		
	1.2	Using your phone safely	3		
2	Und	erstanding your Phone	6		
	2.1	Your Phone	6		
	2.2	Description Icons	6		
	2.3	Charging the battery	8		
	2.4	Power ON/OFF	9		
3	Usir	ng your Phone	10		
	3.	1 Function menu Introdu	uction		
			10		
4	Taki	ng Care of your Device	13		
5.		C Information			

1.1 Safety Precautions



Please read through the following briefings carefully and act in accordance with these rules, so as to prevent causing anydanger or violating any law.

- W/kg@1g(Head) W/kg@1g(Body)
 Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.

 If you are using a Bluetooth headset device, please make sure it has a low power emitter.

ROHS Declaration
Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O.1035 (E) of Ministry of Environment and Forests)

- The Product is in conformity with the requirements of Rule 13 of the e-waste Rules. The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:

 a. Lead (Pb) not over 0.1% by weight;

 b. Cadmium (Cd) not over 0.01% by weight;

 c. Mercury (Hg) not over 0.1% by weight;

 d. Hexavalent chromium (Cn6+) not over 0.1% by weight;

 e. Polybrominated biphenyls (PBBs) not over 0.1% by weight;

 f. Polybrominateddiphenyl ethers (PBDEs) not over 0.1% by weight.

1.2 Using your phone safely



Using a phone while driving is illegal in many countries. Please follow local laws and drive safety at all times.



Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or automated office



Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



Keep your phone away from water (or any other liquid). It's not a waterproof model.



Never take your phone apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty.



Don't use your phone if the antenna is damaged, as it could cause injury.



Keep your mobile out of children's reach. It should never be used as a toy and it might not

be good for their health.



Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



The working temperature for the phone is between 0 Degree and 40 Degree Celcius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.

2.1 Your Phone



2.2 Description Icons

Keys Functions

-6-

-	
	Press this button to return home from any application or interface.
	•When the screen is off, short press it to turn on the screen, short
	press it to turn off the screen when on the homepage.
	You can press it to reject the call or hang up during an incoming call
Hang up	or call.
	●Long press it to open the phone's menu, then you could choose to
	restart phone or turn off the phone.
0.41.4	●In some application interfaces, you can click on it to bring up the
Soft left	•In some application interfaces, you can click on it to bring up the application menu.
Soft left	
Soft left Soft right	application menu.
	application menu. •Press it to return to the previous interface, or to close dialog
	application menu. •Press it to return to the previous interface, or to close dialog box ,options,menu notification panel or the keypad.
	application menu. Press it to return to the previous interface, or to close dialog box options,menu notification panel or the keypad. Long press it to open recently opened Memory cleaner.

-	
Up	You can move the cursor position by short-pressing it or long-pressing it.
	iong-pressing it.
	●You can move the cursor position by short-pressing it or
_	long-pressing it.
Down	●When on the homepage, you can bring up the notification bar by
	long pressing it.
Left	●You can move the cursor position by short-pressing it or
	long-pressing it.
Right	You can move the cursor position by short-pressing it or
	long-pressing it.
	●The cursor selects the menu or the mouse selects the menu, you
ОК	can click ok to confirm. When the confirmation menu is not
	displayed, you can also click ok to confirm.
	You can enter characters through the numeric keyboard in the
Numeric keyboard	editing interface or the dial interface.
(0~9, *, #)	You can quickly enter the dial pad through the numeric keyboard on
	the homepage.

Some characters (for example: 0, *, #) have special usage in some scenes, please continue to check this description for detailed usage.

2.3 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged full. It is easy to do & can be done in 3 simple steps below:

- 1. Connect the charger to your phone, and plug it into a socket.
- The battery icon in the corner of the screen will display a battery icon with a lightning bolt, indicating that it is charging.
- When fully charged, the battery icon will appear as a battery icon without lightning, indicating that charging has stopped.
- 4. Disconnect the charger from your mobile, and unplug.

2.4 Power ON/OFF

Long press the hang up key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

Input SIM PIN: If you've set a PIN for your SIM.

Note

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.

3.1 Function menu Introduction

1.Phone

You can input the number and press the dial key to call the number.

Call settings
-Call waitting
Open this feature, during the call if the new call, the network will notify you. Specific use with your network provider.

Avtivate lanch the function.
Deactivate Close the function.
Query status Query the function's status.

-Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify. The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls.

-Call barring

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your network provider. Network provider will provide a four password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

-Blacklist:
1.Reject numbers in blacklist:You can select on or off.
2.Blacklist numbers:You can add blacklist numbers.

2.Call History

All calls

Enter the All Calls menu and the records of all call lists will be displayed. For details, please refer to Missed Calls. Missed Calls. Missed call menu, and the missed call list will be displayed. Select the missed call record and press the "OK" key:

-View View details.

-Telephone call record number.

-Send SMS to contact person.

-Save phonebook Save the number to your phone or SIM card.

-Blacklisted Set the number as the blacklisted number.

-Delete Delete number.

-Option

-Call details

-Send Message

-Create new connect

-Add to a contact

-Block number

3.Clock

New alarm clock: You can set the on/off, time, repetition and prompt tone of the alarm clock. You can choose to set it as repeated: once, every day, customized.

Timer: You can use a timer to count down the duration of an activity. You can set "Time", "Start", "Delete", "Stop", "Add", etc.

Stopwatch: You can use the stopwatch to record the duration of the activity. You can perform Start, Stop, Continue, Record, and Clear operations.

4.Contacts

You can use the contact store record to store the following contents: Name and phone number. In the contacts list, select a contact to make a call when you press the dial key. To select a record from the contacts, you can perform the following operations:

- Send Message Sends an SMS message to another phone number.

-Make a call Make a call to another number.

- Edit Contacts You can edit and save contacts.
- Delete Contacts Delete contacts from the mobile phone.
- Contact Settings menu:

If you select SIM, Phone, or all, the phone book list changes accordingly. For example, if you select SIM, the phone book list displays only the contact records in SIM.

5.Messaging

Make sure that the written information before the message center number is set correctly. To access a message menu, you can edit the message and send it to the contact.

Create a new message, edit the message content, select the recipient, and send the message.

Option

- -Delete all threads
- -Create new message
- -Voice Messages
- -Search
- -Settings

6.Settings

Modify settings under the following:

- Screen lock
- Bluetooth
- SIM cards
- Display
- Notifications
- Sound
- Apps
- Battery
- Security
- Language & input
- Date &time
- About phone

7.FM Radio

Enter the radio and the following operations can be performed:

-Recording Press the left software key to record audio on the radio.

-Adjust the volume Long press the * and # keys to adjust the FM playback volume.

-Add to Favorites You can collect channels in favorites.

-Switch to the loudspeaker You can turn the radio into a loudspeaker

8.Camera

Your phone has a high-definition camera, so you can take pictures anytime, anywhere, and save them to your phone or memory card.

In the preview state, press "3" key to enter the setting interface

Switch to Video: You can switch to Video.

Gallery: You can press "soft left"enter the gallery to view photos.

Mode: You can select photo mode or video mode.

Camera resolution: low or standard and high.

9.Bluetooth

Power: Turn on bluetooth or not.
Pair new device: Search bluetooth device list

4 Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture
 can contain minerals that will rust electronic circuits. If your device does get wet,
 remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper
- Use indoor chargers.

Use a dry soft cloth to wipe general dirt.
Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Recrietor relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult your local RadioShack store or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by *RadioShack* may cause interference and void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device 4G Fixed phone (FCC ID: O55240123) has been tested against this SAR limit. SAR information on this can be viewed on-line at http://www.fcc.gov/oet/ea/fccid/. Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should. maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be det ermined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the followingmeasures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help. FCC ID: O55240123