


#### 5.5.4.5 Changing the content of the setting (CUSTOM)

Note) Items in CUSTOM are for conducting settings and adjustments at the time of installation, which need not be conducted normally.


#### -Common operations for CUSTOM

Use the up-down cursor keys to select CUSTOM after "the common operations for the SETUP" menu, and press either the "ENT" key.

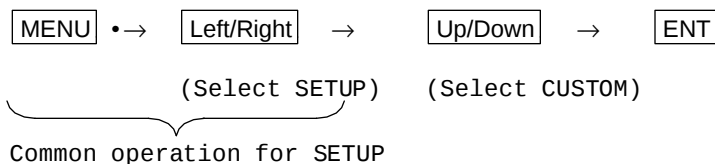

When the above operations have been conducted, 4 items, namely "KEY ASSIGN", "PRESET1", "PRESET2" and "ADJUST", are displayed beside the CUSTOM item.

Further explanation concerning the CUSTOM menu items will be done on the assumption that the above "common operations for CUSTOM" have already been conducted.

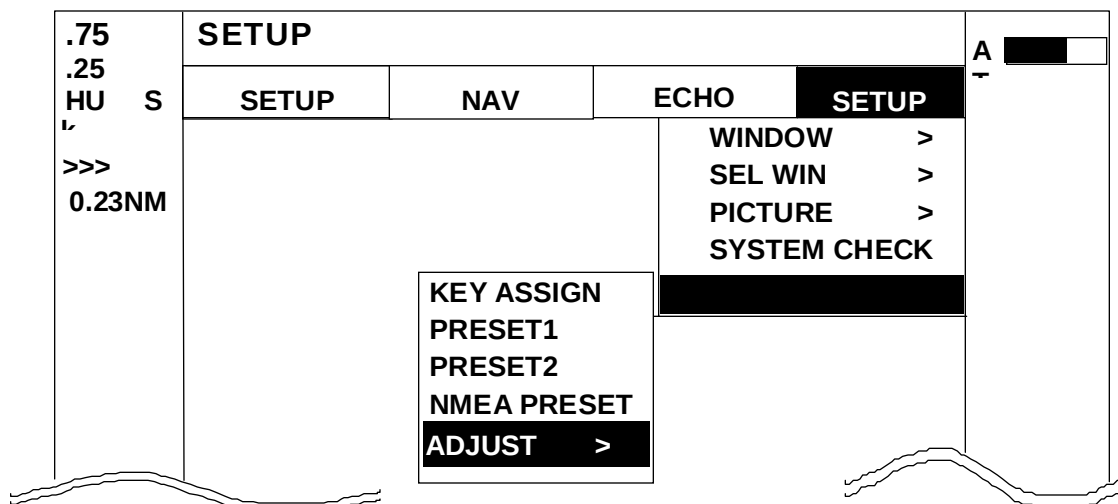


#### 5.5.4.5.1 Changing the settings of soft keys (KEY ASSIGN)

Conducting alterations and new settings for the functions of keys with number displays of 1-7.

##### (1) Screen display for the setting

When KEY ASSIGN has been selected with the up-down cursor keys from among the CUSTOM items and the "ENT" key is pressed, the setting screen is displayed. (See chart below)

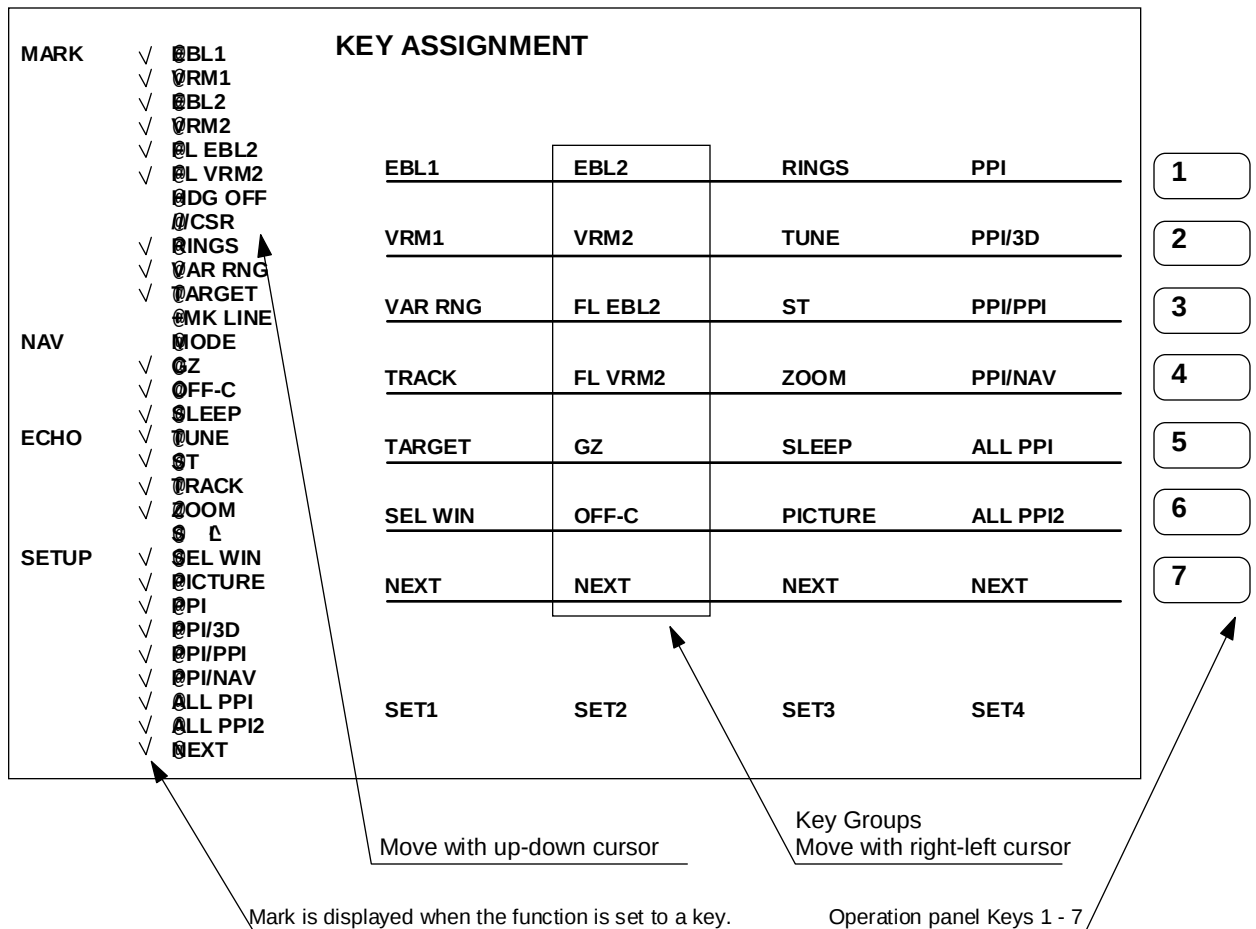

Soft Key Setting Screen

##### (2) Selecting functions

Reverse the items to be set using the up-down cursor keys. (The items become reverse in accordance with the moving cursor.)

##### (3) Key settings

###### (3)-1 Making new settings (Example 1)

For allocating the selected item to a soft key, press the key to be allocated. The selected item will be displayed beside the key, which indicates that the setting has been conducted.

###### (3)-2 Changing the function of a key with an preset function (Example 2)

When the allocated key is pressed, its function will be altered to the one selected in (1) above and the previous function will be canceled.

The current settings for SET1-4 will be displayed below NEXT. In order to switch the settings SET1-4, use the right-left cursor keys. (Double settings (setting 1 item for more

than 1 key) are possible.)

When settings are to be conducted for more than 1 key, repeat the operations (3)-1 to (3)-2.

(Example 3)

 
#### (4) Completing the setting

After the setting has been finished, press the ENT key to exit from KEY ASSIGNMENT.


#### Example of an operation

(The process up to the selection of KEY ASSIGNMENT from the SETUP menu is omitted. Only the process after the above chart will be described.)

##### Example 1) Altering OFF-C allocated to key 6 in setting 2 to HDG OFF.



##### Example 2) Re-allocate SEL WIN to key 1 in setting 2.

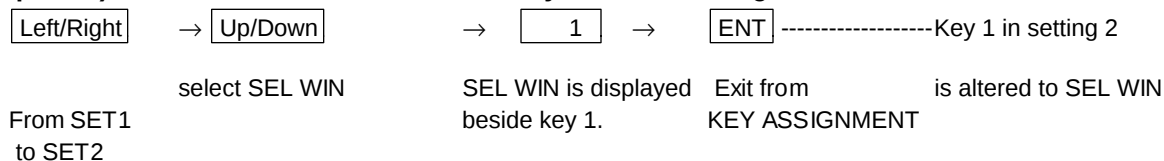

##### Example 3) Alter key 1 in setting 1 from ST to HDG OFF and then reset key 1 in setting 2 as SEL WIN.

