

## USER INSTRUCTIONS

## **BATTERY INSTALLATION**

1. USE A SCREWDRIVER TO REMOVE THE BATTERY COVER.
2. INSTALL TWO (AA SIZE) BATTERIES.
3. REPLACE THE BATTERY COVER.

## TO OPERATE


1. USE ANY FM RADIO. TURN THE RADIO ON AND FACE THE RADIO TOWARDS YOU. ADJUST THE RADIO MEDIUM VOLUME.
2. PLACE THE MICROPHONE NEAR TO THE RADIO AND PRESS THE TALK BUTTON. HOLD THE MICROPHONE 2 INCHES FROM YOUR MOUTH AND SPEAK IN A NORMAL VOICE WHILE TUNING YOUR FM RADIO BACK AND FORTH ACROSS THE 100 MARK ON THE TUNING DIAL.
3. AFTER THE FM RADIO IS TUNED TO THE MICROPHONE, MOVE 5 FEET AWAY FROM THE RADIO FACE WITH THE ANTENNA TOWARDS THE RADIO AND SPEAK INTO THE MICROPHONE WHILE SOMEONE CAREFULLY TUNES THE RADIO TO THE BEST RECEPTION. WHEN USING THE MICROPHONE AT A DISTANCE OF 10 FEET OR MORE FROM THE RADIO, IT MAY BE NECESSARY TO INCREASE THE RADIO VOLUME AND CAREFULLY TUNE THE RADIO AGAIN FOR BEST RECEPTION.
4. FOR BEST RESULTS, STAND 5 TO 10 FEET AWAY FROM THE RADIO WITH THE ANTENNA POINTED TOWARDS THE RADIO.

**IMPORTANT NOTES:**

- THIS MICROPHONE IS FOR USE WITH FM RADIO ONLY AND WILL NOT WORK ON THE AM BAND.
- THE TUNING RANGE OF YOUR FM RADIO IS 100 ON THE FM DIAL.
- WHEN USING YOUR MICROPHONE, KEEP THE ANTENNA FACING TOWARD THE RECEIVER AND THE RECEIVER FACING THE MICROPHONE.
- WHEN USING THE MICROPHONE, HOLD THE MICROPHONE 2 INCHES FROM YOUR MOUTH AND SPEAK IN A NORMAL VOICE.
  - THE RECEPTION OF THE MICROPHONE MAY BE AFFECTED BY THE ENVIRONMENT I.E. METAL STRUCTURE OR THE MOVEMENT OF PEOPLE BETWEEN THE MICROPHONE AND THE RADIO. THE RECEPTION IS ALSO AFFECTED BY THE CONDITION OF THE MICROPHONE AND/OR RADIO BATTERIES
  - IF THE MICROPHONE IS NOT TO BE USED FOR AN EXTENDED PERIOD, REMOVE THE BATTERIES FROM THE SET
- FOR BEST RESULTS, THE MANUFACTURER RECOMMENDS THE USE OF ALKALINE BATTERIES.
- TO PREVENT DAMAGE, DO NOT EXPOSE THE SET TO RAIN OR MOISTURE

[www.christina-a.com](http://www.christina-a.com)

**THE OFFICIAL CHRISTINA AGUILERA FAN CLUB  
244 MADISON AVE., BOX 314,  
NEW YORK, NY 10016.**

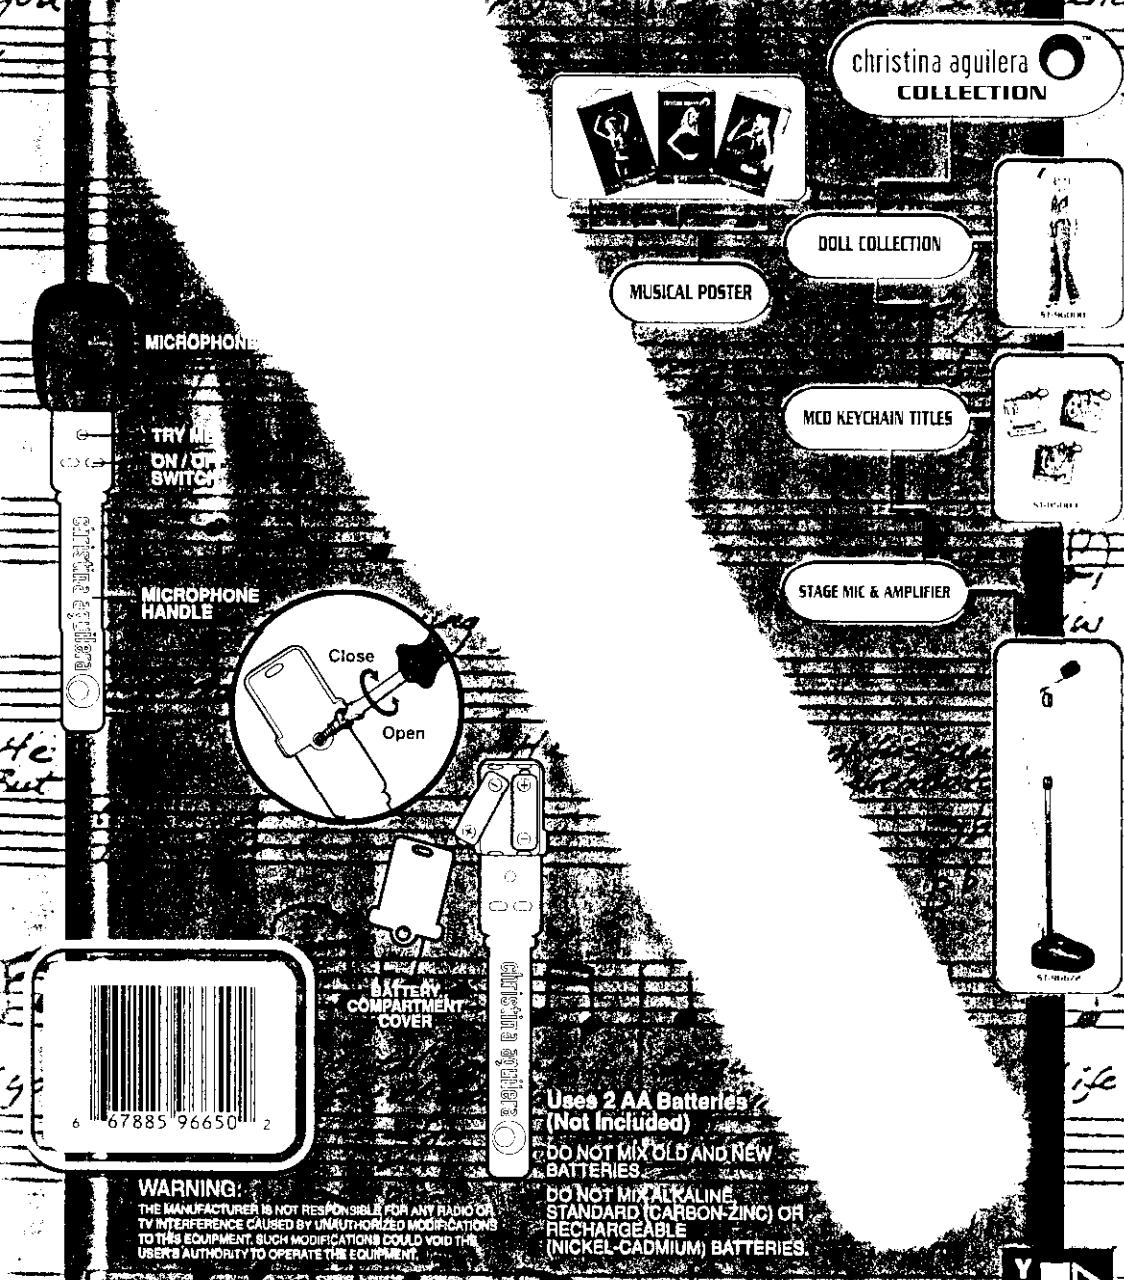

**Uses 2 AA Batteries  
(Not Included)**

DO NOT MIX OLD AND NEW  
BATTERIES.

**DO NOT MIX ALKALINE,  
STANDARD (CARBON-ZINC) OR  
RECHARGEABLE  
(NICKEL-CADMIUM) BATTERIES**

**WARNING:**

**WARNING:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Y  
A  
BOOM