

EMERALD LIGHTING

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS FOR USE WITH EMERALD P1000 SERIES TRACK SYSTEMS ONLY.

1. Read all of these installation instructions before installing the track system.
2. Do not install this track in damp or wet locations before installing the track system.
3. This track system is not intended to be installed less than 5 feet above the floor.
4. The track is not intended to be pendant mounted such as by a stem or cable.
5. Do not install any fixture assembly closer than 6 inches from any curtain, or similar combustible material.
6. Disconnect electrical power at the fuse box by removing the fuse or turning the circuit breaker off. Power should be disconnected before adding to or changing the configuration of the track.
7. Save these instructions and refer to them when additions to or changes in the track configuration are made.
8. **CAUTION:** Be sure circuit breaker is off or fuses removed before attempting to install any track lighting. This system is intended to be supplied by a single branch circuit such as a 120-volt circuit, a 120/240 volt circuit or a 120/208 volt circuit. Do not connect to other power systems. This track not intended for use with a power supply cord or convenience receptacle adaptor.
9. **CAUTION:** To reduce the risk of fire and electric shock, use only fixture assemblies marked for use with Emerald Track, and Track fittings marked for use with Emerald series Track. Do not attempt to connect power leads, extension cords, appliances and the like to the track.
10. Follow local Electrical Building Codes. Check with a qualified electrician when installing or using this track system.

TO INSTALL OR REMOVE TRACK FIXTURE

1. Turn off power at power source.
2. Insert track fixture adapter into track. Pull down on the grooved tab and turn the adapter so that the polarity grooves on the adapter and track are both on the same side of the track system. Keep turning adapter until the tab can be locked into the track. (See figure 1).
3. To remove track fixture, simply pull down on the grooved tab and turn the adapter until the contacts are free from the track.

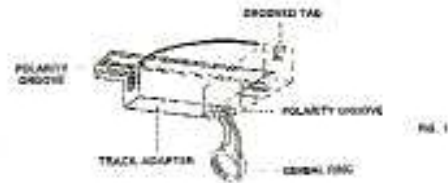


FIG. 1

LAMPING INSTRUCTIONS

P6005 GIMBAL RING (Installation on other fixtures may vary)

1. Spread bulb bracket apart on gimbal ring and install glass.
2. Hold the bulb by the rim, making sure you do not touch the 2 metal prongs or other parts of the bulb. Insert the prongs into metallic side of the socket. (See fig. 2) Holding the back of the socket, slowly fit the bulb into the ring and gently push the bulb into place.



FIG. 2

P6001, 6002 & 6003

Insert the bulb from the front of the black trim ring. The glass is inserted next and then the spring clip should be locked into place. (See fig. 3)

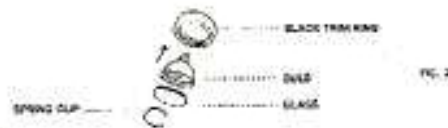


FIG. 3

NOTE: If MR16 bulb used is glass covered, you may need to disassemble the glass which comes with the fixture in order to place spring clip in proper position.

EMERALD LIGHTING
Four Year Limited Warranty

The warranty coverage is for four years from the date of original purchase and covers all defects in workmanship or materials on the low voltage track fixtures. This implied warranty is limited to the duration of this warranty.

Emerald Lighting reserves the right to either repair or replace the defective low voltage track fixture.

In order to qualify, you must return your fixture to where it was purchased along with a dated receipt.

This warranty does not cover defects caused by neglect, abuse, misuse, alteration, modification, carelessness or accident, as well as any deterioration caused from wear or exposure. It also does not cover consequential damages or the cost of repairing or replacing property which is damaged from the track fixture malfunctioning.

According to state law, this warranty gives you specific legal rights which may vary from state to state. Additionally, some states may not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty may last, therefore, the listed limitations or exclusions may not apply to you.

(Over For Installation Instructions)

CUT ALONG DOTTED LINE AND MAIL

WARRANTY

NAME _____
ADDRESS _____
CITY _____ STATE _____ ZIP _____
DATE PURCHASED: _____ MODEL # : _____
PURCHASED FROM: _____

MAIL TO: Emerald
Cooper Lighting
1121 Highway 74 South
Peachtree City, GA 30269

Consult your local Home Center for further information on donating.



Cooper Lighting • Customer First Center • 1121 Highway 74 South • Peachtree City, GA 30269

NOTICE

This equipment has been tested and found to comply with the limits for a Consumer RF lighting device pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference with electronic devices such as: radios, televisions, wireless telephones or remote controls. If interference occurs it may be possible to correct the interference by one or more of the following measures:

- Reorient or relocate antenna of the receiving device
- Increase the separation between this equipment and the device
- Connect this equipment or the device into a different outlet or circuit

This equipment should not be used:

- Closer than three (3 ft.) from any sensitive electronic equipment
- Near Maritime safety, navigation or communication equipment operating between 0.45MHz and 30 MHz