


WaterDex®

Before you begin installation, take the following steps:

1. Replace your timer's battery so that your sprinkler times are saved.
2. Make sure your timer is set to your high season settings – those settings when your sprinkler times are longest.
3. If your timer has a "Water Budget" or "Seasonal Adjustment" feature make sure it is set to 100%.

Detailed Installation Instructions:

1. After disconnecting the power to the timer, attach one of the BLACK wires from the WaterDex Receiver to each of the timer's power terminal's (typically labeled 24VAC). The BLACK wires can be connected to either terminal in any order.
2. Remove the wire(s) from the timer's terminal marked COMM or Common and connect either one of the BLUE wires from the WaterDex Receiver to this terminal.
3. Using the supplied wire nut, connect the wire(s) removed from the COMM or Common terminal to the second BLUE wire from the WaterDex Receiver. Again, the BLUE wires can be connected in any order. **NOTE:** The GRAY wire is an antenna and not connected to the timer.

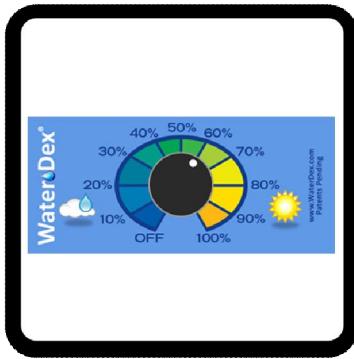

INFORMATION TO USER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4. Installation is now complete and power may be reconnected to the timer. The LEDs on the WaterDex Receiver will briefly flash in an alternating pattern.

5. To pair the WaterDex Receiver to the Remote Control, press the recessed button at the bottom of the Receiver. The Receiver's Green "Link" LED will flash indicating that it is ready to be paired with the WaterDex Remote Control.

6. Remove the back cover from the WaterDex Remote Control and install two "AA" batteries. The LED on the Remote Control will flash for 10 seconds while connecting to the WaterDex Receiver. The "Link" LED on the Receiver will remain solidly lit when successfully paired.

7. The WaterDex Remote Control transmits the watering setting whenever the dial is moved. The LED will flash for 10 seconds while transmitting. If the LED continues blinking rapidly, this indicates low battery.

Log on to www.WaterDex.com and enter your ZIP code to get your local setting. Set your Remote Control to the suggested value and start saving MONEY!