The complete user manual is an electronic file, users can download it via the QR code or website. Click on "Downloads" then "Documentation" then the xTablet T1175 User Guide link.

www.ruggedtabletpc.com/xTablet-T1175



# **User Manual** xTablet T1175




1501 Boyson Square Drive - Suite 101 Hiawatha, Iowa 52233 | PH: 319.363.4121 | RuggedTabletPC.com

## Unpacking

- ► xTablet T1175
- ► Type-C/Power delivery adapter and AC power cord
- ► Hand strap
- ► Brief case handle
- Stylus (optional)
- ► Stylus holder (optional)
- ► Quick Guide

## **Product Overview**

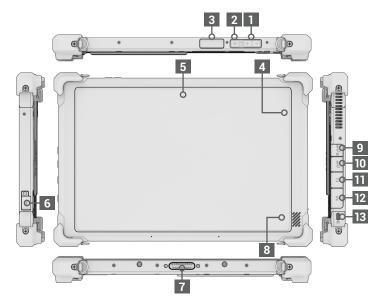

- 1. Volume
- 2. Power
- 3. Barcode scanner
- 4. Status LEDs
- 5. Front camera
- 6. USB 2.0 type-C PD-IN port
- 7. Dock connector
- 8. Speaker
- 9. USB 3.1 Gen 1 port 1
- 10. USB 3.1 Gen 1 port 2
- 11. Headphone
- 12. RJ-45 connector
- 13. Kensington lock
- 14. F1 Function scanner
- 15. Battery latch
- 16. Rear camera
- 17. F2 Function programmable



#### AC/DC Adapter

Ensure the xTablet T1175 is connected to an AC power source via the AC adapter before turning it on for the first time. If the xTablet automatically shuts down due to low battery power, it is likely to cause system failure. Below are some Dos and Don'ts for an AC/DC adapter.

### Plug the AC/DC Adapter

- Plug the DC end into the USB-C Power Delivery (PD) port of the xTablet T1175.
- · Plug the AC/DC adapter into the power outlet.
- · When removing, follow steps in reverse order.



