


INSTRUCTIONS

SPECIFICATIONS:

Frequency: 49.82-49.90MHz

Battery size: 1X6F22(9V)

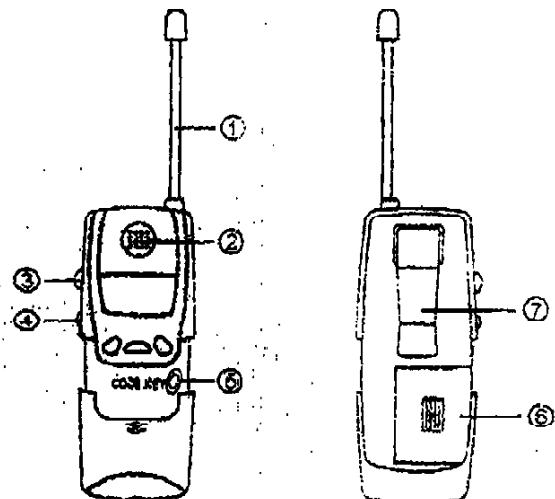

1. ANTENNA

2. SPEAKER

3. TALK SWITCH

4. VOLUME CONTROL AND
ON/OFF SWITCH

5. CODE KEY

6. BATTERY DOOR

7. BELT CLIP

Operations

- Open the battery door (6), then insert a 9V battery.
- Close the battery door (6).
- Switch the unit on by turning ON/OFF switch (4) and adjust volume by turning the volume control (4).
- Send signals by pressing the code key (5).
- Push the talk switch (3) for talking, release the talk switch (3) for receiving.

CAUTIONS

Weak battery can leak and severely damage the unit.

Always remove battery when the unit will not be used for a long time.

Replace battery immediately when it becomes weak.

WARNING

Modifications not authorized by the manufacturer may void users authority to operate this device.