

1. Security notice of use
2. Product specifications
3. Basic functions
4. Turn on, Turn off, sleep, wake up
5. Account management
6. System settings
 - 6.1 WIFI setting
 - 6.2 Language setting
 - 6.3 Time and date setting
 - 6.4 Background music setting
 - 6.5 Brightness
 - 6.6 Storage
 - 6.7 Screen timeout
 - 6.8 Screen calibration
 - 6.9 Factory data reset
 - 6.10 USB Debugging
 - 6.11 Power saving mode
7. Operating desktop
8. About me
9. Parental account features
 - 9.1 Add applications
 - 9.2. Applications management
 - 9.3. Children protection mode settings
10. ARTIST
 - 10.1. My Camera
 - 10.2. My Photos
 - 10.3. Photo editor
 - 10.4. Video
 - 10.5. My Videos
11. Charging Kalala Pad
12. FAQ

Security notice of use

In order to ensure that you properly use the machines to prevent bodily injury or property damage, and the ad with the following note to follow these matters

1.1 power considerations

- Please do not touch the power adapter when in the wet
- The power cord into the jack a grounded outlet
- Make sure the socket tighten, not loosen.
- The machine is damaged, including power cord exposed or flaking) please do not use it.
- If there is lightning or leave for an extended period of time, remove the plug from the socket to the next.

1.2 machine NOTE

- Please do not use the machine in the direct sunlight or closed in the car.
- Do not use the machine on the dusty place, such as the bathroom or wet areas.
- Do not use this machine with a credit card or any other magnetic objects stacked on top.
- Please do not use a non-native supplied accessories.
- Please do not use sharp objects touch the LCD screen.
- Please do not press LCD
- Please do not use the appliance soak in the water
- Do not fall down from a height of more than 1M
- Do not to repair, disassemble or modify the machine .

1.3 changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under

this standard during product certification for use when properly worn on the body is 0.053 W/kg.

2. Product specifications

| | |
|--------------|--|
| Product Type | Children's tablet + Digital camera |
| System OS | I-WIT 2.5 (Base on Android 2.3) |
| CPU | NXP 2120 800MHz |
| Memory | 256MB DDR2 |
| Storage | 2G flash, support micro SD card expansion(up to 32G) |
| Network | WIFI (IEEE 802.11 b/g/n) |
| Port | MINI USB 2.0 |
| | micro SD card slot |
| | 3.5mm headphone jack |
| Screen | 4.3 inch, multi points touch screen |
| Camera | BT656 standard, 2.0M pixel |
| Accessories | OTG cable |
| | User manual and warranty card |
| | CD |

3. Basic functions

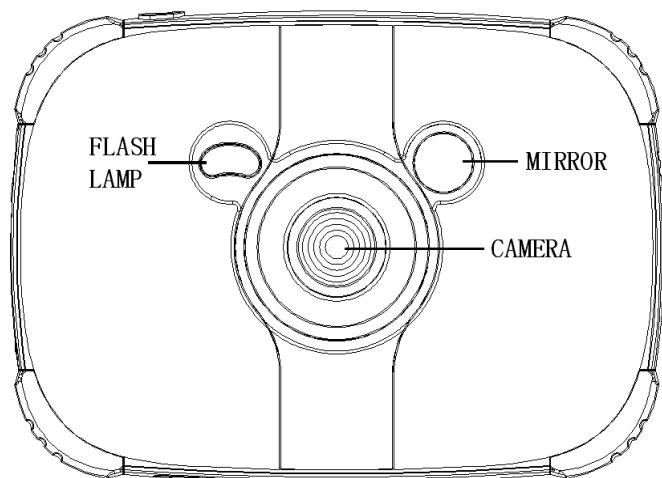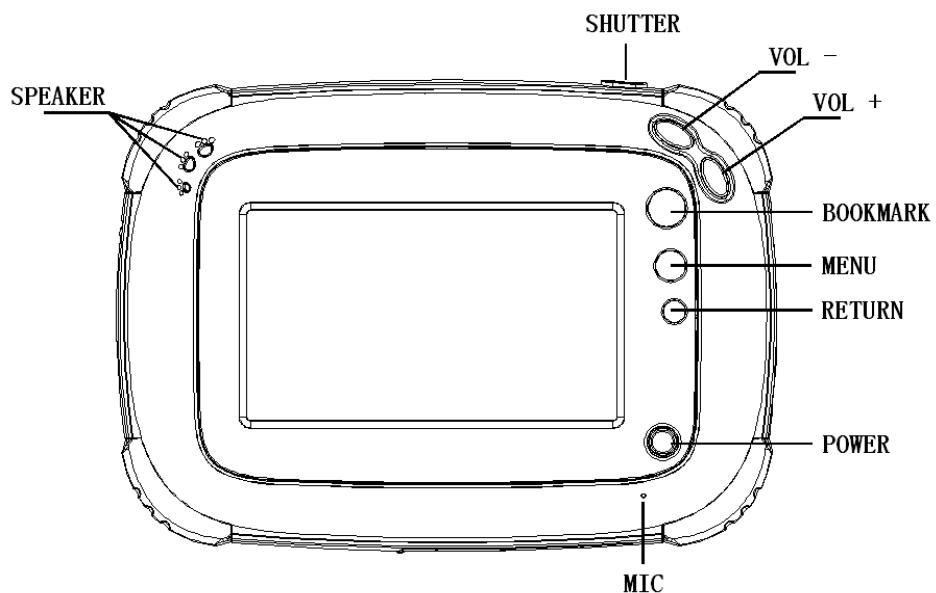

- SPEAKER: The output of sound .

- SHUTTER:

The shutter button in the camera mode.

Any interface (expect the CAMERA interface and LOGIN interface)long press for 3 seconds to enter the photo mode .

- VOIUME:


CAMERA interface, Zoom in/out function

Other interface, turn the volume up and down..

- **BOOKMARK:**

display the most used four applications in the recently day, and can jump to one of the application .

Click on the home icon , to go to the nine categories of the account .

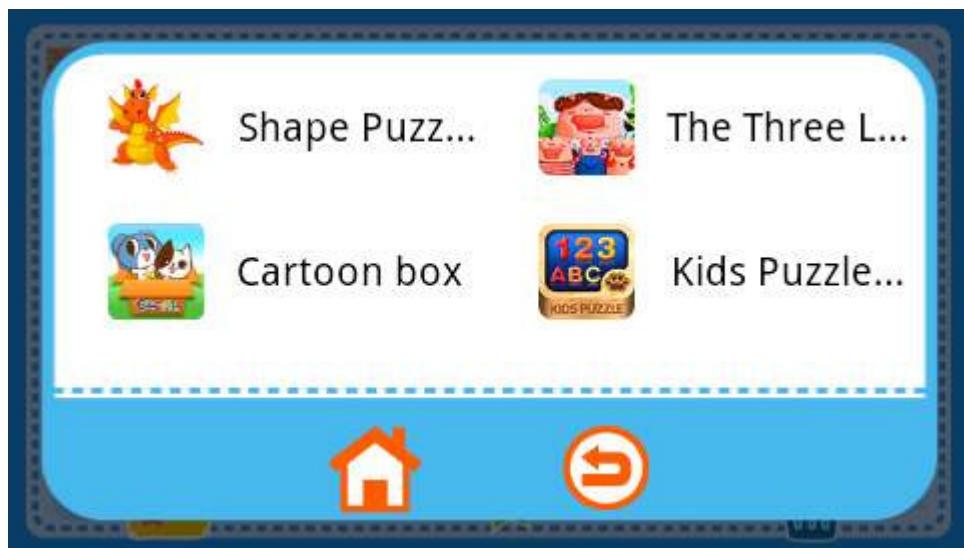


- **MENU:** Display the current form of the menu items.

- **RETURN:** return the last level interface.

- **MIC:** Dialogue interface .

4. Turn on, turn off, sleep, wake up

- Turn on: While off, press and hold the power button for 3 seconds
- Turn off: While on, press and hold the power button for 3 seconds,
select ' power off ' from pop up box.

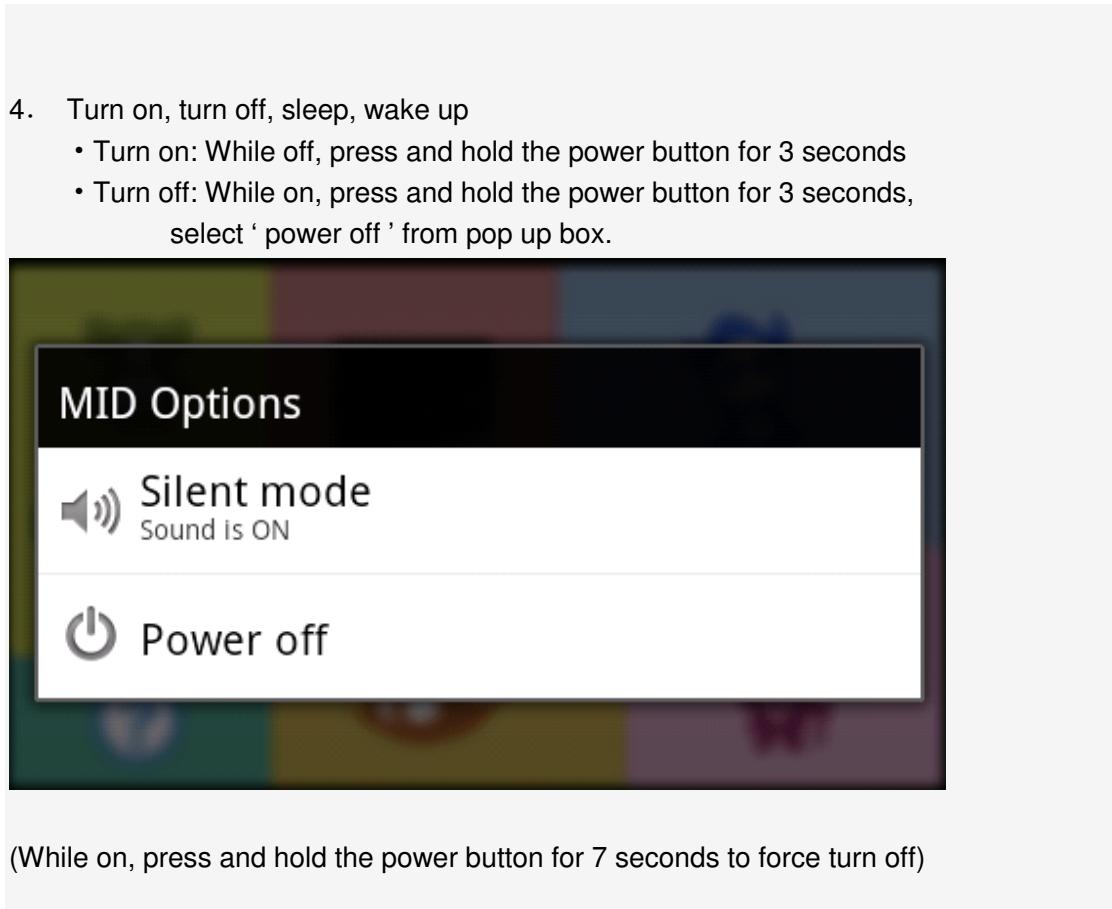

(While on, press and hold the power button for 7 seconds to force turn off)

- Sleep: While on, press the POWER button once to enter sleep mode.
- Wake up: While in sleep mode, press the POWER button once to wake up.

5. Account management

- Login, add and delete account

The system defaults to parental account(highest authority).The initial password is "1111". Each tablet permits up to four children's accounts. You can set up a password or not. Parents can use their own account to manage their children's accounts.



From the home screen, press the "MENU" button to pop up "SYSTEM SETTINGS", "ADD USER", "DELETE USER", "USB DEBUG", "ABOUT IWIT"



Click "Add user" , then enter the parent login password.



Enter account information

Name

>Password

Confirm Password

Gender
 Boy
 Girl

Nationality


Language

Birth Date

Click "delete user", then enter the parent login password.

Then click on to go to delete user.



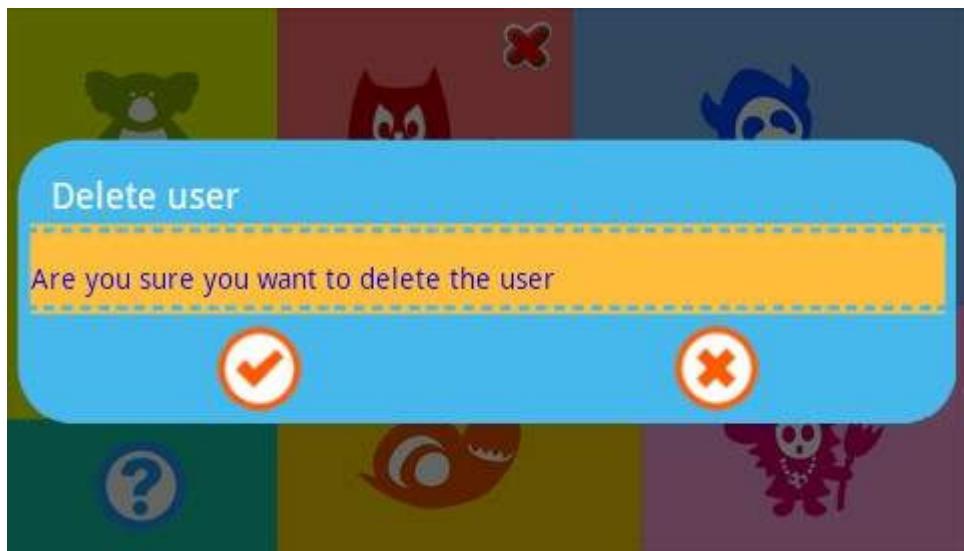

6. System settings


From the login page, press the "MENU" button, click "SYSTEM SETTINGS" parents enter their login password to open the system setup interface, and then select an item.



6.1. WIFI Settings


Click on “WIFI SETTINGS” to go to setting page.

Click on ”WIFI” to turn on/off , See below:

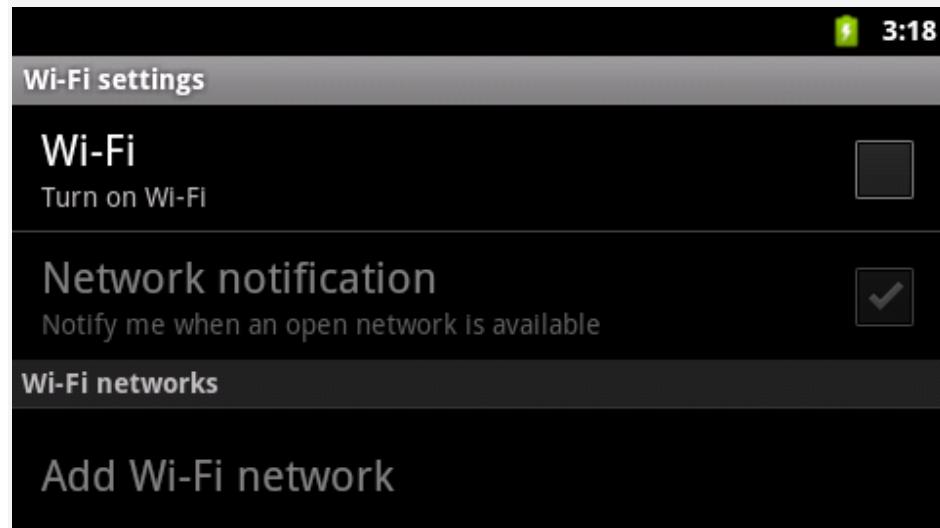


6.2. Language Settings (Only for Android operation system not for I wit operation system)

Click on ” Language Settings” to go to language setting page.

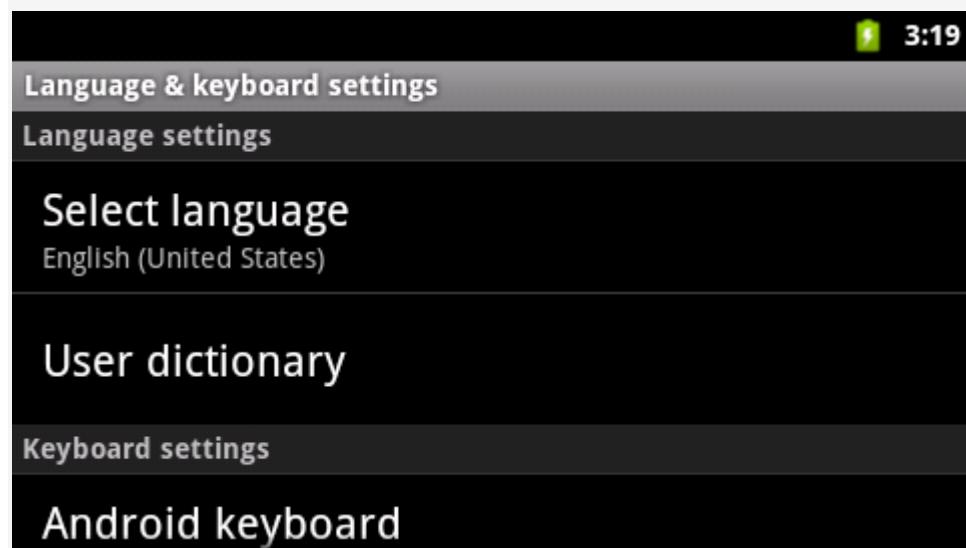


Click on”Select Language” to choose language.

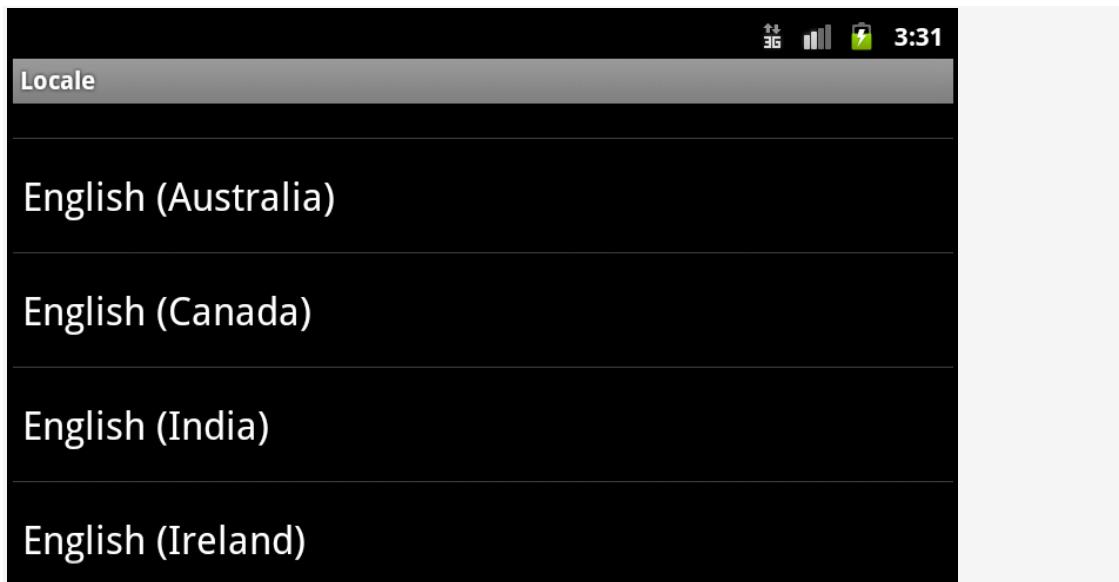


6.3. Time and date settings

Click on “ Time and date settings ” to go to the time and date setting page.

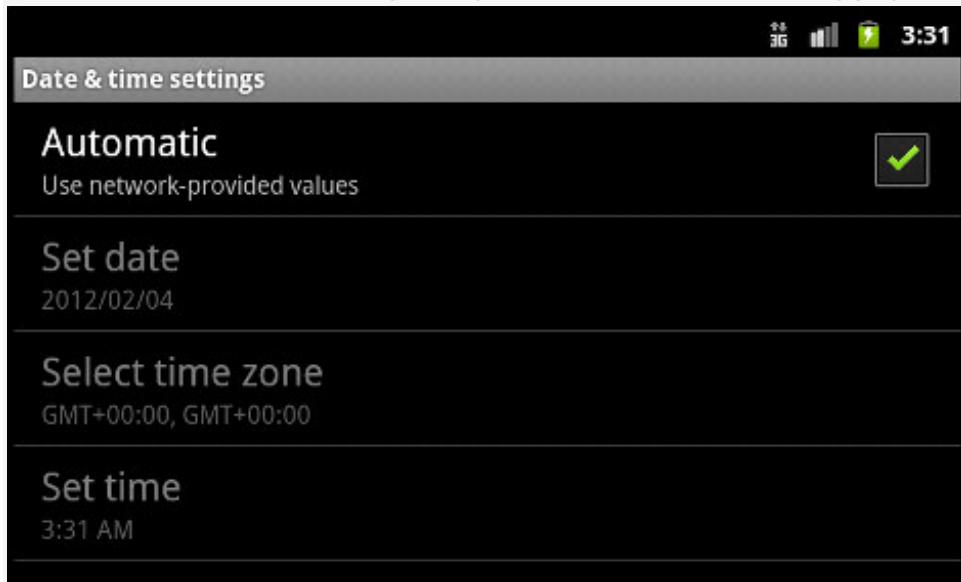


6.4 Background music settings

Click on "Background music settings" to go to the background music setting page.

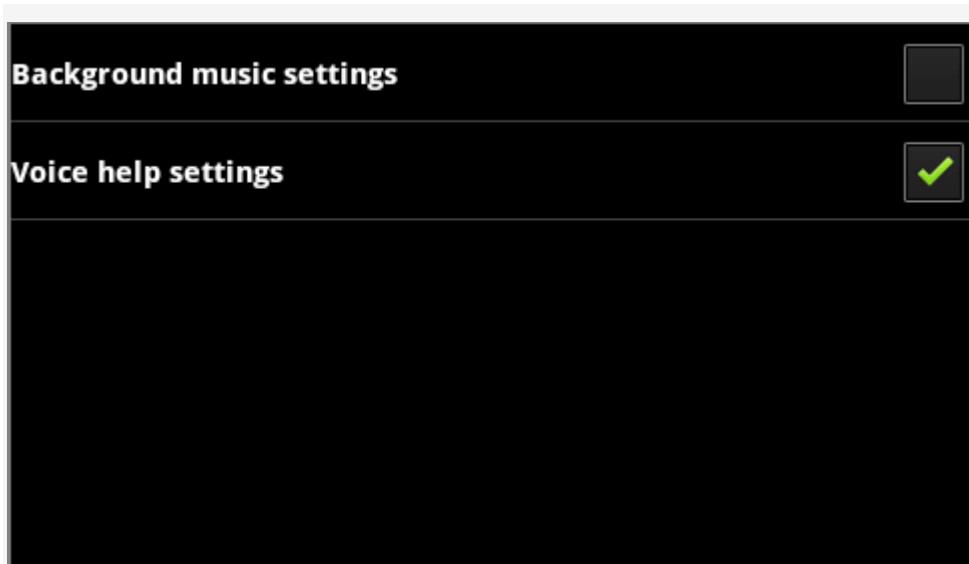

6.5 Brightness

Click on " Brightness" to go to setting page,

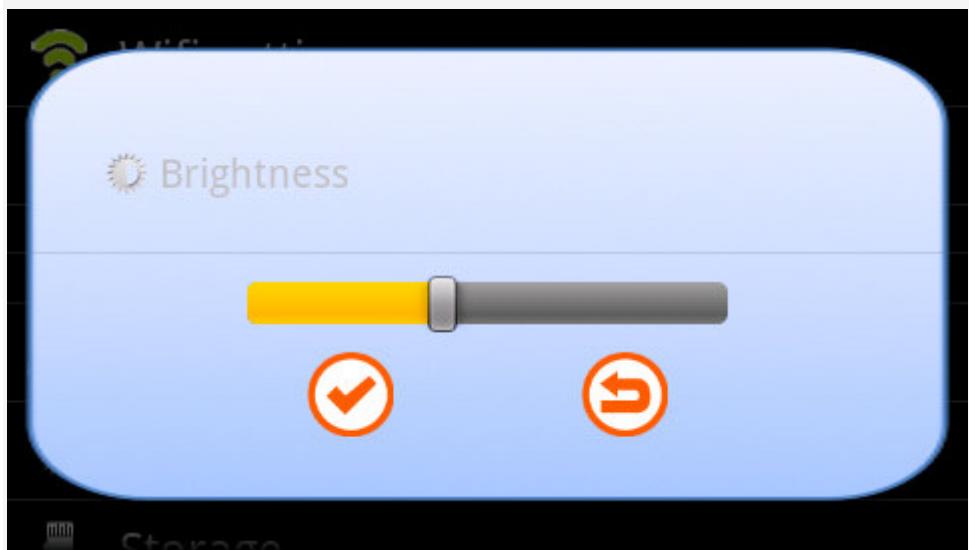

6.6 Storage

Click on " Storage" to go to setting page.



6.7 Screen time out

Click on " Screen time out" to go to setting page,



6.8 Screen calibration

Click on " Screen calibration" to go to setting page.

**Touch screen calibration:
Please follow the steps carefully.**

Touch the screen to continue.

Click on the center of the cross cursor definitely ,After click on “ upper left , upper right , lower right , lower left , center five cursor in order, click on the " OK" to confirm . To complete the touch screen calibration




**Tap on cross setup :1
Touch the screen or press back button to quit.**

6.9 Factory data reset

Click on " Factory data reset" to go to setting page.


Restore the factory settings will delete all children's account and remove the parents ' account information.

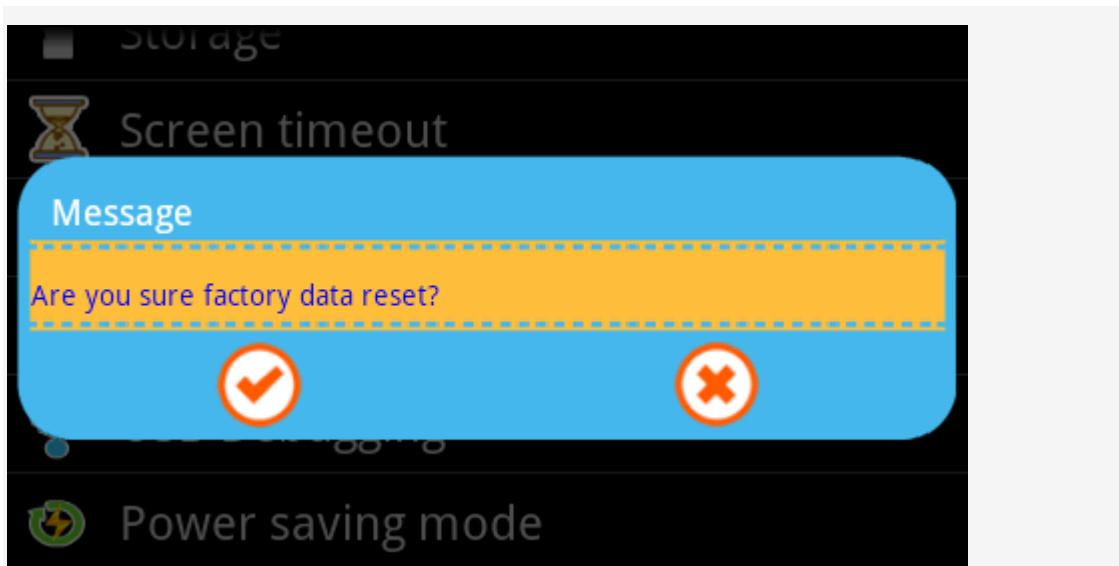

6.10 USB Debugging


Click on "USB Debugging" to go to setting page.

Or in the login interface, click on the menu 's "USB Debugging" ,to enter the setting interface quickly.

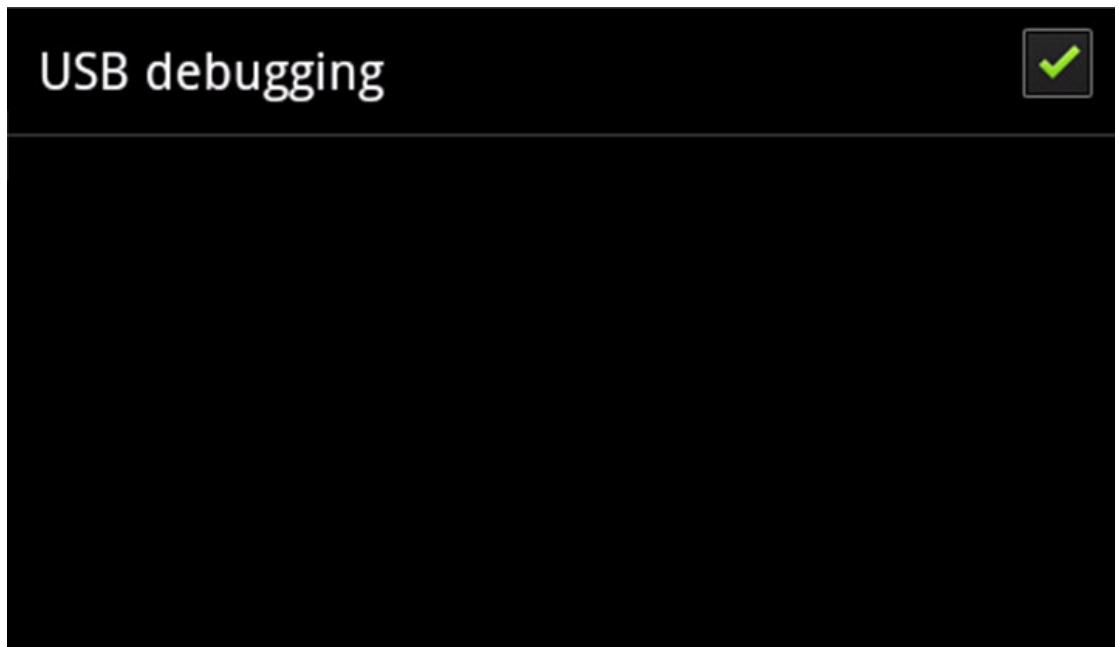

6.11 Power saving mode

While off, press the POWER button to enter sleep mode, Sleep mode over the setting time , PAD will close all the unnecessary function mode to enter the the ultra-long standby mode (when the wake mode , you need to wait 2 or 3 seconds) .

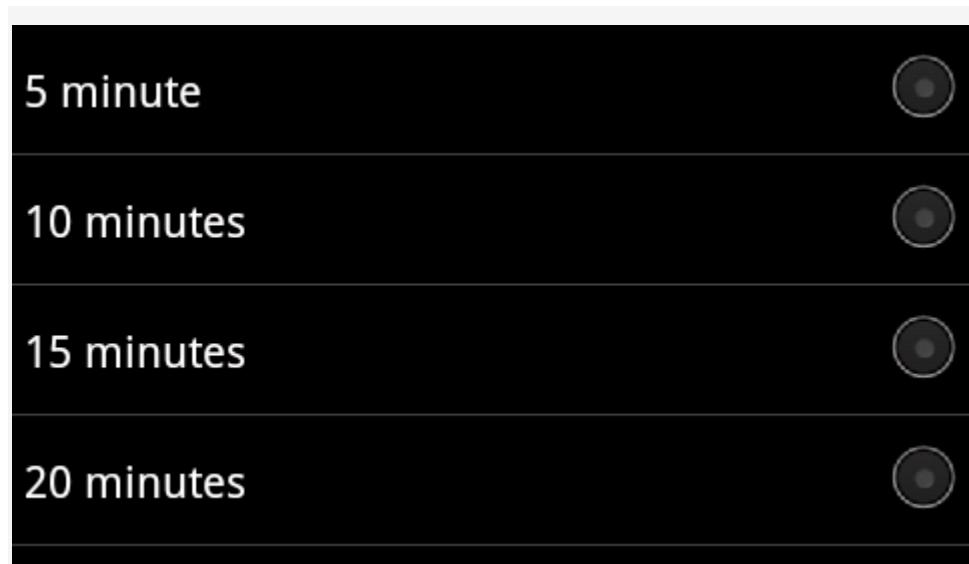


7. operating desk-top

PAD startup is complete , go to individual accounts to log in I - wit kid OS desktop ; all applications are divided into nine categories .



8. About me

Click the upper-left corner of portrait to enter personal account information interface ; be able to modify the name , age , background music , sound effects and password .

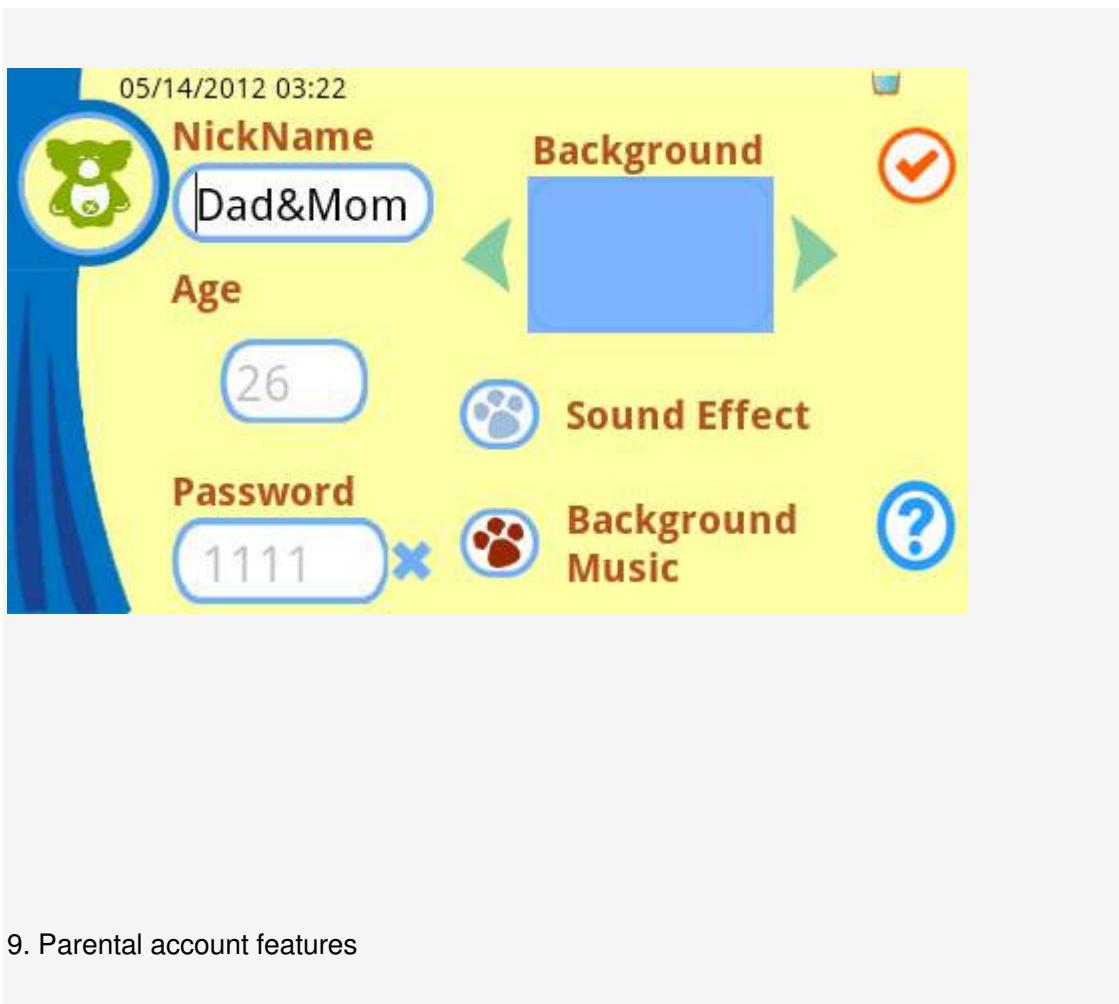

9. Parental account features

| accounts | Permission | | | | |
|----------|--------------|------------|-------------|-------------|----------------|
| | Install apps | Apps Admin | Remove apps | Delete apps | Uninstall apps |
| Parent | ✓ | ✓ | ✓ | ✗ | ✓ |
| Child | ✗ | ✗ | ✗ | ✓ | ✗ |


9.1. Add applications

- Parental account:

Parental account permits installing new applications. Click on "Menu", from the pop up box.





Click on "DOWNLOAD APP" to go to the different apps market to browse applications.

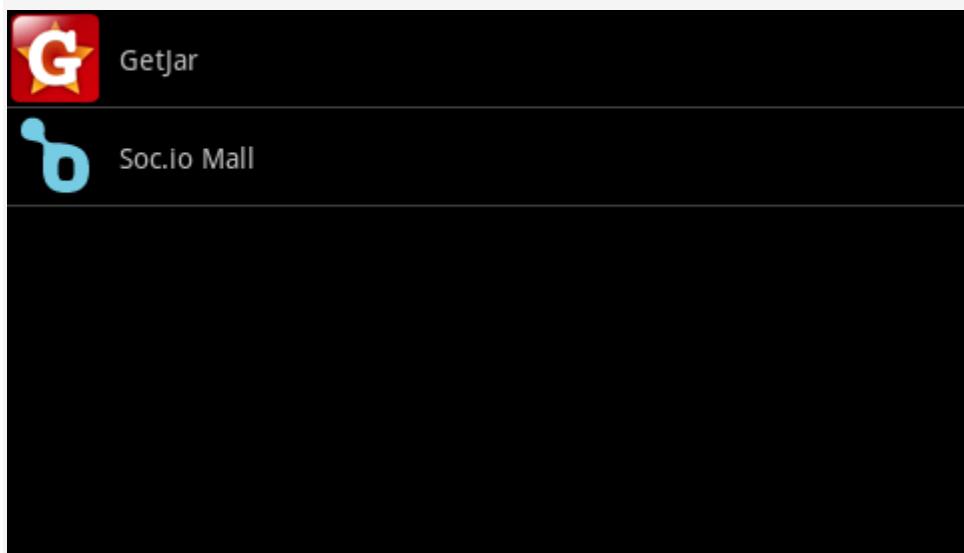

(Tablet will install different application markets according to different countries.)

After download is completed, select category which you want to install, and then select user to confirm the installation.

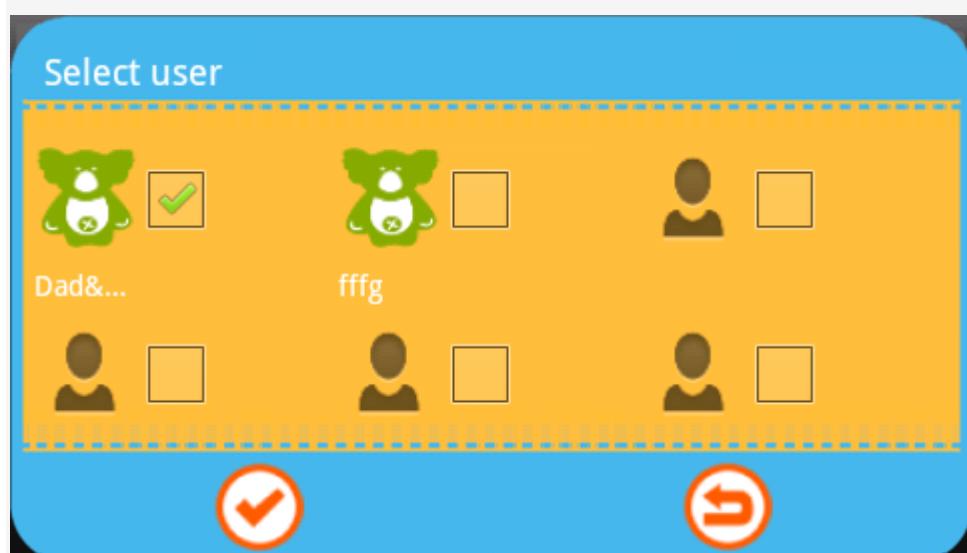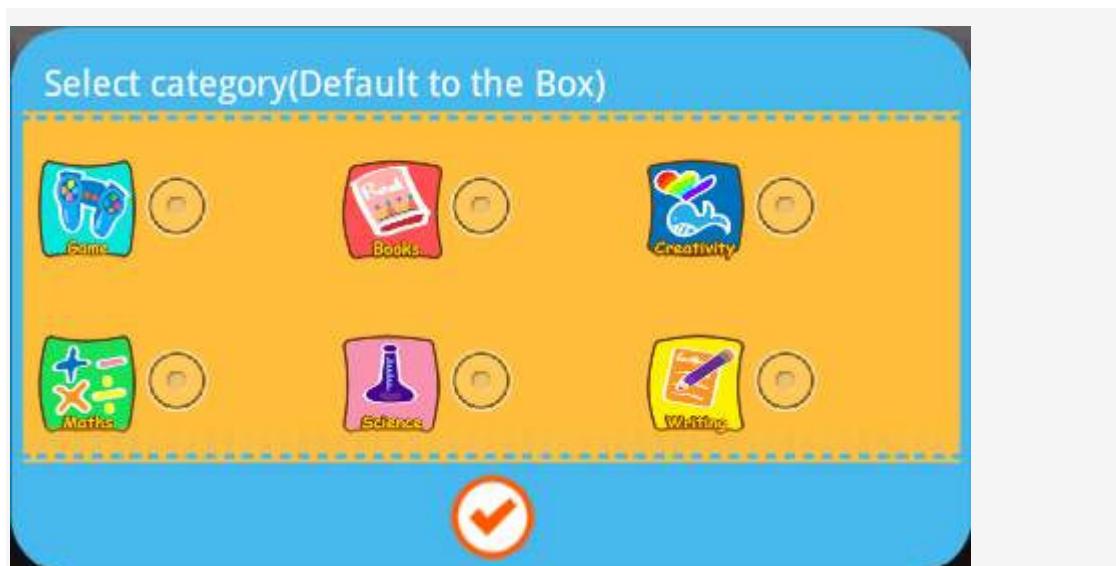

(If not select category and user, application will be automatically installed in the box of parental account.)

- Children account:

Children's accounts do not permit installing applications.

9.2. Applications management


- Parental account::

 Management all the apps of the pad , to share every account .

 Move application icons to other category.

(music without the function)


 Uninstall applications.

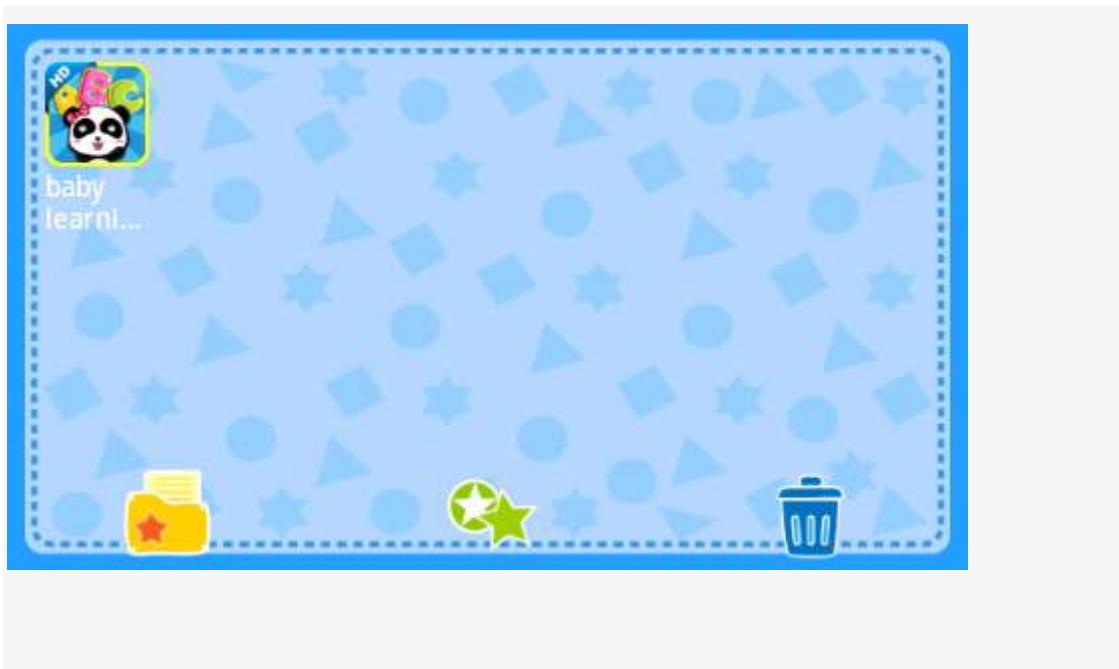

- Children account:




Delete application icons

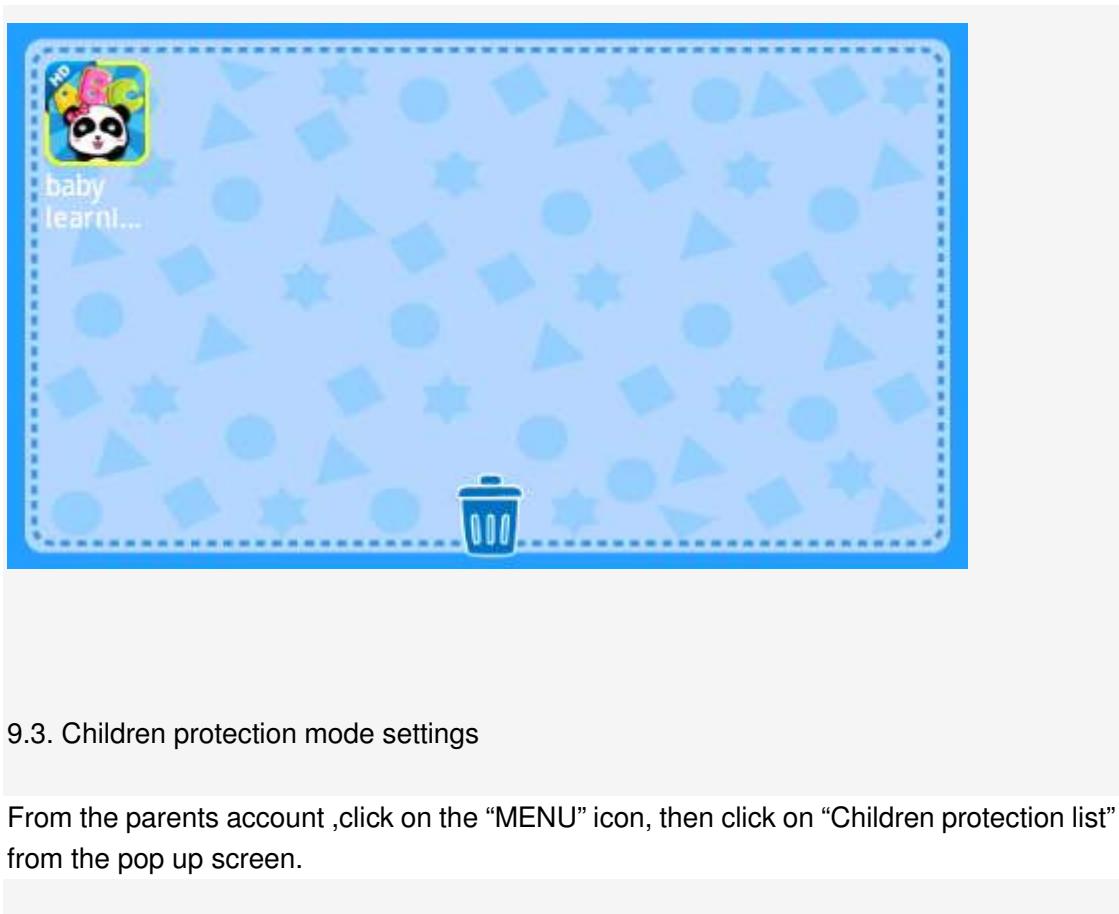

9.3. Children protection mode settings

From the parents account ,click on the “MENU” icon, then click on “Children protection list” from the pop up screen.

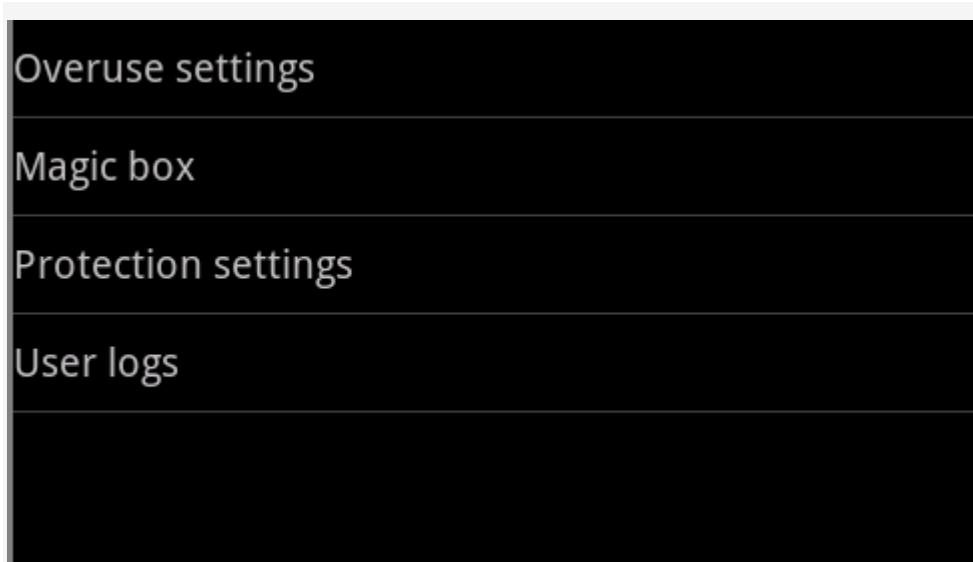

- Overuse settings

- Magic box

- Protection settings

- User logs


- Overuse settings

To prevent Children from overusing some applications, you can set their usage

- time and break time.


When usage time is up, the tablet will lock immediately. Only parents can use their password to unlock the tablet.

When break time is up, the tablet will automatically unlock.

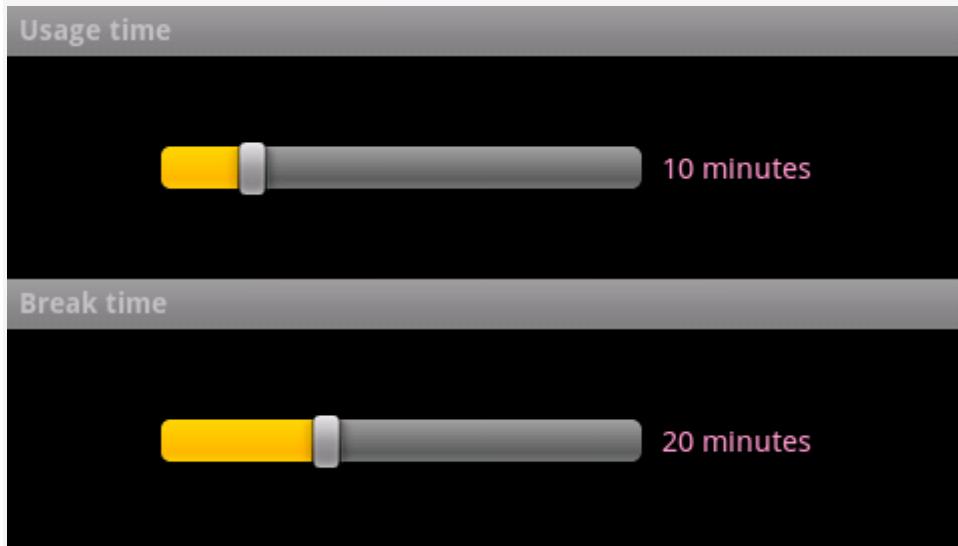


- Magic box

Parents control which categories can be used in their Children's accounts.

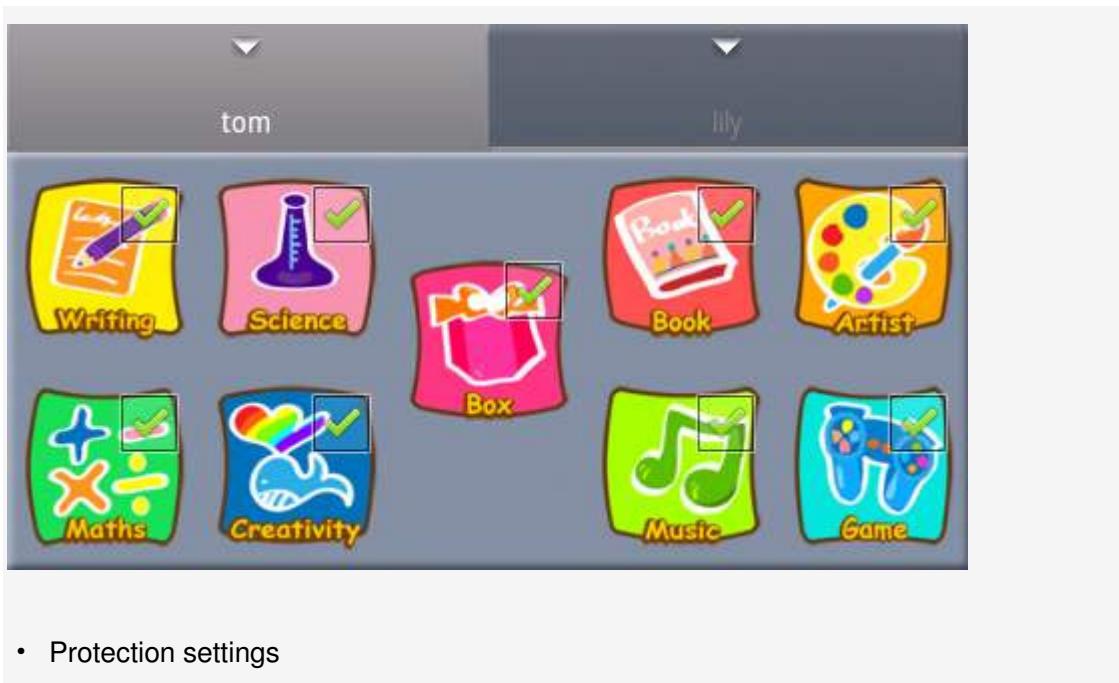


- Protection settings

Parent can set Suggest brightness、FLASH LAMP.

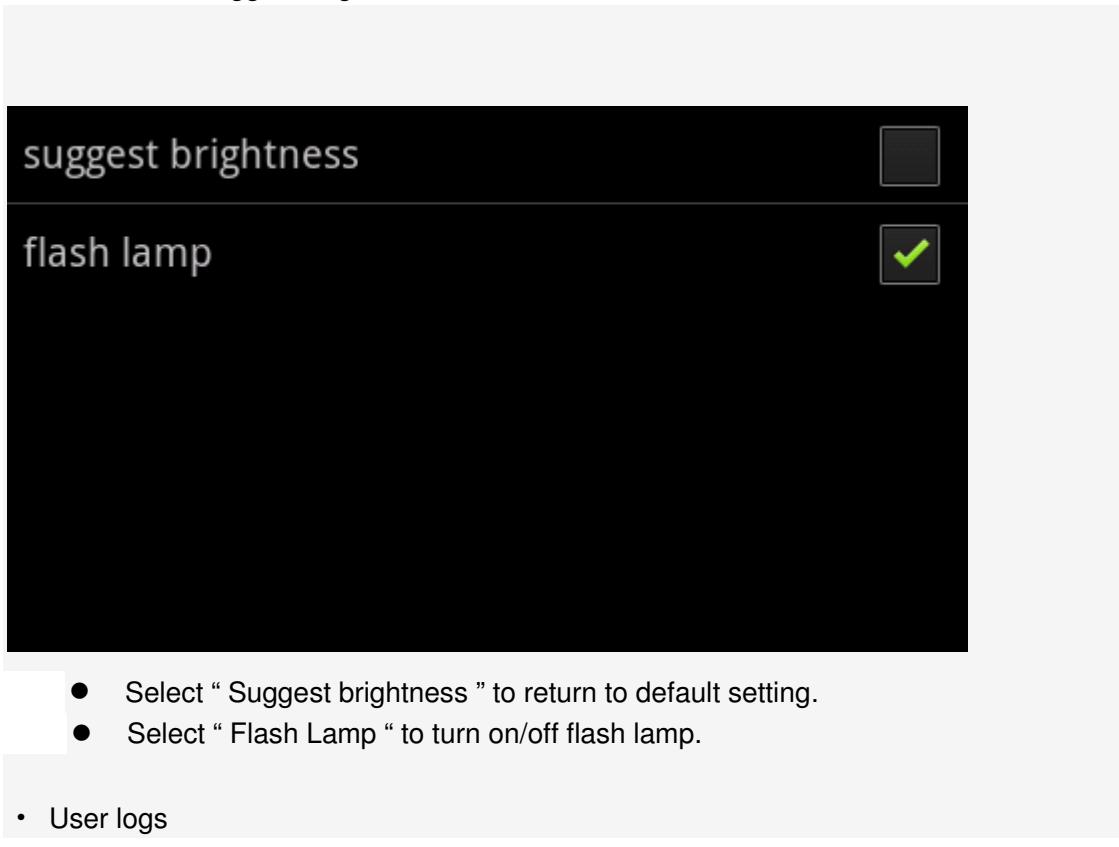

- Select “ Suggest brightness ” to return to default setting.
- Select “ Flash Lamp ” to turn on/off flash lamp.
- User logs

To check login and logout time of each children's account by USER LOGS.

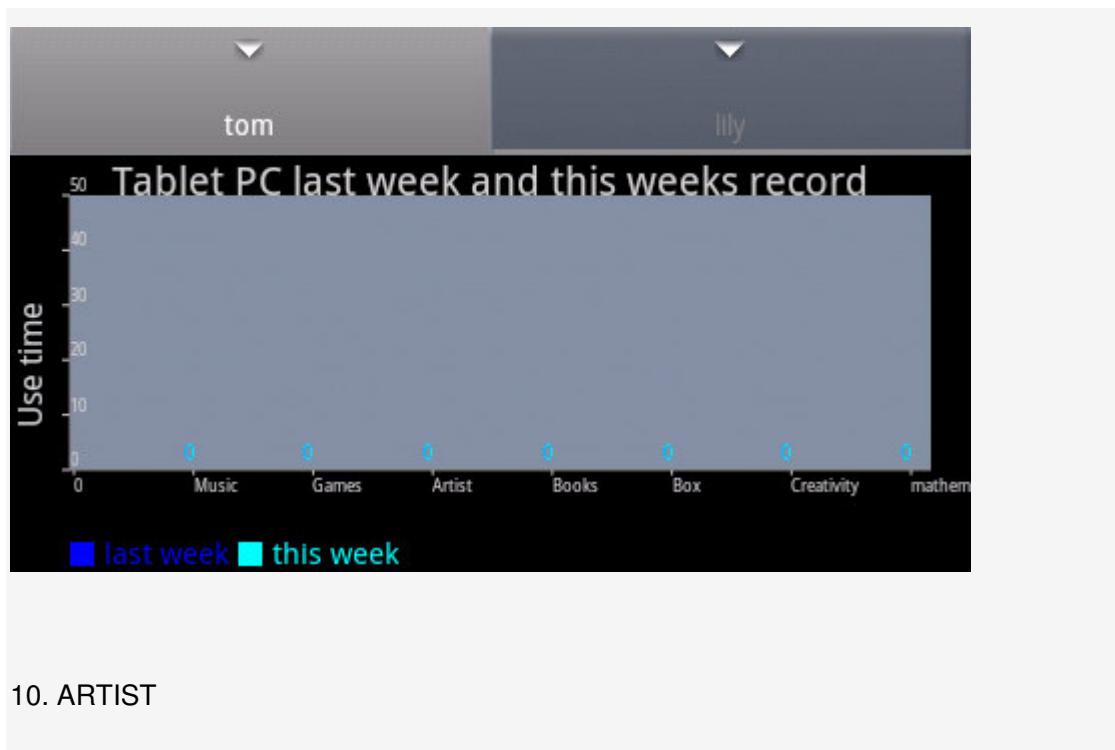

10. ARTIST

Artist is divided into five functions : My Camera 、 My Photos 、 Photo Editor 、 Video、 My Videos.



10.1. My Camera

Main functions:

Decoration: Select a picture frame to add to your photos

Special effects: Choose six kinds of special effects:Sepia,color tone(red, green and blue), Negative, black and white.

Count down: After 5 seconds the camera will automatically take photos


Preview: Check the last photos

Camera sounds :Select the camera sounds when you take photos.

Collage: Take 4 photos and you can automatically combine one picture.

Settings: Set the resolution:1600x1200、1280x1024、800x600、640x480

Continuous shooting: 1,3,5,9 pictures

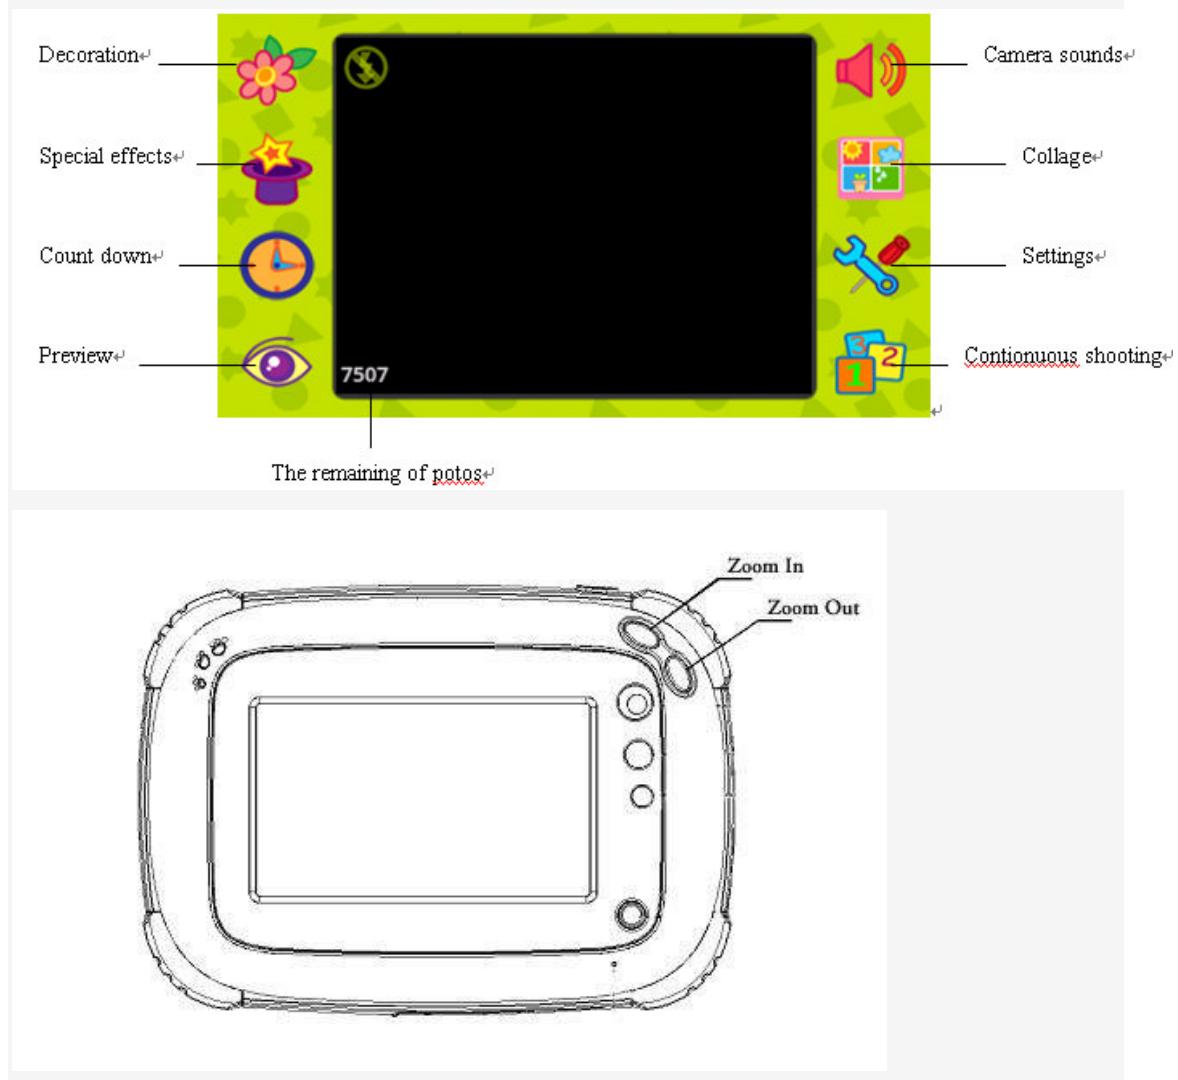

10.2. My Photos

- Slide up and down to preview pictures. Click on the photos to enlarge.
- Delete function: Click on the waste bin, then choose any pictures you want to delete, then click on the waste bin again.



10.3. Photo editor

Function description:

Browse: Choose any photos you need to edit.

Undo: Return to the last step.

Pencil: Choose the color size and style of the pasted pencil to customize your current pencil.

Pictures brush: Choose a pattern for your paint brush.

Background color: Choose a photo background color.

Photo frames: Choose a photo frame to add to your photos.

Decoration: Choose a decoration to add to your photos.

Words: Choose words to add to your photos.

Mirror: Mirror photos

Eraser: Erase the edited area .



10.4. Video

Main functions:


Start/Stop: Start/Stop to record the video.

Playback: Play the last recorded video



10.5. My Videos

- Click on a video to play.
- To click on the waste bin, then choose any video you want to delete, then click on waste bin again.

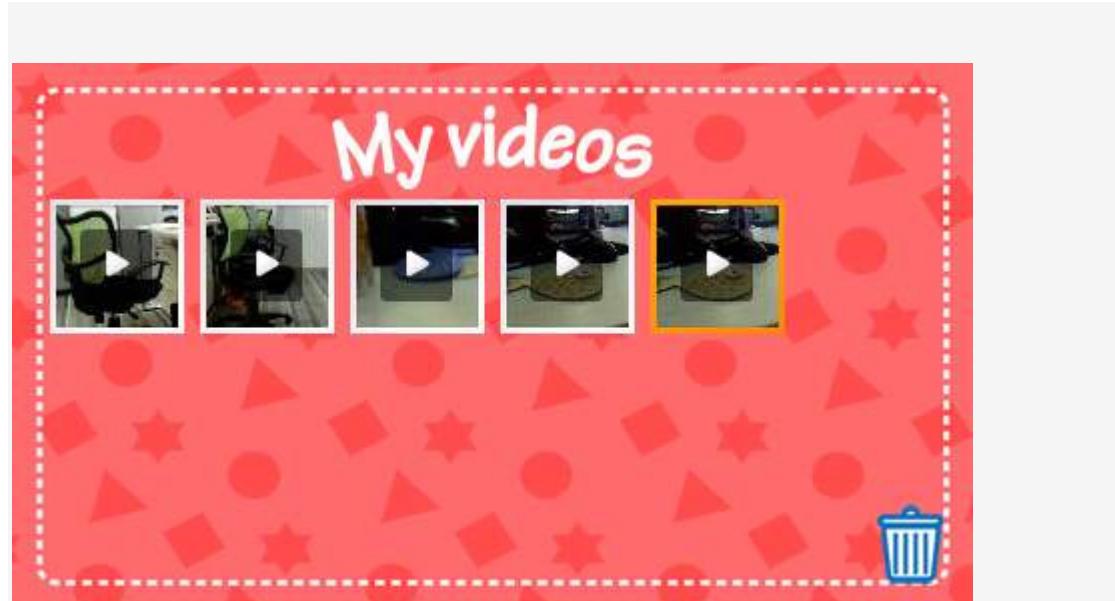

11. Charging Kalala Pad

To charge Kalala Pad, use the power adapter(faster) or USB cable to connect tablet to PC.

12. FAQ

1.What is APK?

APK is the abbreviation for Android application Package.

2.Tablet does not respond.

Press the RESET button (The HOLE between the headphone socket and USB port) to restart the tablet.

3.The pictures can not be saved.

Check if the TF card has been installed.

4.Intelligence help.

Click on the "?" icon at the bottom left corner of screen for help.

5.Operation suggestion:

We recommend not rush to operate tablet when you are installing/uninstalling an application or opening an application. If you did , system error will be occurred.
(It's common issue of Android system,not I wit system.)

6.Superviser password

If you forgot password, pls use supervisor password "888888" to login and revise your password.

7. How to manage the picture and video?

Photo storage path: Micro SD://pictures/...

Video storage path: Micro SD://movies/...

In order to protect information safety, USB cable is only used for charging not for data transmission.

8. Display and resolution issue

Because there are many types of resolution for Android tablet , some applications do not match our tablet. (It's common issue of Android system,not I wit system.)

9. Supported video formats

Support 480P and MP4, 3GP, AVI, RMVB,WMV, FLV formats etc.

10. Replace APK

If you want to replace the APK, we recommend you to uninstall it first.

11. This version doesn't support hot plug of micro SD card .
12. If operate too fast, the overlapping voice will happen occasionally. You can solve the problem by turn-off and turn-on the sound
13. When the power icon turns red , please stop using it , otherwise it might shutdown automatically .
14. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference,
 - (2) this device must accept any interference received, including interference that may cause undesired operation.