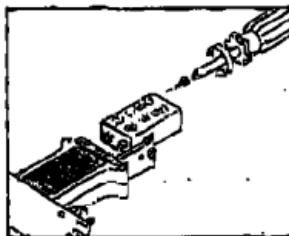
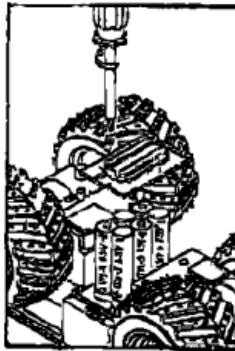


MODEL 72288/6788/06568RC 06588RC USER'S MANUAL**A. CONTROLLER**

1. UNSCREW THE BATTERY COMPARTMENT COVER.
2. PLACE ONE 9V.ALKALINE BATTERY INSIDE THE COMPARTMENT AS THE ENGRAVED POSITION.
3. PUSH OR PULL THE LEVER FOR FORWARD AND REVERSE.

**B. CAR**

1. UNSCREW AND OPEN THE BATTERY COMPARTMENT COVER AT THE CHASSIS OF THE CAR.
2. PLACE SIX "AA" OR "UM-3" SIZE ALKALINE BATTERY INTO THE BATTERY COMPARTMENT AS THE LABEL POSITION.
3. DO NOT MIX NEW AND OLD BATTERIES TOGETHER.
4. DO NOT MIX ALKALINE, LITHIUM OR OTHER KIND SAME SIZE BATTERIES TOGETHER.
5. DO NOT USE RECHARGEABLE BATTERIES.
6. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
7. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
8. ALWAYS REMOVE OUT EXHAUSTED OR DEAD BATTERIES FROM THE PRODUCT.
9. WHEN STORING FOR A LONG PERIODS OF TIME, REMOVE OUT THE BATTERIES.

**NOTE:**

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.