
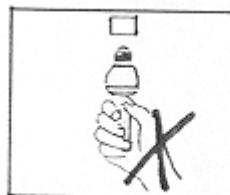


## USER'S MANUAL

### OPERATING INSTRUCTION FOR TME15W, TME20W, TME25W

1. USE ONLY ON 120V 60HZ CIRCUITS.
2. USE ONLY WITH A PORTABLE TABLE LAMP THAT IS PROVIDED WITH A SHADE.
3. THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXIT FIXTURES OR EMERGENCY EXIT LIGHTS.
4. NOT FOR USE ON DIMMING CIRCUITS.
5. NOT FOR USE IN TOTALLY ENCLOSED RECESSED FIXTURES.
6. USE IN DRY LOCATION ONLY.
7. INSTALL AND REMOVE LAMP FROM FIXTURE BY GRASPING PLASTIC BASE.

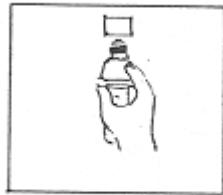

THIS RF LIGHTING DEVICE COMPLIES WITH PART 18 OF THE FCC RULES.

1. USE ONLY ON 120 VOLT, 60 HERTZ.
2. NEVER DISASSEMBLE OR MODIFY – ANY CHANGES COULD VOID THE USER'S AUTHORITY TO OPERATE THIS DEVICE.
3. NOT FOR USE IN TOTALLY ENCLOSED FIXTURES.
4. RISK OF ELECTRIC SHOCK – DO NOT USE WHERE DIRECTLY EXPOSED TO WATER.
5. THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXIT FIXTURES OR EMERGENCY EXIT LIGHTS.
6. THIS PRODUCT COULD PRODUCE INTERFERENCE WHEN USED NEAR A TV, RADIO, WIRELESS REMOTE CONTROL OR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45~30 MHz. IF INTERFERENCE SHOULD OCCUR, MOVE THE LAMP OR THE APPLIANCE INTO A DIFFERENT OUTLET.
7. TO PREVENT BURNS, DO NOT TOUCH THE BULB DURING OPERATION OR IMMEDIATELY AFTER SWITCHING OFF.
8. NOT FOR USE WITH DIMMERS, ELECTRONIC TIMER OR PHOTOCELL DEVICES OR OCCUPANCY SENSOR.