
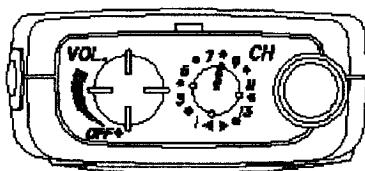


3. OPERATION

3.1 KEY NAME

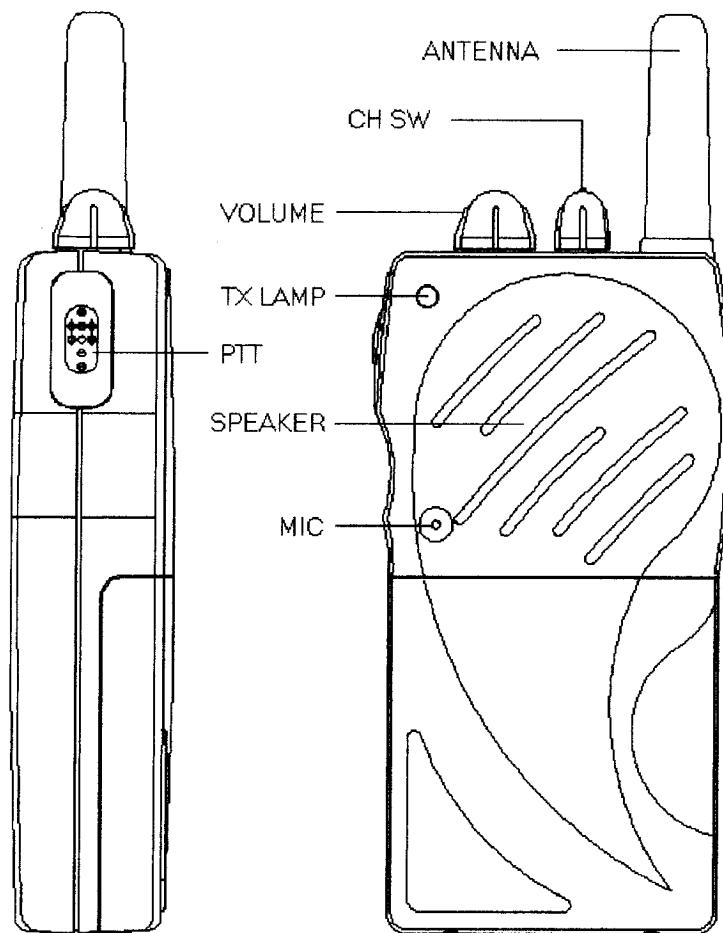

3.2 KEY FUNCTIONS

1) POWER KEY

ON : Rotary Volume with Switch Turn on (clockwise). Power is turned on with beep tone and puts radios in the stand by mode.

OFF : Rotary Volume with Switch Turn off (counter clockwise).

Then power is turned off with beep tone.

2) UP KEY

Whenever the CH Switch turn right, the channel is increased one step by one step.

3) DOWN KEY

Whenever the CH Switch turn left, the channel is decreased one step by one step.

4) PTT(Push To Talk) KEY

PTT key is pressed in stand by mode, it is turned to TX mode, TX LED Lamp is turn on RED color.

PTT key is released, it is turn off and stand by mode.

3.3 SETTING AND OPERATION

- a) The points checked before power on.
 - 1) Check if the battery is installed firmly on the equipment.
 - 2) Check if the ANT is installed firmly on the equipment.
 - 3) After the power is on, the radio is in Rx stand-by mode and ready for Transmission.
- b) Tx
 - 1) After a desired channel number is selected, while holding the PTT key on the left side of the radio, call up the partner station.
 - 2) At this time, LED lights RED color.
 - 3) While communicating, talk to microphone 5cm distant from the lips to communicate clearly.
- c) Rx
 - 1) When the TX is finished, if the PTT key is released, the radio unit turns to the Rx stand-by.
 - 2) When a certain channel is receiving a signal, comes out Audio from internal Speaker.
- d) stand-by
Radio is under the automatic power saving

Remark

When battery level is low, warning tone comes out from Speaker.