



The Cordless Powder Cord FOR WHEN IT DEEP

Installation & Setup

Fastening SKI FINDER RECEIVERS(RX) to Skis:

A. Mount SKI FINDER RX in front of bindings with the snow cowl opening to the rear. Use special strong Velcro provided. Place hook type Velcro on SKI FINDERS, not on SKIS.

B. Mount loop type Velcro on SKIS.

If the skier wants a more secure mounting for extreme skiing, a small screw can be used to secure the SKI FINDER to the skis. (The PCB must be removed carefully, a hole must be drilled in bottom section, then attach screw. Replace PCB and reassemble.)

SNOW FLOW OVER SKI FINDER RX

(Cover & On/Off Button toward rear of ski)

Toe Piece Area (Preferred Mounting)

To Personalize Locate Chime on Receivers (RX) (Not Required for operation):

A. HOLD Power On/Off button for 5 seconds (Figure B) on each RX.

B. RX will sequence through available locate chimes. (It is best to make chimes the same for both RX.)

C. Press On/Off button when your chime is playing to select it as your personal chime. (This will not have to be reprogrammed until you change RX batteries.)

Link Receivers(RX) to Transmitter(TX)

(Not required on new units as they are already linked):

A. Remove the four screws on the RX units. (Figure A&B)

B. Press Learn Button on PCB of RX (both). Note: Learn button position in Figure B.

C. Hold down both the LOCATE button and the Transmitter FIND Button. (Figure C.) Point the TX towards the RX. When learned, RX provides one long tone.

D. Then press On/Off Button. This will provide two short tones to confirm power off.

E. Replace four screws and nuts (Figure A&B) and fasten securely to insure water resistant seal. (VERY IMPORTANT!)

F. Your SKI FINDERS are now personally encoded for your transmitter. (No other person can activate your ski finders.)

BOTTOM VIEW

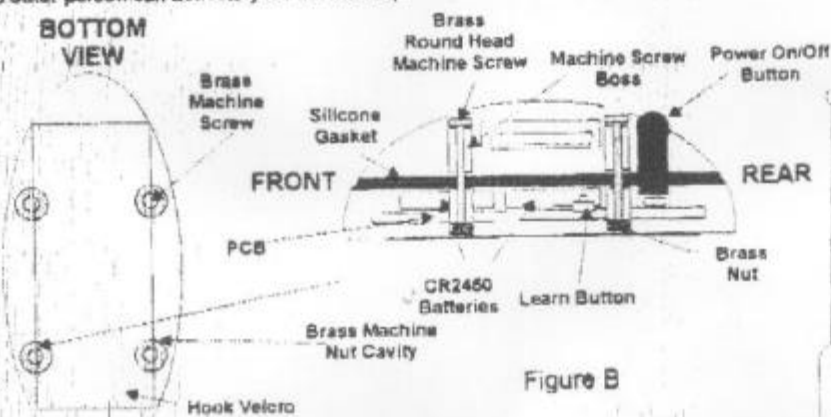


Figure A

Figure B

Version 1.35
Made in Taiwan

Operating Instructions TO ACTIVATE SKI FINDERS:

A. Power on RX by pressing the On/Off buttons on each RX. (A long confirmation tone will sound.)

B. Test SKI FINDER with LOCATE Button or FIND Button.

C. Locate Function can be used to locate skis at ski racks, chalets, etc. (It is half as loud as the find function so it is not as annoying and saves batteries.)

NOTE: RX units will power off automatically after 4 hours. Hitting either LOCATE or FIND buttons on TX resets the timeout on the RX. This feature is to help insure battery life of the RX in case the skier forgets to shut them off.

TO FIND SKIS:

A. Extend TX Antenna to maximum.

B. Power off RX that is not lost. (Two confirmation beeps are heard.)

C. Press FIND Button.

D. When no RX alarm is heard, hold TX on a horizontal plane with the snow.

E. Move downslope at 10 foot intervals and retry until alarm is heard.

F. Heavy snow or unusual conditions may reduce range.

IMPORTANT NOTES:

- Power Off RX when not in use.
- Avoid using FIND Function (reduces battery life).
- Range will be decreased in deeper snow conditions.
- Always extend TX antenna when in FIND mode.

To Replace RX Batteries

A. Remove the four brass screws.

B. Remove plastic snap on lid on top of batteries.

C. Remove CR2450 batteries and replace.

D. Replace plastic snap on lid.

E. Replace the four brass screws securely, maintaining seal with silicone gasket. (Very important as the internals of the ski finder must be kept dry.)

Main office:

Wireless Alarm Products, Inc.
17W240 22nd Street Suite 201
Oakbrook Terrace, IL 60181
www.wirelessalarm.com

Distribution Center:
Pal Products, Inc.
2500 48th St. So.
Wisconsin Rapids, WI 54495

Patent Pending
Copyright 1999

