

BATTERY INSTALLATION (Two AA size batteries (1.5v) included)

1. Remove screw and open battery cover from the back of the microphone handle and lift it off.
2. Install two new AA size batteries in accordance with the instructions located in the battery compartment. Replace the battery cover and tighten screw.
3. Extend the wire antenna fully.



NOTE:
When using the FM Microphone, hold the microphone 2 inches from your mouth and speak in a normal voice into the head of the microphone.

TO OPERATE BROADCASTING FUNCTION

1. Use any good FM radio. Turn the radio ON and face the radio towards you. Adjust the volume to a normal level.
2. Place the Microphone near to the radio and turn the microphone switch to on. Hold the Microphone 2 inches away from your mouth and speak in a normal voice while turning your FM radio back and forth across the 98 mark on the tuning dial. If the reception of the Microphone is good when your radio is turned between local broadcast stations then no further adjustment of the Microphone is necessary. Do this slowly to get best reception.
3. After the FM radio is turned to the Microphone, move 5 feet away from radio. Face with the antenna towards the radio and speak into the Microphone while someone carefully turns the radio to the best reception. When using the Microphone at a distance of 10 feet or more from the radio, it may be necessary to increase the volume of the radio and carefully tune the radio again for best reception.
4. For best results, stand 5 to 10 feet away from the radio with the antenna pointed towards the radio.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT

NOTE: In case you hear feedback sound, move the microphone further away from the radio or lower the volume control on radio.

Important Notes:

- This Microphone is for use with FM radios only; will not work on the AM band.
- The tuning range of your FM Microphone is 98 on the FM dial.
- When using Microphone, keep the antenna facing toward the receiver and the receiver facing toward the Microphone.
- When using the Microphone, hold the Microphone 2 inches from your mouth and speak in a normal voice.
- The reception of the Microphone may be affected by the environment i.e. metal structure or the movement of people between the Microphone and the radio. The reception is also affected by the condition of the Microphone and/or radio batteries.
- If the Microphone is not to be used for a period of time, remove the batteries from the set.
- For best results, the manufacturer recommends the use of alkaline batteries.
- To prevent damage, do not expose the set to rain or moisture.

Jeff Ward