

USER MANUAL
W7pro

Main functions

- 7" 800*400 capacitive touch screen.
- Support MP3/WMA/ AAC/OGG /WAV music format.
- Support video of AVI/ WMV/MP4/ MKV/ RM/RMVB/TS/ FLV format ,up to 1080P.
- Support TF card.
- Support picture auto browse in PNG/JPG/BMP/JPEG/GIF format.
- Energy-saving setting, brightness control and sleep.
- Support multi languages.
- Support Win2000 /Win XP/Vista system/Win 7.
- Support downloading files from internet.
- USB2.0 high speed transfer

- Support APK program installation.
- Portable disk.
- OTG function. Support play files from USB device, of which the rated current should be lower than 500mA, via OTG port. When play files saved in a hard disk, for the power consumption is large, please connect an outer power.
- Support firmware upgrade.
- G-Sensor function.
- Camera each on front and back panel
- Support multi-point touch function
- Support WIFI Wireless Connection
- Could make calls as a mobile phone

Precautions

1. Do not use the tablet in extremely hot, cold, dusty or damp environments.

2. Do not drop the tablet when using it.
3. The usage life of battery is subject to the operating condition and environment.
4. Please charge the battery in the following instances:
 - A. The icon of battery level shows weak
 - B. System powers off automatically, and powers off again after restarting
 - C. Keys do not work.
5. During the formatting or uploading/downloading, do not disconnect the tablet from the PC. Disconnection during updating or data transfer may damage files or the tablet.
6. Static discharge to the cable during connection to the computer may corrupt files or the storage area of the tablet.
7. The images in this manual may vary slightly from actual product.
8. Dismantling the tablet and will void the warranty. Please check the trouble shooting section of this manual if experiencing problems.
9. Our company reserves the right to improve the product.

Different software and hardware versions might affect the

product performance and functions, therefore the product


shall be subject to change without further notice

10. Please respect the copyright laws in your area.
11. The tablet is equipped with the touch screen, so keys on machine surface are for assistance only.

※ All warranty information, product features and specifications are subject to change without notice.

About the tablet

Keys and interfaces on machine surface have functions shown below:

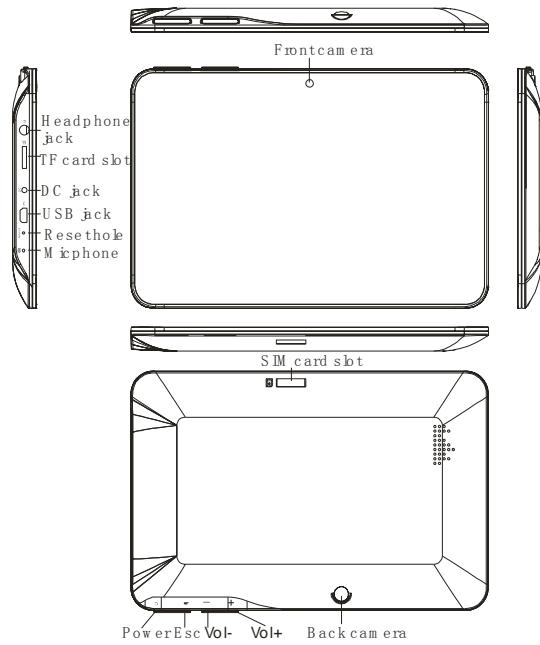

There are some function keys located on the machine surface.

Power key: long press to turn on/off the Tablet. When the tablet was turned on, user can turn on/off the screen by

short pressing this key.

Esc key: press to return the previous screen.

Vol+/Vol-:adjust volume.

Basic Operations

- **How to Power On/Off the tablet?**

To power on/off the tablet, please press power key and hold for 3S. This period will need several seconds, please wait patient.

- **How to turn on/off the LCD?**

After powering on the tablet, if you are not watching video, you can short press power key to turn off the LCD to save power. To turn on the LCD, please short press power key again.

Note: The screen is locked also when the screen is turned off, to unlock the screen, please pull the lock icon to unlock icon .

- **Touch & type**

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the

touchscreen. You can also change the screen's orientation.

To select or activate something, touch it.

To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field.

Other common gestures include:

a) Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, touching an icon on home screen

and hold it, when the delete icon  is shown on the screen, dragging the selected icon to this icon can delete it from the home screen.

b) Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.

c) Swipe or slide: Quickly move your finger across the surface of

the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.

d) Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, doubletap a webpage in Browser to zoom in, and double-tap again to zoom out.

e) Pinch: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

f) Rotate the screen: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

Related settings

Settings > Device > Display

- **How to reset the tablet?**

If your tablet cannot response to any function key, please use pin to press the reset button in the reset hole to reset the tablet.

- **How to save power?**

The battery icon on the screen shows the rest volume of electricity. To save the power, in system setting interface, please set **Brightness** and **Sleep** to a reasonable level

- **How to charge the tablet?**

Please charge the tablet timely before the battery icon shows blank.

The tablet can be charged via the commanded DC charger.

When the tablet is on, the battery icon shows pulse and shows full when the charging is finished.

The whole charging period need **5** hours. It is normal to find that the machine surface is warm under charging state.

- **G-sensor**

If do settings setting→display→Auto-rotate screen→on, the tablet will switch the screen orientation automatically when it is being rotated.

- **Connect to Computer and File Transfer**

You can use a USB cable to connect your phone to a Windows computer and transfer music, pictures, and other


files in both directions.

Home screen

Press power key and hold for 3S to power on the tablet, then the screen is shown as the below:



Press the lock icon, pop up unlock icon on the screen, drag the lock icon to unlock icon side, enter in home screen as below:

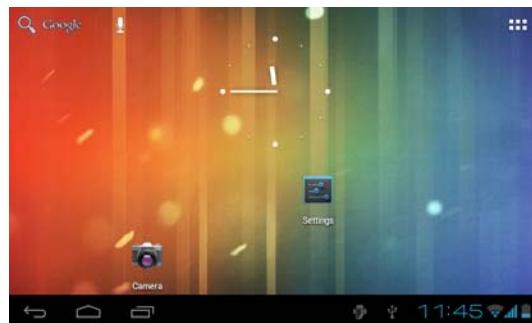

At the bottom of the screen, you'll find three Navigation buttons. They're always available. No matter what you're doing with your tablet, you can always get back to the main Home screen or return to previous screens.



Back: Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.



Home: Opens Home. If you're viewing a left or right Home screen, opens the central Home screen.



Recent apps: Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

Note: After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.



system notification: drag it down to see the system notifications.



Status icons:

it is used to show the current status of network connection, battery volume and system time.



All Apps: Touch it to see all your apps and widgets. To open an app, folder, or widget, touch its icon.




Browser



From a Home or All Apps screen, touch the Browser icon

to open internet browser shown below:

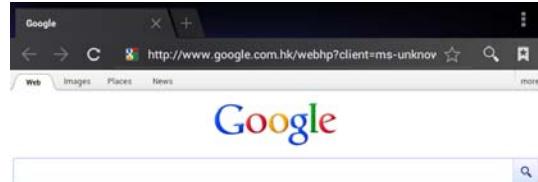

touch to open a new window.



: touch to scan most visited website and web page

memorized in history.



: touch to add bookmarks.



: touch to popup more operation menu.

Settings



From a Home or All Apps screen, touch the Settings icon

to enter the system setting interface, on which user can do
settings shown below:



a) Wireless & networks: touch to enter Wi-Fi managing interface, on which user can scan current Wi-Fi connection under item Wi-Fi. On Wi-Fi managing interface, if user touch item Wi-Fi settings, then your tablet will scan all Wi-Fi networks available and list them on the screen .

On the Wi-Fi network list, touching any Wi-Fi network scanned can view its signal status and select whether

connect it or not, and touching menu icon  popup more advanced settings.

Wi-Fi networks scanned

b)Mobile networks:

After you insert the SIM card into the SIM card slot,please do settings- Wireless & networks-more- Mobile networks-Modem power-on.

- c) Sound: touch to setting "Volume,Phone ringtone, Default notification,Dial pad touch tones,Touch sounds,screen lock sounds"
- d)Display:touch to setting "Brightness,Wallpaper,auto-rotate screen,Sleep,Font size"
- e)Storage: touch to view SD card & device storage setting.
- f)Battery:touch to scan the situation of the battery.
- g)Apps:touch to scan the APPS .
- h)Location & services: Location settings.
- i)Security:user can do screen security here.
- j)Backup & reset:touch to enter"Factory data reset:interface.
- k)Language & input: touch to set system language and text inputting method.
- l)Accessibility:accessibility setting)
- k) Date & time: touch to set system time and date.
- l) About tablet : touch to view basic information about your tablet.

Note: it is important to do system setting, please enter the setting interface of your tablet to view each setting items carefully before using your tablet.

ApkInstaller

Your tablet support managing APK program.

From a Home or All Apps screen, touch the ApkInstaller icon to enter the corresponding interface:



Video Player



From a Home or All Apps screen, touch the Video icon to enter the video file listing interface. Drag your finger on the screen up and down to view the list and touch any one to enter video playing interface like the below:



Icons in the tool bar shown on the above interface have functions shown below:

Volume: touch to decrease/increase the volume.

Progress bar: it is used to view video playing progress. Dragging it can fast reverse/forward the video.

touch to add the current point to be a bookmark.

touch to set the screen brightness.

touch to play the previous/next video.

long press to fast reverse/forward the current video.

 /  pause/play: touch to pause/ resume the normal play.

: touch to play video in different size.



: touch to return the previous directory.

: touch to show sub menu which includes items Delete

Bookmark and Play from beginning, Delete bookmark, Play

mode, Help and Return.

To hide/show the toolbar, please touch the screen centre directly.

Note1: If a bookmark is set, then, then if a movie had not been played completely last time, the tablet will remember the pause point. User can select whether play this movie from the pause point next time.

Note 2: On the video file list, long pressing a file can popup the file delete frame, on which user can select whether delete the selected file.

Music



From a Home or All Apps screen, touch the Music icon to enter the music file listing interface shown below:

touch to list all music files on screen

touch to sort song by singer.

touch to sort song by album.

touch to check latest add songs.

Drag your finger on the screen up and down to view the list and

touch any one to enter audio playing interface like the below:

Icons in the tool bar shown on the above interface have functions shown below:



is used to view video playing progress. Dragging it can fast reverse/forward the video.

 touch once fast reverse the current song to begin, fast touch twice to play the previous song.

 long press to fast forward the current song, short touch to play the next song

 pause/play: touch to pause/ resume the normal play.

: touch to popup the music

list ◊ : touch to "turn on / off shuffle"

: touch to set the song

repeat mode to repeat off, repeating all songs, repeatting current song.

 : touch to popup lrc.

Gallery



From a Home or All Apps screen, touch the Gallery icon




touch this icon can enter

into CAM app directly.

Choose a album,then choose a photo,can play the photo.When



play the photo touch on can popup submenu as below:

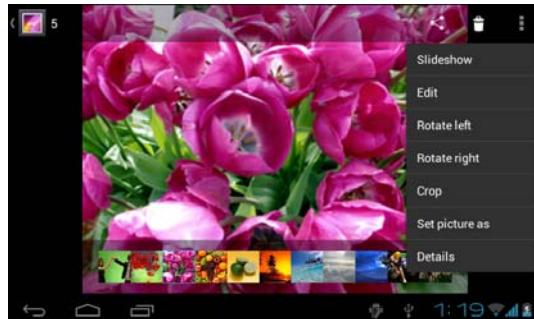

Explorer



From a Home or All Apps screen, touch the Explorer icon
enter the corresponding interface.

User can browses all the file in this device.


In file list interface, long press a file or a folder, can pop up an edit dialog, here, user can copy, delete, move, paste, rename the file.

SoudRecorder

From a Home or All Apps screen, touch the SoudRecorder icon



enter the corresponding interface .

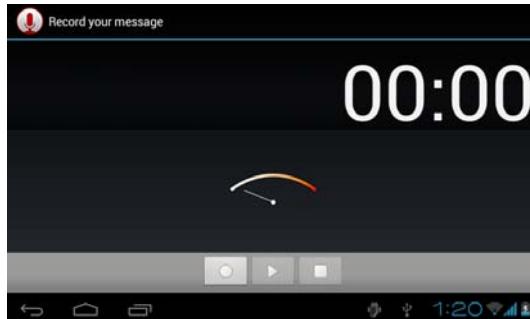

Touching

can start record, after finish the record, touching

can popup the record saving dialogue, this time touching

can listen to record just recorded.

All the record files (VXXXX.3gpp) are saved in folder Record, which is located in the root directory. User can play the record file like play songs.

Calculator



From a Home or All Apps screen, touch the Calculator icon , enter the corresponding interface,

User can do some calculation here

Canlendar



From a Home or All Apps screen, touch the Canlendar icon , enter the corresponding interface,

User can check canlendar here, and built new event here.

Clock

From a Home or All Apps screen, touch the Clock icon  enter the corresponding interface,
User can setting clock here and add alarm.

Phone

 You can place calls from the Phone app , the People app

 , or other apps or widgets that display contact information.

Wherever you see a phone number, you can usually touch it to dial.

To dial using the Phone app:

Touch the Phone icon on a Home or All Apps screen.

Notice the three tabs at the top of the phone. You can

make calls from any of them.



The Dialer tab  lets you dial manually. Touch the keys

 to enter the number, then touch the Phone icon  below the keypad to dial.

If you enter a wrong number, touch  to erase digits one by one.

To see numbers for all your contacts, touch . You can also

search your contacts from here.

To dial an international number, touch & hold the 0 key to enter the plus (+) symbol. Then enter the international prefix for the country, followed by the full phone number.

The Call log tab  shows recent calls. Touch a call to return

it.

You can switch applications during a call; for example, to look up information by using the Browser. The green phone icon appears in the Status bar while the call is underway.

To return to the Phone app while a call is in progress:

1 Swipe down from the top of the screen to reveal your notifications.

2 Touch the green phone icon.

To end a call in progress, touch the End Call icon  at the bottom of the screen.

People

Touch the People icon  on the Home or All Apps screen.

To import contacts from a SIM card:

1 Install the SIM card with your contacts on it in your new tablet.

2 From a Home or All Apps screen, open the People app .

3 Touch Menu icon  Import/Export.

4 Touch Import from SIM card.


If asked to choose an account, touch the one where you want to add the contacts.

5 To import contacts one at a time, touch them.

To import all at once, touch Menu icon  Import All.

Camera

From a Home or All Apps screen, touch the Camera icon , enter the corresponding interface,

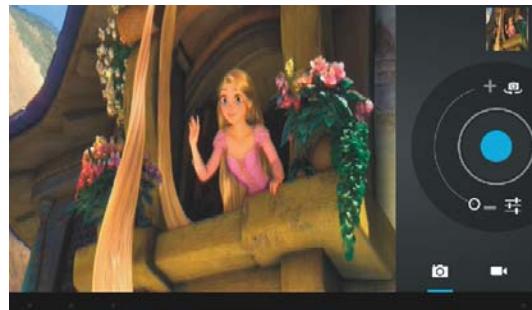

shift front and back camera



white balance



unhide setting menu



 
 
 
 
touch to comfirm take photo



Exposure



touch to shift take photo to picture recording



Troubleshooting

- The tablet cannot be turned on.

Please charge it via the DC charger to check if the battery is low.

If not, then please reset the tablet.

- **No sound can be heard from the earphones.**

1. Check if the volume is set as 0. Adjust the volume as required.

2. Check the volume of the file attempting to be played.

3. Confirm the earphone is properly connected.

- **Noise through earphones.**

1. Check if the earphone plug is clean, foreign particles can cause static to be heard through the earphone during playback.

2. Check if the music file is damaged. Confirm by playing other music. The damaged file might create serious noises or voice dithering.

- **Incorrect language displayed.**

Please make sure that you have selected the correct language.

Set language in (Settings) => (personal) => (Language &input)

- **Files cannot be downloaded.**

1. Make sure the proper connection between computer and tablet.

2. Check if the memory is full.

3. Check if the USB cable is damaged and replace if necessary.

- **Audio files not playable.**

This tablet cannot play audio files that are copy protected.

Please ensure that only files that contain no copy protection are transferred to the tablet.

- **Video files not playable.**

Please check that the video files transferred to the tablet are in the correct size and format. Some files may need to be re encoded to be played on this tablet.

- **Fail to open the web page.**

Please check whether successfully create the Wi-Fi connection.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.