

Getting Started

Your VINCI Tab M is ready to enjoy. Turn on, unlock and explore

- Press the *power* button to go in and out of sleep mode
- Press and hold the *power* button for more than 5 seconds to reset
- Press the *Menu* button to access *ANDROID™* settings

Charging

- Connect the USB cable to the USB connector with the arrow on the Cable facing the screen
- Do not bend the connector as it may damage or cause device malfunction.
- Connect the other end of the cable to the charger or to your PC. It takes about 4 hours to reach a full charge.



Parent Mode

- Press the *Menu* button and enter password “MyVINCI” (case sensitive). The password can be changed only on VINCI Tab M models running Android 4 or higher.
- Create new folders and organize your apps by pressing your finger on the screen to bring up the next prompt

Installing VINCI Curriculum SD Cards:

- Insert the Curriculum MicroSD Card directly into the VINCI Tab M, gold PINs facing up.
- Login to Parent Mode, open “ASTRO”  and go to external SD card: /mnt/sdcard/tflash for Android 2.3; /mnt/sdcard/ext_sd for Android 4.0
- Tap on CPIInstaller (Curriculum Pack Installer) and follow the prompt to install.
- If you already have CPIInstaller installed, delete the old version and install the new version upon prompt.
- All VINCI Curriculum apps are placed automatically under the appropriate VINCI Curriculum icon on the Home screen.



Install New Apps

After Parent Login, you may install new apps either by downloading from any app store or by inserting a MicroSD card. When installing from a MicroSD card, follow the same direction as for installing VINCI Curriculum apps.

View Pictures or Videos

On VINCI Tab desktop, locate Gallery. It will display all the media files including pictures and videos. Tap on a media file to enjoy.



Transfer Media Files

You can turn on USB mode when plugging your VINCI Tab M into your PC. Using Windows Explorer or any file explorer to view and exchange media files.

Warning: Please do NOT change original folder structure under /mnt/sdcard/. Copy your media files into corresponding folders instead. For example, music mp3 files under Music, video MP4 files under Movie.

Supported Media Formats

Music: MP3. Video: MP4 encoded H.264. Check www.vincigenius.com for updates.

QUICK GUIDE

VINCI Tab M



Register your VINCI Tab M today at
www.vincigenius.com to:

- Validate your warranty
- Obtain timely support
- Download **VINCI Diary** for free to track your child's developmental milestones and design your child's personal story book.



Technical Support:

www.vincigenius.com/support

Phone: 1-855-MY-VINCI

Email: contact@vincigenius.com

VINCI
Inspire the Genius

Warning:

- Do not play while charging
- Make sure the MicroUSB connector is positioned correctly
- Do not use liquids, chemicals or detergents to clean your VINCI Tab M. Only use a dry, lint-free cloth
- The inside of your VINCI Tab M contains fragile components. Do not twist, disassemble, drop from a high place, in water, or onto a hard surface, and avoid extreme heat.

Return & Warranty

12 months parts and labor only. Accidental damage of the touch screen is not covered under the regular warranty. More details at
<http://www.vincigenius.com/support/downloads>

Safety Certifications

VINCI Tab M is certified per FDA standard
ASTM F963.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the device and receiver
- Connect the device into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / television technician for help.

Use Conditions:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.