





INSTALLATION-MANUAL

INSTALLATION

► Preparation

- Open the battery compartment cover of the transmitter and the chime (receiver).
- Set the transmitter (6) and the chime (4) to the same transmission frequency code.
- Set the melody on the transmitter using the switch (10) (Westminster, 2 notes).

- Insert the batteries (see drawing) in the transmitter (7) and the chime (5).
- Close the battery compartment cover.
- Use switch (2) to set the volume and switch (3) in order to switch on/off the flash light if necessary.
- Operational check (pay attention to keeping a minimum distance of at least 1 meter between transmitter and chime).

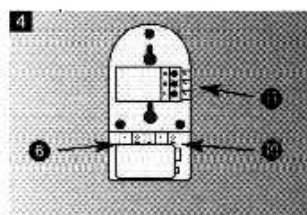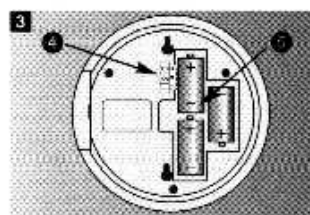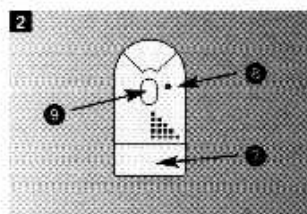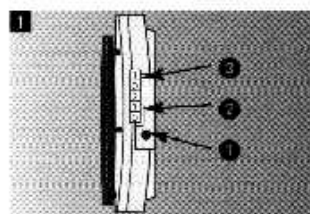


Position:

- 1 Connection plug-in power supply
- 2 Chime: 0 = off 1 = low 2 = loud
- 3 Flash light: 0 = off 1 = on
- 4 Code setting, chime
- 5 Battery compartment, chime
- 6 Code setting, transmitter
- 7 Battery compartment, transmitter
- 8 LED - transmitter control
- 9 Call pushbutton
- 10 Melody setting
- 11 Connections for call forwarding


► Special function: Call forwarding:

- Depending on the bell system (see figure 5 - 7), either use terminal A/B or terminal A/C to connect the transmitter to the bell system.
- Once the bell system has been activated, the transmitter


- will trigger the call signal at the receiver.
- To protect the transmitter against humidity, connect it to a commercially available weatherproof bell pushbutton as shown in figure 5.

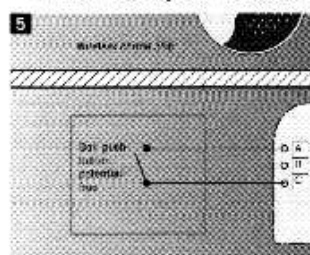

Connection to an existing bell pushbutton

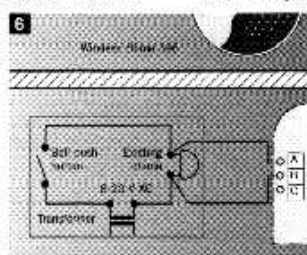

Existing bell system with transformer

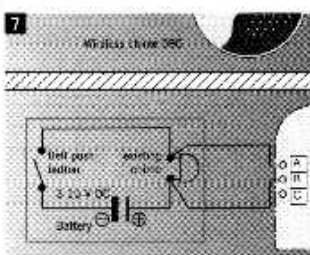

Battery operated existing bell system

OPERATION

- When the pushbutton (9) is activated, the red control lamp will be on.
- The transmitter radiates the signal to the receiver which produces the set melody or the flash light.

If there is not any call signal:

- the chime (receiver) is out of the radio range,
- or the position of the transmitter coding switch does not correspond to that of the receiver or the chime batteries are exhausted
- the switch (2) or (3) is off/0

- Walls and ceilings will reduce the range of the wireless chime. Shielding by metal parts can impair the receipt of the signal or even impede the transmission of the signal.
- In the case of possible interference with a transmitter positioned in the neighbourhood, the set code at the transmitter (6) and the receiver (4) have to be changed.

GROTHE FIVE YEAR LIMITED WARRANTY

This is a "Limited Warranty" as defined in the U.S. Consumer Product Warranty and Federal Trade Commission Improvement Act. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

For a period of five years from the date of purchase, any malfunction caused by factory defective parts or workmanship will be corrected at no charge to you. **Batteries are not covered.** To obtain a refund or a replacement, return the product to the place of purchase.

Not Covered: Repair service, adjustment and calibration due to misuse, abuse or negligence, light bulbs, batteries and other expendable items are not covered by this warranty. Unauthorized service or modification of the product or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.

This warranty covers only GROTHE assembled products and is not extended to other equipment and components that a customer uses in conjunction with our products.

SUCH REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE CUSTOMER AND THERE SHALL BE NO LIABILITY ON THE PART OF GROTHE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you are not satisfied with our warranty service or our products or if you have difficulty with receiving warranty service from our dealer, please write directly to GROTHE Inc. Your problems will receive immediate personal attention.