

Instruction Manual**Key Function**

[POWER / SOUND] -- Press to turn on power. After power on, press once to disable sound and press again to sound. Keep pressed 2 seconds to turn off the power.

[ENTER / CONFIRM] -- Press to enter mode, or to confirm data after input.

[CANCEL / EXIT /READ] -- Press to cancel data, or to exit mode, or to read the newest message in relative mode.

[CHAT] -- Press to enter CHAT mode.

[↑] -- Press to move upward, or forward to next page of screen in relative mode.

[↓] -- Press to move downward, or backward to last page of screen in relative mode.

[←] -- Press to move left.

[→] -- Press to move right.

ICON Introduction

Personal Data



Pal Selection



Outgoing Message Edit



Transmission



Incoming Message View



Chatting



Horoscope



Time & Date

**ICON Interpretation****Personal Data Icon**

The user can set his/her personal data, i.e. gender, age and constellation in this icon.

How To Set Your Personal Data ??

Press the key [ENTER / CONFIRM] to activate the gender setting mode. The following screen will be seen.

Gender : Male ()

Female ()

The user can select his/her gender by using the keys [↑], [↓], [←], [→] and then press [ENTER / CONFIRM] key to confirm, or use the key [CANCEL / EXIT / READ] to delete the opposite sex that will automatically confirm too.

Age : Over 25 years old (↑25) Under 25 years old (↓25)

After gender is set, press [↓] key once to enter Age page. Press [ENTER / CONFIRM] key to activate the age setting mode. Use the keys [↑], [↓], [←], [→] to select your age, and then press [ENTER / CONFIRM] key to confirm, or use the key [CANCEL / EXIT / READ] to delete the unsuitable ones that will automatically confirm too.

Constellation : There are total four pages to show the constellation.

(1st page)

Capricorn



Aquarius



Pisces



(2nd page)

Aries



Taurus



Gemini



(3rd page)

Cancer



Leo



Virgo



(4th page)

Libra



Scorpio



Sagittarius



After age is set, press [↓] key once to enter the Constellation page. Press [ENTER / CONFIRM] key to activate the constellation selection mode. Use the [←], [→] keys to move left and right and [↑], [↓] keys to turn the pages to select your own. Then press [ENTER / CONFIRM] key to confirm your selection.

If wrong selection is done, press [ENTER / CONFIRM] key once again to return to the constellation selection mode. Then repeat the previous steps to select your own again.

After finished, press the key [→] to forward to the Pal Selection Icon

Pal Selection Icon

After personal data is set, press the key [→] to enter this icon. Press [ENTER / CONFIRM] key to activate the mode. Use [↑], [↓], [←], [→] keys to select the kind of pal you want. (G = General , S = Special). Then press [ENTER / CONFIRM] key to enter the G or S selection mode.

If G mode is selected, there will three images appeared on the screen. Use the keys [←], [→] to select the expected pal, and then press [ENTER / CONFIRM] key to confirm.

Male



Female



All (i.e. all people)



Note : If G mode is used, any incoming message with the same sex as you selected will be received.

If S mode is selected, there will be a female image shown on the screen. Press [ENTER / CONFIRM] key to confirm. If you want the male to be your pal, press [ENTER / CONFIRM] key again. A male and female image will be shown. Use the keys [←], [→] to select the sex, and then press the key [ENTER / CONFIRM] to confirm.

Note : If S mode is used, only the message with the exact same gender, age and constellation as yours will be received (except chatting message).

After selection of expected pal, press the key [↓] to enter the age page. In this mode, you can select the ideal age of your pal by using the same step as used in \$ selection above. Then press the key [↓] to enter the constellation page. In this mode, you can select the constellation for your expected pal. Press the key [ENTER / CONFIRM] to activate the constellation selection mode. Use the [↑], [↓] keys to turn the pages and [←], [→] keys to move left and right to select the required. Then press [ENTER / CONFIRM] key to confirm.

After all selection is done, press once the key [CANCEL / EXIT / READ] to exit the mode. Press [→] key to forward to Outgoing Message Edit Icon.

Outgoing Message Edit Icon

In this mode, the user can edit message or input his/her personal information such as name, address, email address ... etc. with maximum 35 characters. These 35 characters will be displayed in four pages of screen. The first three pages will show 9 characters while the fourth page will show 8 characters only.

Firstly press the key [ENTER / CONFIRM] to activate the editing mode. Press again the same key to enter the edit standby mode and start the editing. Use the keys [←], [→] to select the required character from the character selection page. If the character is not available in the page, use the keys [↑], [↓] to turn the next page to get it. After the required character is gotten, press the key [ENTER / CONFIRM] to confirm. Then do the same steps to complete the editing. If correction is required, just select and put the new character on the same position of the old character and press the key [ENTER / CONFIRM] to confirm and replace.

There are total six character selection pages where total 57 basic characters and 3 control characters are filed.

[57 basic characters] -

[3 control characters] -

- + : Insert a space between two characters on screen.
- : Delete one character on screen.
- ☒ : Delete all characters from the character at the current cursor to the end.

After editing messages, press [CANCEL / EXIT / READ] to exit the mode. Then press the key [→] to enter the Transmission Icon.

Transmission Icon

 
After reach at this icon, press the key [ENTER / CONFIRM] to activate the  transmission mode. Use the keys [↑], [↓], [←], [→] to move the cursor to select the Y (= emit on) or N (= emit off). If selected Y, then press the key [ENTER / CONFIRM] to send your messages. If selected N and press the key [ENTER / CONFIRM], no transmission is sent. Press the key [→] to enter the next icon, i.e. Incoming Message View Icon.

Incoming Message View Icon

In this mode, the user can read the incoming message included the chatting message and delete the older message. Following is the steps to achieve it :

< Read Message >

When there is no message received, NO DATA will be shown on the screen. If there is no new message, the last message will appear on the screen. If there are some new messages,



(n = new message number, will be from 1 to 20)

will appear on the screen. Using [↑] an [↓] keys to read the messages. If the message is too long and cannot be displayed on one screen, it will roll toward left. The end of each message is with personal data of your pal. If this data is with no constellation shown, it is a chatting message.

< Fresh View >

When reading current message and new message came in, press the key [CANCEL / EXIT / READ] to read the newest message. If return to the previous message, just press the same key once again.

< Delete >

During reading message, press the key [ENTER / CONFIRM] enter to the delete menu

DEL? Y N

Select Y (means yes) and press the key [ENTER / CONFIRM] to confirm the deletion. Press the key [→] to enter the Chatting icon.

Note : Everytime message is received, a melody will be heard and red LED flashes too.

Chatting

After entered this icon, message will **not** be received except chatting message. In this icon, there are two menus, i.e. **PSWD : AAA** (= password) and **EDIT DATA**. Press [\uparrow] or [\downarrow] key to take the selection.

PSWD : AAA

The default password is AAA. When you press CHAT key to transmit chatting message, **only** those that has the **same** password is able to receive the message. The user also can change the password. Press the key [ENTER / CONFIRM]. **MODI : AAA** appears on the screen. Press once again the key [ENTER / CONFIRM] to enter the character selection page and select the new password. After finished, press the key [ENTER / CONFIRM] to confirm the change and save the new password. If give up saving, press the key [CANCEL / EXIT / READ] to exit the mode.

EDIT DATA

In this menu, the user can edit his/her chatting message which can be with 32 characters, the maximum. The manipulation is same as what using for the outgoing message edit. After finished, press the key [CANCEL / EXIT / READ] to exit edit mode.

EDIT DATA appears again on the screen.

How To Transmit Your Chatting Message ??

After exited the chatting message edit mode, press the key [CHAT] to send out your message.

If received chatting message, press the key [\leftarrow] return to Incoming Message View Icon to read the message.

Horoscope Icon

After the Chatting Icon, press the key [\rightarrow] to enter this icon which fortune telling will be shown on the screen.

Press the key [\rightarrow] to enter the Time & Date Icon.

Time & Date Icon

In this icon, the user will see the current time and date or can adjust or set the time and date.

< Read Time & Date >

Use the keys [\uparrow] [\downarrow] to read the current time and date.

< Adjust / Set The Time & Date >

Press the key [ENTER / CONFIRM] to enter the setting mode. Move the cursor by using the keys [\leftarrow] [\rightarrow] to the change position and use the keys [\uparrow] [\downarrow] to adjust or set the required. After finished, press the key [ENTER / CONFIRM] to confirm and save.

To: Interfetk Testing Service

Attn: Mr. Anthony LOVE PAL *Instruction Manual*

page 6

From: Anthony Chan

*** If the device is mal-function, push the **RESET** hole by using pin on the back side of the product to reset the device and clear all memory. ***

Warning: Change or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a resident installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Statement: This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.