

V63 User's Manual

This Manual is correct in the contents when it is published, however Shanghai PengYu reserves the right to modify the technical specifications without other notification. Some contents in the Manual are possibly distinguished from the real phone and will be different according to the included software, SIM cards and service providers.

Disclaimer on Phone Application Service

All phone application services are supplied by various service providers. Our company will not undertake any dispute or legal responsibility rising from the illegal or unhealthful contents because our company saves, controls or modifies no built-in or updated instructions of a third party or webpage information. Please consult or lodge the complaints to the service provider or the operator for any concerns.

Contents

Safety and Precaution	2
Understand Your Phone	3
Instruction to Accessories	3
Basic Specification.....	3
Key Instruction.....	4
Icon Instruction	6
Begin to Use	7
Install SIM Card and Battery	7
Charge the Battery.....	7
Power the phone on/off	8
Memory Card	8
USB Data Cables	8
Basic Function	9
Call.....	9
Text Input	10
Function of Functional List	10
Call center	10
Multimedia.....	11
Phonebook.....	14
User profiles.....	15
Messages	16
Organizer.....	18
Settings.....	20
Fun&Games	21
Services	22
FAQ and Solutions	24
Important Security Information	26

Safety and Precaution

You should read the following information carefully before using the phone in order for you to use it safely and effectively.

Power the phone on safely

Do not use the phone at the location where the phone is prohibited using or the phone can cause the disturbance or risks.

Traffic safety is first

Do not use the phone when driving in hindrance of safe drive.

Power the phone off at the limited regions

Please abide by all the pertinent regulations or provisions. You should power the phone off near to the flammable articles, chemicals or medical equipment.

Disturbance

The mobile communication can be subject to the radio disturbance, thus affecting its performance.

Waterproof

Please keep it dry because the phone is not a waterproof device.

Place the phone beyond stretch of kids

The phone and its total accessories (including attachments) shall be placed beyond the stretch of the kids.

Accessories and batteries

Please use the batteries and adapter designed by our company, or otherwise resulting in explosion.

Specialized service

Do not bold to disassemble the phone and its accessories. The phone can only be maintained by the authorized institutes.

Understand Your Phone

Instruction to Accessories

Please confirm the intact articles as follows after unpacking the package of the phone. Please contact with the local distributor in case of the missed parts.

- A Phone
- An adapter
- Batteries
- USB data cable
- Earphone
- Instruction

Basic Specification

- Size: **xxxxmm[H]*xxxxmm[W]*xxxxmm[T]**
- Weight: approximately **xxxx** g(including standard batteries)
- Battery capacity: **xxxxx**
- Standby time: **xxxxx**
- Call time: **xxxxx**

Key Instruction

Picture	Key	Description(Under Standby Mode)
	LSK	Enter in functional list (Main menu).
	RSK	Enter in the contact list in phonebook.
	Send1	Enter in list window of SIM1/ SIM2call logs.
	Send2	Enter in list window of SIM1/ SIM2 call logs.
	FM	Enter in FM
	CH1~CH5	Short press: switch to already existing channel ; Long press: automatic save listening to the keys on channel.
	ON/OFF	Open or close FM
	Record	FM Receording
	M+/M-	Searching the channel list
	Search	Auto search
	END	Press to terminate a call or refuse a call. Press and hold to power the phone off (or power the phone on under power-off mode).
	OK	Enter in function list (main menu) Press and hold to turn on/off flashlight
	UP	Enter in Calendar
	down	Enter in Internet service
	Left	Enter in Write Messsage
	Right	Enter in Alarm
	Audio player	Into play music
	1	Press to enter in dialing window and input number 1. Press and hold to dial the voice mailbox number.
	0,2~9	Press to enter in the dialing window and input numbers 0, 2~9. Press and hold: a. directly dial the phone number at pertinent position when the quickly-dialing and inputting function is opened; b. Press to enter in dialing and inputting window alike when the quickly-dialing and inputting function is closed.
	*	Press to enter in dialing and inputting window and input symbol *. Press and hold to switch amid symbols “*”, “+”, “P” and “W”.

	#	Press to enter in dialing and inputting window and input symbol "#". Press and hold to switch amid Mute/General Modes.
Keyboard lock mode	LSK+#+	Combination, Lock or unlock keyboard

Icon Instruction

Icon	Description
	Indicate the network signal strength for SIM card 1.
	Indicate the network signal strength for SIM card 2.
	Indicate the current battery capacity for battery
	Indicate that there is an unread SMS in SIM card 1.
	Indicate that there is an unread SMS in SIM card 2.
	Indicate that there is a missed call in SIM card 1.
	Indicate that there is a missed call in SIM card 2.
	Indicate that the current profile mode is the General mode.
	Indicate that the current profile mode is the Silent mode.
	Indicate that the current profile mode is the Meeting mode.
	Indicate that the current profile mode is the Power saving mode.
	Indicate that the current profile mode is the Outdoor mode.
	Indicate that the current profile mode is the My style mode.
	Indicate that the current alarm clock is set as activated.
	Indicate that the current playing music.
	Indicate the current keypad-locked state.

Begin to Use

Install SIM Card and Battery

Please be sure to disconnect the phone with the adapter before disassembling the battery.

This version is a dual-card dual-standby phone which can be inserted with 2 SIM cards. Both SIM cards can register onto an identical network. Each SIM card is included in the socket generally. The SIM card 1 is inserted in the Socket 1 and SIM card 2 in Socket 2. You should be careful to use, insert and disassemble the SIM card because the contact of the SIM card is easy to be scraped or bent to damage.

- 1 Disassemble the battery cover.
- 2 Disassemble the battery.
- 3 Slide the SIM card into the socket.
- 4 Insert the battery.
- 5 Cover the battery.

Charge the Battery

The phone will release the warning tone displaying the insufficient battery capacity with the indication of the empty battery icon when the battery capacity is lower. Under this case, the phone may not be used in partial functions.

The phone will power off automatically when the battery capacity is too lower. Please charge the battery.

The battery icon on the screen will flash when the phone is being charged. After completion of charging, the full battery icon will display on the screen. The charging animation will be displayed on the screen when the phone is being charged under the power-off state. After completion of charging, the screen will display the prompt system of finishing charging. Under the standby mode, it takes 2-3 hours to charge the battery.

Unpack the rubber protective cover on the charging interface and connect the adapter with the phone.

1. Insert the adapter in AC electric outlet.
2. Open the rubber protective cover of the charging interface of the phone and connect the adapter to the phone.
3. The symbol indication of charging the battery appears on the screen. (the symbol indication of charging the battery can appear after waiting for a few minutes if the battery capacity is exhausted).
4. Pull the adapter apart from the power supply socket and then pull the adapter out of the phone after completion of the charge.

Note the following cases:

- I Switch to the other battery and charge it after the battery being charged is pulled out.
- II Conditions that the phone is powered off and charged (requires understanding furthermore).
- III Automatically switch to the other battery for power after the battery at supply is taken out.
- IV Automatically switch to the other battery when the battery at supply is used up.
- V Automatically switch to the battery 1 for power supply when the battery 1 is inserted if merely battery 2 presents.

Power the phone on/off

- Press and hold [End] to power the phone on under the power-off state
- Press and hold [End] to power the phone off under the power-on state.

Memory Card

The phone supports the T-Flash card (otherwise purchased), which is a multimedia memory card used to multiple the memory of the phone. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid in damaging.

- 1 Open the external cover of the T-Flash card socket.
- 2 Slide the T-Flash card into its socket.
- 3 Cover the T-Flash card socket.

USB Data Cables

This version supports the USB interface. You can connect your phone with the PC via the USB&data cable, copying or moving the files amid the phone and PC, or browsing the images, record files and video files saved in the phone via the PC.

- 1 Insert the USB data cable connector into the USB interface of the phone.
- 2 Connect the other terminal of the USB data cable with the USB interface of the PC.
- 3 The phone pops up window with 3 modes at your choice: Mass storage and COMPort.

Basic Function

Call

The phone will select the main network automatically after powered on if it is located within the coverage of the main network. The phone can use other network, called as roaming, if the phone is not located within the coverage of the main network when the network operator protocol permits.

You can dial or answer a call when the symbol of the network operator appears on the screen.

Dial

You can dial with several ways as follows:

- Input the phone number (should affix the international/national/regional code or district code if necessary) and then press **[Send1/Send2]** under the standby mode.
- Press **[Send1/Send2]** to dial a phone number listed in the recent call log under the standby mode.
- Press and hold numeric keys **[2]-[9]** to dial the shortcut phone number set on the numeric keys under the standby mode.
- Dial with the contact name or phone number in the phone book.

The phone supports dialing the international emergency phone number, such as 112 and 911 etc.

With the phone, you can dial an emergency call at any country or region under the normal situation regardless of SIM card inserted when the phone is located within the coverage of the GSM network.

Input the emergency phone number and press **[Send1/Send2]** to dial out.

Answer Incoming Call

You can perform as follows when there is an incoming call:

- Press **[Send1/Send2]** to receive the incoming call. You can use the earphone to answer the call when the generic earphone or Bluetooth earphone is inserted in the phone.
- Press **[End]** to decline an incoming call.

View Missed Incoming Call

The quantity of missed incoming calls will display on the screen under the standby mode if there are missed incoming calls. You can press **<View >** to view the information of missed incoming calls.

Function During Call

You can use many functions during the call process.

Option During call

Press **<Option>** to use the following options:

- **Hold single call:** temporarily hold the current call.
- **End single call:** end the current call.
- **New Call:** call the opposite party to build a Call to Many.
- **Phonebook:** enter in the phonebook menu.
- **Call history:** view the information of the missed, dialed or answered calls in SIM card 1 or 2.
- **Messaging:** enter in the SMS menu.
- **Sound recorder:** record the current call.
- **Mute:** open or close the mute mode.
- **DTMF:** open or close the DTMF function during the call.

Launch or Close Hand-free Function

Press **<H-free>/<H-Held>** to open or close the hand free function.

Text Input

Use Keypad

Change Text Input Method

Press [**#**] key to select the desired input methods:

Multitap ABC, Multitap abc,Multitap Abc,urdu,Hindi,Tamil,Numeric

Multitap ABC/ Multitap abc

Press [2]-[9] corresponding to English letters to input capital letters. The times of pressing a key will rely on the letter to be input.

Numeric Input

Press the key corresponding to the desired number.

Other operation

- Press numeric key [*****] under all input methods to input the punctuation symbols.
- Press numeric key [**0**] to insert a space character under all input methods excepting the number input method.

Function of Functional List

Call center

With this function, you can view the information of call log in SIM card 1 or 2.

Press <Menu> and select **Call center** under the standby mode if you are desired to enter in this function.

Call history

With this function, you can view the information of the missed, dialed or answered calls in SIM card 1 or 2.

SIM 1/SIM 2

■ Call List

- ◆ **All Calls:** view all call records.
- ◆ **Dialled calls:** Display the recently dialed calls in SIM cards upon entering in this function.
- ◆ **Missed calls:** Display the recently missed calls in SIM cards upon entering in this function.
- ◆ **Received calls:** Display the recently answered calls in SIM cards upon entering in this function.

Call settings

SIM1 call settings

- **Call waiting:** After this function is launched, the network will inform you for the newly incoming call during the call. Please contact with your network operator for details. Perform as follows:
 - ❖ **Activate:** launch the Call Wait function.
 - ❖ **Deactivate:** not launch this function.
 - ❖ **Query status:** view the present status of this function.
- **Call divert:** divert the incoming call of a service to a designated phone number under the presetting condition in the function of forwarding the network service. Please contact with your network supplier to launch this function.

- **Call barring:** Set up the right of calling and answering. This function requires the network support. You can launch or close the function.
- **Line switching:** set the Line 1 or Line 2.

SIM2 call settings

- **Call waiting:** After this function is launched, the network will inform you for the newly incoming call during the call. Please contact with your network operator for details. Perform as follows:
 - ◊ **Activate:** launch the Call Wait function.
 - ◊ **Deactivate:** not launch this function.
 - ◊ **Query status:** view the present status of this function.
- **Call divert:** divert the incoming call of a service to a designated phone number under the presetting condition in the function of forwarding the network service. Please contact with your network supplier to launch this function.
- **Call barring:** Set up the right of calling and answering. This function requires the network support. You can launch or close the function.
- **Line switching:** set the Line 1 or Line 2.

Advance settings

- **Blacklist:** Set up to open or close the blacklist for incoming calls. Input the phone number to be refused in the blacklist or press OK button to enter in the contact phone number window to select the phone number to be added in the blacklist.
- **Auto redial:** Set up whether the phone is redialed when the call is not connected. Press the Activate/Deactivate button to launch or shut down the function.
- **Call time reminder:** Select to release prompt tone during the call in each integral minute time.
- **Answer mode:** Set the answer mode button.

Multimedia

With this function, you can perform the multimedia functions, such as snap, shoot or record the voice. Press **<Menu>** and then select **Multimedia** under the standby mode if desired to enter in this function.

Camera

Please insert the T-Flash card before using this function.

Press the **[LSK]** key to select it, enter in the camera window, press **[OK]** key to snap. Press the **[LSK]** key to select the option and you can perform

Use Camera Option

Press **<Option>** to use the following options under the following view-finding window.

- **Photos:** enter in the album to view the photos.
- **Camera settings:** set the Shutter sound, EV, Anti-flicker, Contrast, Delay timer, Cont. shot.
- **Image settings:** set the Image size and Image quality.
- **White balance:** adjust the color balance of the photo.
- **Scene mode:** select the snapping mode.
- **Effect settings:** change the hues or use the special effects for the photos snapped in the normal mode.
- **Storage:** Set the path to preserve photos.
- **Restore default:** recover all settings into the initial values.

Image viewer

You can view the photos snapped with the camera through this function.

Photo list option

Select a photo file and press **<Options>** under the photo list window and perform:

- **View:** view the selected image.
- **Image information:** view the details.
- **Browse style :** Select browsing mode
- **Send:** send the selected image file to multimedia message or Bluetooth.
- **Use as:** use the selected image file to the wallpaper, to the screen saver, to power on display, to power off display and call picture.
- **Rename:** change the name of the image.
- **Delete:** delete the selected image.
- **Sort by:** sort the images by the name, type, time, size or None.
- **Delete all files:** delete all selected images.
- **Storage:** Set the path to preserve photos.

Video recorder

Please insert the T-Flash card before using this function.

Press the left soft key to select it, enter in the Digital Camcorder window, press OK key to snap. Press the left soft key to select the Option and you can perform.

Use Digital Video Camera Options

Press **<LSK>** under the video-finding window and perform:

- **Camcorder Settings:** set up the video camera parameters.
 - **White balance:** select from options: Auto, Daylight, Tungsten, Fluorescent, Cloudy and Incandescent.
 - **EV:** adjust the exposure to highlight the definition of the image.
 - **Night mode:** set the function on or off.
 - **Anti-flicker:** set the anti-flicker value.
- **Video settings:** set the video parameters.
 - **Video quality:** select video quality.
- **Effect settings:** set the effect settings: Normal, Grayscale, Sepia ,Sepia green, Sepia blue and Color invert.
- **Storage:** Set the path to preserve video.
- **Restore default:** recover to the initial state.

Video player

Please insert the T-Flash card before using this function.

Enter in the video player window, select a video file, press the **[LSK]** key to select it, performing: Play, Send, Rename, Delete, Delete all files, Sort by,storage.

- **Play:** play the Video file.
- **Send:** send the selected video file to multimedia message or Bluetooth.
- **Rename:** change the name of the current video file.
- **Delete:** delete the currently-selected video file.

- **Delete all files:** delete all the currently-selected video files.
- **Sort by:** sort the video files by menu: name, type, time 、 size or None.
- **Storage:** Set the path to preserve video.

Audio player

You can enjoy the music with this function.

Play Music

You can use the following keys during the play.

Select a music file, press **[LSK]** to use the following options:

- **Play:** play the currently-selected song.
- **Details:** view the detailed information of the currently-selected song.
- **Refresh list:** Update the music player list.
- **Settings:** set up the music player.
 - **Pre. playlist:** Set the playlist path.
 - **List auto gen:** set up to turn on/off the function.
 - **Repeat:** set up to open/close in two menus: Single Song Cycle and All Songs Cycle.
 - **Shuffle:** set up to open/close the function.
 - **Background play:** set up to open/close the function.
 - **Bluetooth settings:** set the BT stereo output and BT stereo headset of function.

Sound recorder

Press the **[LSK]** to select it, entering in the recorder window to record file.

You can record the voice with this function.

Record

Select **Record** option in the record file option and begin to record.

Select **<Pause>** to stop recording temporarily and select **<Cont. >** to continue to record.

Select **<Stop>** to stop recording.

Record file list option

Select a record file and press **<Option>** under the record file list window and perform:

- **New record:** New call recording.
- **List:** View recorded documents.
 - ◊ **Play:** play the selected record file.
 - ◊ **Append:** Selected to continue recording after the recording.
 - ◊ **Rename:** rename the selected record file.
 - ◊ **Delete:** delete the selected record file.
 - ◊ **Delete all files:** delete all record files.
 - ◊ **Use as:** send the record file To User Profile.
 - ◊ **Send:** send to multimedia message, to Bluetooth.
- **Settings:** set up the storage location and file format.

FM radio

You can receive the FM broadcast with this function.

Receive FM Broadcast

Press **[OK]** under the radio window to receive the FM broadcast.

You can use the following keys when you hear the FM broadcast.

Key	Function
OK	Press to open or stop the radio.
UP	Open or close auto search.
DOWN	Record the FM
Left	search channel
Right	search channel .
CH1~CH5	Short press: switch to already existing channel ; Long press: automatic save listening to the keys on channel.
ON/OFF	Open or close FM
Record	FM recording
M+~M-	Searching the channel list
Search	Open or close auto search

FM Radio option

Press **<Option>** under the radio window to use the following options:

- **Channel list:** play, edit or delete the saved channels.
- **Shortcuts:** Delete or edit the channel list
- **Manual input:** manually input the channel to search.
- **Auto search:** automatically search the channel.
- **Settings:** Can set the background play,record formats: AMR / WAV, the audio quality low / high, recorded files are stored.
- **Record:** Recording the current FM program.
- **Append:** continuously record after the previous record file and append it after the record file.
- **File list:** list all recorded files.

Schedule FM record

Open FM recording, editing time, date, frequency, after setting the time to automatically record

File manager

Entering in the file manager window. With the function, you can view the data saved in the Phone and Memory card. After the T-Flash card is inserted, there are 3 operating window pertaining to the file: Open, Format, Details. Please confirm the store path when opening the folder.

Phonebook

You can save the phone number in the memories of SIM cards or phone.

Press **<Menu>** under the standby mode and then select **Phonebook** if you desire to enter in the function.

- **Add new contact:** With this function, you can add a new contact in the phonebook.

- ◆ **To SIM1**

1. Select **To SIM 1**
2. Input contact information:

➤ **Name:** input the name.

- **Number:** input the phone number.
- 3. Press **<Done>** to save the contact information.
- ◆ **To SIM2**
 1. Select **To SIM 2**
 2. Input contact information:
 - **Name:** input the name.
 - **Number:** input the phone number.
 3. Press **<Done>** to save the contact information.
- ◆ **To Phone**
 1. Select **To Phone**.
 2. Input contact information:
 - **Name:** input the name.
 - **Number:** input the phone number.
 - **Call picture:** set up caller picture.
 - **Call ringtone:** set up phone ring tones
 3. Press **<Done>** to save the contact information.
- Select a contact in the contact list window and press **<Option>** to perform:
 - **View:** view the detailed info of a selected contact.
 - **Send text message:** send an SMS to the current contact.
 - **Send Multimedia Message:** send an MMS to the current contact.
 - **Call:** Call use SIM1 or SIM2 selected contact
 - **Edit:** edit the current contact.
 - **Delete:** delete the current contact.
 - **Copy:** You can copy the contact information to phone, SIM1, SIM2.
 - **Move:** move the contact from phone to the SIM card 1 or SIM 2, move the contact from SIM 1 to SIM 2 or phone, move the contact from SIM2 to SIM 1 or phone.
 - **Add to Blacklist:** Add to blacklist the contact
 - **Mark several:** Into the multi-select operation, the selected contacts send a message, delete multiple choice, Select All, Deselect all.
 - **Phonebook settings:** You can manage the phonebook with this function.
 - ✧ **Preferred storage:** you can switch the store positions of SIM card and phone.
 - ✧ **Speed dial:** Set up to quickly dial under the standby mode, press OK button to enter in for setting operation.
 - ✧ **My number:** Add my number.
 - ✧ **Extra numbers:** set the SIM1/SIM2 owner number and turn on/off the fixed dial.
 - ✧ **Memory status:** View memory details.
 - ✧ **Copy contacts:** From the phone/SIM1/SIM2 copy contacts to SIM1/SIM2/phone.
 - ✧ **Move contacts:** From the phone/SIM1/SIM2 move contacts to SIM1/SIM2/phone.
 - ✧ **Delete all contacts:** Delete all the contacts.

User profiles

You can set up the personalized ringtones for incoming calls and phone-pertinent prompt tone etc under the different scenes with this function.

Press **<Menu>** under the standby mode and then select Profile Mode if you desire to enter in the

function.

Enter in the function; display the profile mode list including **General,Silent, Metting, Power saving,Outdoor,My style**.

Select a profile mode and press **<Options>**, you can use the following options:

- **Activate:** activate the profile mode.
- **Customize:** customize the profile mode as per the Alert type, Ring type, SIM1 incoming call,SIM2 incoming call,Ringtone volume,SIM1 message,SIM2 message,Message volume,Keypad,Keystroke volume,Power on,Power off,System alert.
- **Reset:** recover the setting into the initial values with this function.

Messages

You can send and receive the SMS and MMS as well as use the voice mailbox and cell broadcast with this function.

Press **<Menu>** under the standby mode and then select **Messages** if you desire to enter in the function.

Write message

You can write and send a SMS with this function.

Text message

- Input the SMS and press **<Option>** under the current window to perform:

You can write and send the SMS with this function.

- **Send to:** directly input the contact phone number or search a phone number of the receiver and finally press **Send** button.
- **Input method:** change the input method.
- **Advanced:** Insert the number,name,bookmark.
- **Save to Drafts:** save to SMS drafts.

Multimedia message

- Input the MMS and press **<Option>** under the current window to perform:

You can write and send the MMS with this function.

- **Send to:** directly input the contact phone number or search a phone number of the receiver and finally press **Send** button.
- **Input method:** change the input method.
- **Add picture:** Add the picture in MMS.
- **Add sound:** Add the sound in MMS
- **Add video:** Add the video in MMS
- **Add subject:** Add the subject in MMS
- **Preview MMS:** can preview multimedia messages.
- **Slide options:** options of sending MMS
- **Advanced:** Insert the attachment,bookmark.
- **Save to Drafts:** save to MMS drafts.

1 Press **<Done>** after finishing edition and pop up the following options:

- ◊ **Send :** send the MMS
- ◊ **Send option:** Delivery report , read report, priority, Delivery time
- ◊ **Edit recipient:** Editing a contact to receive
- ◊ **Remove recipient:** remove a contact to receive

- ◊ **Change to cc:** change the cc
- ◊ **Save to Drafts:** send the MMS in the draft-box for future sending.

2 Select **Send** to send the MMS.

Inbox

You can view the received SMS with this function.

Select a SMS/MMS entry and press <Option> under the inbox list window to perform:

- **Reply by SMS:** reply the message to the sender.
- **Reply by MMS:** reply the MMS to sender.
- **Call sender:** You can call the sender.
- **Forward:** forward the entry to other;
- **Delete:** delete the entry of the message;
- **Advanced:**
 - **Use number:** use the numbers in the message;
 - **Use USSD:** Use the data dial-up or send to voice call in the SMS.

Draft

With this menu, you can create and save SMS/MMS as draft. You can perform for some SMS/MMS as follows:

- **View:** view the MMS.
- **Send:** send the selected MMS.
- **Edit:** edit the sent MMS.
- **Delete:** delete the selected MMS.
- **Save objects:** save the objects.
- **Move to memory card:** move contents to the memory card.
- **Copy to memory card:** copy the contents to memory card
- **Advanced:** use number, use email, use URL, use sender, use recipient's NO., Use recipient's Email.
- **Details:** For more information on mms

Outbox

You can view the received SMS with this function.

Select a SMS/MMS entry and press <Option> under the outbox list window to perform:

- **View:** view the SMS/MMS.
- **Resend:** resend the selected SMS/MMS.
- **Edit:** edit or revise the entry of the message.
- **Delete:** delete the selected SMS/MMS.
- **Delete all:** delete all MMS in the outbox.
- **Details:** For more information on mms

Sent messages

Select one entry of SMS/MMS and press right soft key to enter in options:

- **View:** view the SMS/MMS.
- **Forward:** forward the entry to other.
- **Delete:** delete the selected SMS/MMS.
- **Delete all:** delete all the SMS/MMS.

Delete messages

You can Select from the inbox,drafts,outbox,sent messages,all messages to delete messages

Broadcast message

You can receive information of various topics, such as weather, taxi and hospital etc from the network operator.

■ SIM1/SIM2 broadcast message

- **Receive mode:** select to open or close the function.
- **Channel settings:** set the channel of the cell broadcast, operating Select, Add, Edit and Delete.
- **Languages:** set up to receive the cell broadcast of all language or not.
- **Read messages:** read the message.

Message settings

You can set UP various SMS service options with this function.

- **Text message:** Set up the SMS related settings.
- **Multimedia message:** Set up the MMS related settings
- **Service message:** can set the enable push, enable service loading .

Organizer

You effectively manage your daily life with this function.

Press **<Menu >** under the standby mode and select **Organizer** if you desire to enter in the function.

Calendar

View the routines or the memo saved in the calendar.

The phone will prompt you with the related affairs in assisting you to manage your daily schedule.

Select Date in Calendar

The screen will highlight the date of today after displays the monthly calendar when you enter in the calendar function.

- I Press **[Left/Right]** to move by day.
- II Press **[UP/DOWN]** to move by week.

Calendar Option

Press **<Options>** under the calendar window to use the following options: .

- **Jump to date:** return to the calendar window after inputting the designated date with the cursor stopping on the inputting date.
- **Go to today:** Back to today date.
- **Go to weekly view:** use the weekly view to see the calendar.
- **Settings:** calendar can be switched to English or Hindu calendar
- **Help:** Description of the calendar.

Alarm

Set that the alarm clock will ring at specific time with this function.

Set up alarm clock

- 1 Select an alarm clock and enter into alarm clock setup window.
- 2 Set up the alarm clock with the following setting:
 - ❖ Set the alarm clock status as on or off.
 - ❖ Set the alarm clock time.

- ❖ Select the ring mode as Everyday, Once or Days.
- ❖ Select the alarm tone from tone or FM radio.
- ❖ Select the Snooze time.
- ❖ Select alert type.

3 Press **<done>**.

Calculator

You can conduct the basic arithmetic operations.

- 1 Input the first number.
- 2 Press one of directional keys to select the arithmetic operation sign.
- 3 Input the second number.
- 4 Press **[LSK]** or **[OK]** to view the calculation results.

Ebook reader

- **Open ebook:** View the selected document.
- **Clean up bookshelf:** Updated list of e-books.
- **Global settings:** set the system contents of the default.
- **Book info:** E-book shows the details of the selected.
- **Delete:** delete the selected e-books.
- **Delete all files:** delete all File List in the e-books.
- **Sort by:** sort the e-books files by menu: Name, Type, Time, Size or None.
- **Apply global settings:** Return to system default.
- **Help:** instruction to the game operation.

World clock

You can view the current local time of various countries.

Bluetooth

You can activate the Bluetooth function with this function, can connect the antenna of the phone with the other Bluetooth in the wireless and exchange data, call in hand-free way or remotely control the phone with these device.

Power

Open or close the Bluetooth with this function.

Visibility

display or hide the local phone in view of other Bluetooth device. Set up turn on/off the function.

My device

Upon entering this function, you can search the list of my devices. Select a device from the list of my devices; press **<Option>** to perform:

- **Rename:** rename the device name.
- **Delete:** delete the selected device.
- **Delete all:** delete all device lists.

Search audio device

you can search for and connect audio devices.

My name

edit or save the name of the local device.

Advanced

- **Audio Path:** set the audio path is on the leave in phone or forward to bluetooth headset.
- **My address:** View my address.

Settings

You can set various functions of the phone with these functions.

Press **<Menu>** under the standby window and then select **Settings** if you desire to enter in this function.

Dual SIM settings

Realize to switch amid the Dual SIM open, Only SIM1 open, Only SIM2 open,Flight mode.

Phone Settings

You can customize your favorite phone functions based your interest with this function.

- **Flash light:**open or close the flash light.
- **Time and date:** you can set up time/date and time zone for your phone.
- **Schedule power on/off:** you can set up to power the phone on/off at the set time. This function can be opened or closed.
- **Language:** select the language used for the phone.
- **Pref. input methods:** select the default input method.
- **Add Remove Input Method:** you can add or remove input method.
- **Display:**
 - ◊ **Wallpaper:** select your favorite picture as the wallpaper of the standby window.
 - ◊ **Screen saver:** select your favorite picture as the screen protection.
 - ◊ **Power on display:** press the up and down navigation keys to select the animation upon powering the phone on.
 - ◊ **Power off display:** press the up and down navigation keys to select the animation upon powering the phone off.
 - ◊ **Show date and time:** set up to open/close the function
 - ◊ **List Effect Switch:** have the effect of choice: Normal,Auto,Tensile,Spread,Rope,Shade,Shelve,frame,focus,rotate
 - ◊ **3D mainmenu highlight style:**have the effect of choice:Normal, Auto,Otate,Repeat,Tube,Move,Turn,Blink,
 - ◊ **Mainmenu style:**styles 3D, Normal
 - ◊ **Theme Mode:**selecting a different theme to switch styles
- **Dedicated Key:** edit the up, down left,right keys.
- **Auto update of date and time:** activate/Deactivate this function..
- **LCD backlight:** set the brightness and time.

Network Settings

Set up the phone network with this function.

■ SIM1/ SIM2 network settings:

- **Network selection:** press the up and down navigation keys to select the ways of connecting with the network in Re-search, Select network and search mode and press the OK button to finish the setup.
- **Preferences:** select the priority Network.

Security Settings

You can manage your phone safely with this function.

The phone password, SIM card password and PIN2 support 4-8digits, do not support other characters.

The original password of the phone when leaving the factory is 1234. The password and PIN2 and SIM card are provided by the network operator

When the PIN/PIN2 is input wrongly in successively three times, the SIM card will be locked.

The PUK (personal unlock key)/PUK2 are required to input if you want to unlock the SIM card. The PUK/PUK2 is provided by the network operator.

If the PUK is input wrongly in successively 10 times. The SIM card will be locked and discarded permanently.

■ SIM1 security

- **PIN lock:** open or close the PIN lock function. When PIN lock is launched, the PIN shall be input upon each power-on.
- **Change PIN:** you can change the PIN.
- **Change PIN2:** you can change the PIN2.

■ SIM2 security

- **PIN lock:** open or close the PIN lock function. When PIN lock is launched, the PIN shall be input upon each power-on.

- **Change PIN:** you can change the PIN.

- **Change PIN2:** you can change the PIN2.

■ Phone security:

turn on/off the phone lock. When phone lock is enabled, power on to enter phone password. The preset password is: 1122. You can change the password.

■ Auto keypad lock:

press the left soft key to set up for the keypad lock in menus: off, 5 Sec, 30 Sec, 1 min and 5 min.

Restone factory settings

Recover the setting of the phone into the initial values with this function.

Fun&Games

Games

Magic Sushi

Enter in the game window. There is a game:magic sushi. With the game setting menu, you can set the background music effect and sound effect.

Select a game, press the soft key to select it, you can perform:

- **Start game:** The game has entered a new initial state.

- **Best grades:** a game score list.
- **Help:** instruction to the game operation.

Games settings

You can set the BGM, Sound effect, vibration, Games Volume.

MSN

This feature is a chat software. Services under this part fee-based services. That may arise during use GPRS communications traffic fees charged by local operators.

Yahoo

Yahoo is an Internet portal. Its services include: search engines, e-mail, news and so on. That may arise during use GPRS communications traffic fees charged by local operators.

Facebook

Facebook is a social networking site.

Twitter

Twitter is a abroad is a social networking and microblogging service website.

Ebuddy

Ebuddy is a Webpage online chat tools.

nimbuzz

Nimbuzz supports many popular instant messaging network.

Services

You can use the network-related service with this function.

Press **<Menu>** under the standby window and then select **Services** if you desire to enter in this function.

Internet service

You can surf on the network with this function. After entering in the function, you can perform:

- **Homepage:** indicate the default website of the internet.
- **Bookmarks:** used to save the commonly-used website.
- **Input address:** input the website to be searched and press OK button to access to the network directly.
- **Recent pages:** browse the saved record of the browsed WebPages.
- **Settings:** set up WAP-related service.
 - ◊ **Homepage:** set the default or user defined of the network.
 - ◊ **Select profile:** select an SIM card to access to WAP
 - ◊ **Data account:** View data account information.
 - ◊ **Browser options:** you can clear away the cache remained when at access to the network and clear away the personal data related when at registration of the network and authentication to the network.
 - ◊ **Preferences:** set up the timeout, show picture, cache, cookies.

Data account

Enter in GSM account list; select an entry to edit its contents:

- **Account name:** edit the name of the account.
- **APN:** edit the accessed APN.
- **User name:** the user's name accessing to APN server.
- **Password:** edit the access password to APN server.
- **Auth.type:** select one of certification modes used by the WAP identity certificate.
- **SIM selection:** select the SIM card.
- **Advanced settings:** set up homepage, connection type, use proxy, primary DNS, secondary DNS, IP address, subnet mask.

FAQ and Solutions

You can check the phone simply before contacting with the post sales server in order for you to avoid the excessive maintenance time and expense waste.

Cannot power the phone on

- Check whether the Powering-on key is pressed and hold for 1 second or above;
- Check whether the battery is contacted badly or not. Please remove the battery firstly and then try to power the phone on;
- Check whether the battery capacity is used up or not; please charge the battery;

Upon power-on, there is information displayed

- Input phone lock password: select the locking function and should input the phone password before use.
- Input PIN: select the function of inputting PIN when the phone is powered on. The PIN shall be input;
- Input PUK: after the PIN is input wrongly for successively 3 times, the phone will be locked. The PUK provided by the network operator should be input;

SIM card error

- There is some dirt on the metal surface of the SIM card. Please wipe the metal contacts of the SIM card with a clean cloth ;
- SIM card is not installed. You should install the SIM card based on the User's Manual.
- SIM card is damaged. Please contact with your network supplier;

Cannot access to network

- The signal is weak, please move to the place where the signal is strong and retry;
- Beyond the coverage of the network of the network server;
- SIM card is invalid, please contact with your network supplier;

Cannot dial out

- Please confirm whether the dial key is pressed after the number is dialed;
- Please confirm whether the call is barred due to owned toll;
- Please confirm whether the SIM card is valid or not;
- Please confirm whether the call restriction function is set up;
- Please confirm whether the fixed dial function is set up;

Bad call quality

- Check whether the volume is adjusted appropriately;
- Use the phone at the place where the receiving quality is not good, such as near to the building or in the basement where the radio wave cannot reach.
- Use the phone at the peak time, such as at the time of going on/off the duty, the channel is congested;

Failed to call you

- Please confirm that the phone is powered on and is uplinked with network;
- Please confirm that the call is barred because of owned toll;
- Please confirm whether the SIM card is valid;
- Please confirm whether the fixed dial function is set up;

Failed to hear you

- Please confirm that the microphone is opened;

- Please keep the microphone at the bottom of the phone close to your mouth.

Short standby time

- The stand-by time is relevant to the system setup. The phone is possibly at the place where the signal state is bad. When the phone cannot receive the signal, the phone will transmit to search the base station continuously; consuming a great deal of battery capacity and shortening the stand-by time of the battery. Please move to the place where the signal is strong to use the phone or temporarily power the phone off.

- The battery requires to be replaced with a new battery ;

Cannot charge

- Bad connection; inspect whether the plug is connected well or not;
- Wipe the interfaces of the phone and battery with soft and dry clothing.
- Charge at the environment below -0°C or beyond 45°C. Please change the charging environment;
- The battery or adapter is damaged and requires to be replaced;

Please record the phone model and SN, authorized or insurance information and detailed statement and then contact with the local after sales servicer if the aforementioned instruction cannot facilitate you to conquer these problems.

Important Security Information

Battery

Do not use the damaged adapter or battery.

Please use the battery correctly, do not make the battery short circuit, or otherwise produced heat will cause the fire.

Prohibit putting the battery into the fire, or otherwise the battery will explode.

Should return the waste battery to the supplier or at the designated recycling location, and should not discard with the life trash.

The battery charging time depends on the remained capacity, type and adapter. The battery may be charged for thousands of times, but will wear out gradually. Please purchases new battery when the standby time is shorter than the normal time obviously.

Please use the adapter and battery dedicated to or authorized for the phone.

Please disconnect the adapter and the power supply when the adapter is not used.

Please do not charge the battery for too long time, or otherwise damage the battery and shorten the service life of the battery.

Please cool or heat the battery to the normal temperature because the temperature extremes will affect the charging (because the lithium ion battery will be affect when the temperature is lower than 0°C).

Traffic Safety

The phone has a strong wireless voice communication function. With it, you can call at any time and any place, thus the subscriber shall undertake some important responsibilities.

To drive is your first duty when you are driving. Should be aware of answering the call and abide by the local regulations during the drive.

Understand the wireless phone and its function, such as quick dial and redial, which can help you to dial out conveniently without distraction during the drive.

Should use the hand-free device if there is and use any hand-free attachment currently-offered if possible to enhance the convenience and safety for the use of the wireless phone.

Place the wireless phone at an easy-to-find place. Do not distract from the road to sue the phone.

Should use the voice mailbox as far as possible to answer the call if receiving a call at an inconvenient time.

Tell the caller that you are driving. If necessary, hang up during the traffic congestion and bad weather. It is dangerous in rainy, snowy, freeze, icy and traffic congestion situation.

Safety airbag, brake, speed control system and fuel injection system shall not be affected by the wireless transmission. Please contact with automobile distributor in case of the above problems.

Please close your mobile phone when fueling or at any place where the bidirectional wireless devices are prohibited using. Please do not place the phone together with the flammable and explosive articles because the internal sparkle can ignite.

Please close the mobile phone before the plane takes off. Be sure not use the phone during the flight in order to prevent the phone form disturbing the plane communication system. To use the phone before the plane takes off shall be approved by the screw members based on the safety regulation.

Please confirm that the phone alarm clock will not be opened automatically during the flight.

Operating Environment

Please abide by this regulation at any place. Please close the phone at place where the phone is prohibited using or the phone may cause the risks.

Should read the User's Manual; understand the security instruction when the phone is connected with other device. The phone is prohibited connecting with other incompatible devices.

The subscriber shall use the phone at the correct location (to the ear with the antenna pointing to top of the arm) in order to operate satisfactorily and protect your health.

Please use the phone at applicable temperature range -10°C to 50°C .

Electronic Apparatus

Most electronic devices shield the radio information. Please contact with the manufacturer for related information.

- Pacemaker: keep the phone 6 inches (15cm) or above apart from the pacemaker; should not carry the phone in the chest pocket; answer the incoming call with the ear at the other side of the pacemaker to lower the possible disturbance. Please close the phone if you concern about the disturbance of the phone.
- Hearing aid: partial digital wireless phones disturb the hearing aid possibly. Please contact with the hearing aid manufacturer in case of disturbance.
- Other medical apparatus: please consult with manufacturer if you use other personal medical apparatus in confirmation of wireless shield wave. The doctor may assist you obtaining the information. Please close the phone if the phone is prohibited using near the healthcare facilities.
- Automobile device: please consult the manufacturer in confirmation of the information because the wireless signal may affect the electronic devices installed in the automobile.

Emergency Call

The phone uses the wireless signal similarly with other ropeless phone and cannot be ensured to connect under all cases. Thus, the important calls should do not rely on the wireless phone only, in instance medical emergency call.

The phone shall be kept on with enough strong signals within the network coverage.

Please input the emergency call under the standby mode and then press the Dial key to dial out if you want to dial the emergency call.

Other Important Safety Information

- Please use the accessories of the original manufacturer or the accessories approved by the manufacturer. The usage of any unapproved accessory will affect the phone performance and damage the phone, even result in the human body risks or in violation of the related national regulations on the communication terminals.
- Please clean the phone with the slightly-wet and static-free clothing. Do not use the dry or static-prone clothing. Please note not to use the chemicals such as detergents when cleaning the phone surface. Please power the phone off when cleaning the phone.
- Please do not place your phone near to the magnetic memory medium such as PC disk. The phone may disturb the TV, radio, PC, thus affecting the call performance when using the phone near them.
- Do not let the phone exposed to the strong sunlight in avoidance of being heated.
- Do not enter various liquids in to the phone in avoidance of be damaged.
- Do not throw and strike the phone, do not crudely treat and damage the internal circuit board of the phone.
- Do not connect the phone with other device not supporting the phone.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.