

## Function of Standard

1. The pager can be showed time.
2. Messages had been stored that can be indicated.
3. Unread messages will be indicated.
4. Unread messages will be alerted every two minutes.
5. Special or all messages can be deleted individual.
6. Messages source can be remembered.
7. Messages duplicate display.
8. Lock/ Unlock messages function.
9. Receiving type: Mute/ Motor (vibration)/ Sound.
10. Next page indicate.
11. Low battery alert.
12. 3 sets of alarm mode.
13. Service range display.
14. Light aid.


### The Diagram of Pager

<b>88</b>	Message(s) volume(s)
	Vibrate
	Sound
	Alarm
	Set Time
	Duplicate
	Delete
	Lock
	Service Range
	Low Battery Capacity
	More Information

## TURN PAGER ON:


Press the (■) button to activate pager, all icons will appear on the screen for a few seconds.

For example diagram 1.

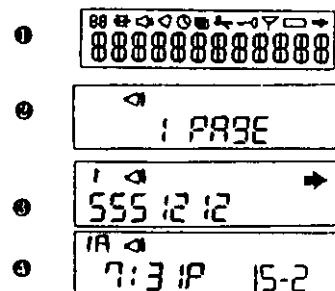


## RECEIVE AND READ MESSAGE:

1. When a message is received, it will be appeared " 1 PAGE " on the screen, for Example diagram 2. Press the (■) button to display the message, for example diagram 3.
2. (→) icon appears on the screen to remind of more information.
3. When a message had been displayed, it will be showed the receiving time and date on the screen, for example diagram 4.
4. Press the (■) button, the message can be read again.

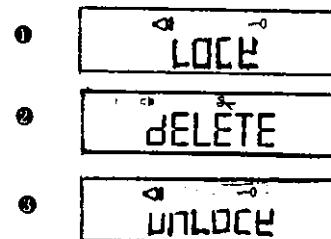

## LOCK/ DELETE/ UNLOCK MESSAGE:

When a message is displayed on the screen, Press the (△) button to LOCK/ DELETE/ UNLOCK. If you wish to lock the message, Press the (△) button twice, " LOCK " will be displayed on the screen, for example diagram 1. Then Press the SELECT ( > ) button to Lock action is confirmed. If you wish to delete message on the screen, Press the (△) button to " DELETE ", for example diagram 2. Then Press the SELECT ( > ) button to Delete action is confirmed. If you wish to unlock the message on the screen, Press the (△) button to " UNLOCK ", for example diagram 3. Then Press the SELECT ( > ) button to Unlock action is confirmed.

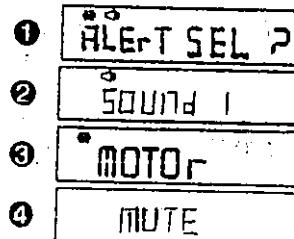


Press the (△) button to " ALERT SEL ? " sound beep and music icon will be appear on the screen, for example diagram 1. Press the SELECT ( > ) button to set mode. Meantime it will appear " SOUND ? " for example diagram 2. Press the (△) button sequentially, it will appear " MOTO " or " MUTE ", for example diagram ( 3, 4 ). It depends on your choice to select. Either press the (△) button to set mode or change automatically for 7 seconds.

SOUND: music    MOTOR: vibration    MUTE: without bothering

## TURN PAGER OFF:


Press the (Δ) button until it appears “ PAGE OFF ? “ on the screen, for example diagram 1. Then press the SELECT ( > ) button to turn off pager , for example diagram 2.

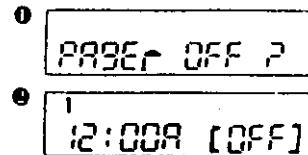

## ACTIVATE PAGER AUTO / MANUAL:

1. Press the (Δ) button till it displays “ PGR MANUAL ? “ on the screen, for example diagram 1. And the clock icon begin to flash on the screen, then Press the SELECT ( > ) button, when the” MANUAL “ begin to flash on the screen, Press the (Δ) button , meantime, the “ AUTO “ begin to flash on the screen, for example diagram 2. Then Press the SELECT ( > ) button, you can start to set the time of pager on/ off automatically.
2. At first, set the time of pager off - auto, for example diagram 3. The number of flash stands for the status. Press the (Δ) button to modify the number, press the SELECT ( > ) button to move the status of flash.
3. When above mentioned action had finished, Press the SELECT ( > ) button to enter set the time of pager on – auto, for example diagram 4, the same of operation as above.
5. When pager on – auto had been set, Press the (■) button, return to the main status screen.
6. If you want to deactivate pager off/ on – auto, you can change “ PGR AUTO “ TO “ PAGER MANUAL “.

Remark: This feature should be worked under the pager on , and it also can be worked pager manual .

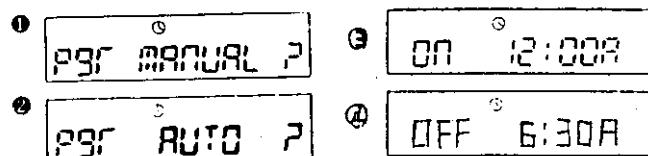


## DELETE ALL MESSAGE:

Press the (Δ) button to “ CLEAR ALL ? “ on the screen, for example diagram 1. Then press the SELECT ( > ) button to confirm function

PS. 1. It can't work when the message had not been read on the screen.

 2. It can't work when the message had been locked.




## SET ALARM:

Press the (△) button until it appears “ SET ALARM ? “ on the screen, for example diagram 1. Then press the SELECT ( > ) button to set Alarm function, for example diagram 2. Press sequentially the SELECT ( > ) to move , the first set of alarm begin to flash, Press the (△) button to modify till finish. Press the (■) button is confirmed and return to the main status screen.

Diagram A: It means the first set, the second set and the third set.

Diagram B: It means that ALARM function is on or – (off).


Diagram C: it shows the set time of ALARM.

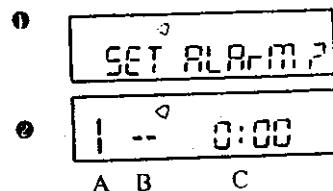


## SET TIME:

Press the (△) button till it appears “ SET TIME ? “ on the screen, for example diagram 1. Then press the SELECT ( > ) button to move the status , it will display time on the screen , for example diagram 2. use the (△) button to modify to correct time. When it finished, Press the (■) button to return the main status on the screen.

Remark: It can be worked when the status of pager turns on.

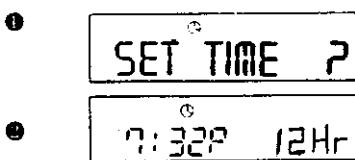


Press the (△) button till it appears “ SET DATE ? “ on the screen, for example diagram 1. Then press the SELECT ( > ) button to set date. Meantime it will display date on the screen, for example diagram 2. Press the SELECT ( > ) button to move. Press the (△) button to modify to correct date, when it finished, Press the (■) button to return the main status on the screen.

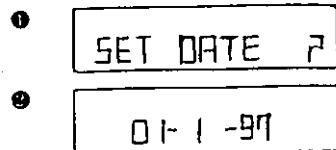

Press the (△) button till it appears “ SET SOUND ? “ on the screen, for example diagram 1. Then Press the SELECT ( > ) button to set function , for example diagram 2. Use the (△) button to choose music type, finally, Press the SELECT ( > ) button to confirm music type.

Remark: The “ ALERT SET “ must be set in the “ SOUND “ mode.

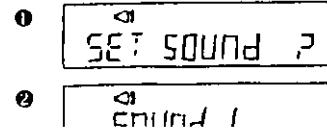

MAINTENANCE AND CARE:

1. KEEP AWAY FROM IMMERSION TO WATER, HIGH TEMPERATURE AND STRONG SHOCK.
2. PLEASE REMOVE BATTERY FROM RECEPTACLE IF YOU DO NOT INTEND TO USE PAGER IN THE SHORT TIME.
3. PLEASE USE SOFT DAMP CLOTH TO WIPE OFF THE DUST.  
( ANY OTHER CLEANING SOLUTION IS NOT RECOMMENDED. )