

## Tune up Procedure

- 1) Power switch (SW1): push down (SW1) to turn on.
- 2) Turn on SW1, then the LED glint, and the sample is tuning up successfully.  
Check the Tx power. The tune up is fixed by the manufacturer.
- 3) Specification: Frequency Range: 181.7-215.8MHz.

