

## *EXHIBIT V*

### *USER'S MANUAL*

## CAUTIONS AND INSTRUCTION

1. Use only on 110-120V, 60Hz.
2. Never disassemble or modify the lamp.
3. Never install this device in the following fixtures:
  - a: Fixture on dimming circuits.
  - b: Emergency exit lights.
4. To avoid risk of electronic shock –use only in dry locations.
5. This product may produce interference, When using a TV, radio or a wireless remote control. If interference should occur, Move the lamp away from such equipment three feet or more, otherwise, plug the lamp or the receiver into a different outlet.
6. To prevent burns and avoid electric shock please do not touch the bulb or cap during operation or immediately after switching off.

### 7. COMPLIANCE INFORMATION STATEMENT

Product Name: Energy Saving Lamp

Model Number: P3U11, P3U13, P3U15, P3U18, P3U20, P3U23

Twister11, Twister13, Twister15, Twister18, Twister20, Twister23

This device complies with part 18 of FCC Rules operation is subject to the following two conditions:

- 1). This device may not cause harmful interference.
- 2). This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.