

## **OPERATIONAL DESCRIPTION**

The transmitter of the EUT (UHF RFID Reader/Writer) is powered from 12Vdc host equipment. The antenna is Patch Antenna with TNC or SMA RP antenna connector.

NO.	TYPE	BRAND	MODEL	CONNECTOR	GAIN (dBi)
1	Patch	AWID	ANT-915LA2x2	TNC	12.43
2	Patch	AWID	ANT-915-CPS	TNC	5.84
3	Patch	AWID	ANT-915CP-R	SMA RP	5.5

For more detailed instruction, please take a look at the user's manual.

Report No.: RF140827C07