

VOICE-2000S
Digital Voice
Recorder

USER'S MANUAL
DA-300

DA-300

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates and can radiate radio frequency energy, and if not installed and used properly according to instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Whether this equipment caused harmful interference to radio or television reception can be determined by turning the equipment off and on to see if the harmful interference really comes from this equipment. The user is encouraged to correct the interference by one or more of the following measures:

Disclaimer

No liability is assumed, directly or indirectly, for any damage or loss resulting from the use of this manual or product. The manufacturer assumes no responsibility for data loss, improper use, damage, repairs, defects, battery replacement, or any other costs.

Introducing the VOICE-2000S™

The VOICE-2000S™ Digital Voice Recorder (DVR) is a pocket-sized recorder, making it ideal to carry around and record messages anytime. The state-of-the-art digital memory records messages for meetings, loved ones, or reminders for you. The VOICE-2000S™ DVR was designed to ensure quick and easy operation, and years of trouble-free use.

WARNING

Never open the battery compartment when recording or deleting messages. You may cause permanent damage to the VOICE-2000S™ DVR. Never operate the recording and deleting functions when battery low icon appears. You will cause disfunction to the VOICE-2000S™ DVR. Take care when handling the VOICE-2000S™ DVR that you do not drop it or accidentally cause the batteries to fall out of the compartment.

Unpacking the DVR

After you have unpacked the VOICE-2000S™ DVR, check the contents to make sure the following items are included:

- One VOICE-2000S™ Digital Voice Recorder
- This User's Manual


Key Features of the DVR

This section provides an overview of the key features of the VOICE-2000S™ DVR.

- LCD System Status Display
- Approximately 80 minutes of recording (maximum 99 messages)
- Quick and easy access to any record
- Fine search feature locates specific parts within messages
- Digital sound quality
- Flash memory keeps message records even without batteries inserted
- Low-Battery Warning
- Power-Saving Feature — auto power off in 30 seconds to prolong battery life
- Requires no tape or micro cassette


Components and Functions

Please refer to the following illustrations to identify the components and functions of the VOICE-2000S™ DVR:

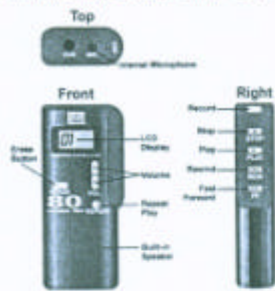 

DVR Front, Top, and Right Views

The following illustration shows the rear and left side of the VOICE-2000S™ DVR:

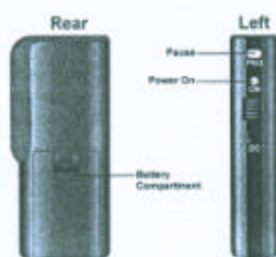 

DVR Rear and Left Views

Using the VOICE-2000S™ DVR

Inserting the Batteries

The VOICE-2000S™ DVR operates on three 1.5V alkaline batteries (size AAA). To insert the recorder batteries refer to the following illustration:

1. Remove the battery cover.



2. Insert the batteries ensuring correct polarity.

Inserting the Batteries

Notes!

Do not mix old batteries with new ones. Do not mix different battery types together. Do not leave discharged batteries in the battery compartment. When you do not plan to use your VOICE-2000S™ DVR for a long time, remove the batteries to prevent any damage caused by battery leakage.

The LCD Display

The LCD display keeps you informed of the DVR's current operating status. The following table will explain each of the LCD display icons.

ICON	Meaning
00 - 99	A number from 00 to 99 indicates the total number of recorded messages.
00 - 99	When this display flashes, it indicates that the message is being played back.
	When battery power is critically low, a Battery Low icon will be shown on the LCD display. You should replace the batteries as soon as possible. Refer to the previous section for instructions on replacing the batteries.
	This circulating display indicates that the VOICE-2000S™ DVR is recording.
	This display indicates that the VOICE-2000S™ DVR is paused.
DE	This display indicates that a message is being erased.
FULL	When the flash memory is full, this display appears.

Memory Full Indicator

When you have recorded 99 messages, or the maximum amount of recording time has been reached, the FULL icon appears in the display window. You will hear three short beeps if you attempt to record more messages. You must delete some messages before you can continue recording.

Using the DVR

Recording a Message	1. Push and hold the Record button for two seconds. 2. Speak into the microphone. Press the Stop button when you have finished recording your message.
<i>Note! The message being recorded is added to the messages already stored in the VOICE-2000S™ DVR. Will not record message less than 2-second in length.</i>	
Playing Back a Message	1. Turn the VOICE-2000S™ DVR on. 2. Press the Play button once. 3. Use the Forward or Rewind buttons to scroll to the message you want to play back.
<i>Note! To replay the same message, press the Play button after the message has finished playing.</i>	

Pausing when Recording or During Playback	1. Press and release the Pause button. The ... icon will appear in the display window indicating that the unit is paused. 2. Press and release the Pause button to resume playback or recording. 3. Press and release the Stop button to stop playback or recording.
<i>Note! If you do not resume playback or recording while in pause mode, the VOICE-2000S™ DVR will automatically shut down the power after 30 seconds.</i>	
Deleting a Single Message	1. Press the Play button to begin playing the message. 2. Use the Forward or Rewind buttons to seek to the message you wish to delete. 3. Press the Erase button until you hear a long beep and the  icon is shown in the display window. 4. When you hear two short beeps, it indicates that the message has been deleted.
Deleting All Messages	1. Press and hold the Erase button until you hear two short beeps and the  icon is shown in the display window. 2. Wait a few seconds until you hear a long beep. The message number will be set to 00. All your messages have been deleted.

Notes

You cannot use the delete function when the battery low indicator is on.

Warnings

Never open the battery compartment when deleting messages. You can cause permanent damage to the VOICE-2000S™ DVR.

Specifications

Recording Media	Built-in Flash Memory
Power Current	Record: 70 mA Play: 85 mA
Power Source	Three 1.5V "AAA" alkaline batteries.
Weight	80 grams (without batteries)
Dimensions	48mm X 110mm X 22mm (W) X (L) X (H)

Troubleshooting

Symptom	Possible Cause	Possible Solution
The unit does not operate.	The batteries have been inserted with incorrect polarity.	Re-install the batteries with the correct polarity.
	The batteries are weak.	Replace the 3 AAA alkaline batteries.
	The battery compartment cover is not completely closed.	Make sure the battery compartment is completely closed.
The display turns off.	Auto power off has occurred.	Press the Power ON button.
	Low battery.	Replace the 3 AAA alkaline batteries.
The unit does not operate properly.	Irregular handling.	Wait for the auto power off to reset the unit.

Symptom	Possible Cause	Possible Solution
Cannot record	99 messages have been recorded or maximum recording time (60 minutes) has been reached	Delete some messages to make more room in memory.
	Low battery	Replace the 3 AAA alkaline batteries.
Poor sound quality	Low battery	Replace the 3 AAA alkaline batteries.
	Volume setting is too low	Adjust the volume using the VOL button.
Playback stops before end of message	Low battery	Replace the 3 AAA alkaline batteries.

Limited Warranty

VOICE-2000S™ Inc., grants a warranty for this product for 90 days starting from the date of purchase of this product. Please retain the sales receipt as proof of purchase. During the warranty period, the product is eligible for replacement in case of defects in material and workmanship. In such case, the defective unit will be repaired or replaced according to the assessment of VOICE-2000S™ Inc. However, this warranty does not cover damages caused by improper use or from unauthorized modifications by third parties. In addition, this warranty does not cover expendable materials and defects, which constitute as normal wear and tear. Please contact our toll-free line at 1-877-4420007 (HI-2000S) for the limited warranty service.

VOICE-2000S
Digital Voice
Recorder

USER'S MANUAL

DA-500

20 分鐘說明書

BB

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates and can radiate radio frequency energy, and if not installed and used properly according to instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Whether this equipment caused harmful interference to radio or television reception can be determined by turning the equipment off and on to see if the harmful interference really comes from this equipment. The user is encouraged to correct the interference by one or more of the following measures:

Disclaimer

No liability is assumed, directly or indirectly, for any damage or loss resulting from the use of this manual or product. The manufacturer assumes no responsibility for data loss, improper use, damage, repairs, defects, battery replacement, or any other costs.

Introducing the VOICE-2000S™

The VOICE-2000S™ Digital Voice Recorder (DVR) is a pocket-sized recorder, making it ideal to carry around and record messages anytime. The state-of-the-art digital memory records messages for meetings, loved ones, or reminders for you. The VOICE-2000S™ DVR was designed to ensure quick and easy operation, and years of trouble-free use.

Warning

Never open the battery compartment when recording or deleting messages. You may cause permanent damage to the VOICE-2000S™ DVR. Never operate the recording and deleting functions when battery low icon appears. You will cause disfunction to the VOICE-2000S™ DVR. Take care when handling the VOICE-2000S™ DVR that you do not drop it or accidentally cause the batteries to fall out of the compartment.

Unpacking the DVR

After you have unpacked the VOICE-2000S™ DVR, check the contents to make sure the following items are included:

- One VOICE-2000S™ Digital Voice Recorder
- This User's Manual

Key Features of the DVR

This section provides an overview of the key features of the VOICE-2000S™ DVR.

- LCD System Status Display
- Approximately 20 minutes of recording (maximum 99 messages)
- Quick and easy access to any record
- Fine search feature locates specific parts within messages
- Digital sound quality
- Flash memory keeps message records even without batteries inserted
- Low-Battery Warning
- Power-Saving Feature — auto power off in 30 seconds to prolong battery life
- Requires no tape or micro cassette


Components and Functions

Please refer to the following illustrations to identify the components and functions of the VOICE-2000S™ DVR:



DVR Front, Top, and Right Views

The following illustration shows the rear and left side of the VOICE-2000S™ DVR:

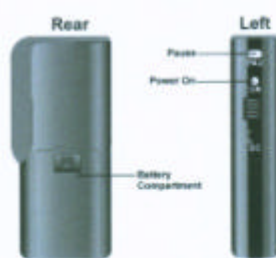 

DVR Rear and Left Views

Using the VOICE-2000S™ DVR

Inserting the Batteries

The VOICE-2000S™ DVR operates on three 1.5V alkaline batteries (size AAA). To insert the recorder batteries refer to the following illustration:

1. Remove the battery cover.



2. Insert the batteries ensuring correct polarity.

Inserting the Batteries



Do not mix old batteries with new ones. Do not mix different battery types together. Do not leave discharged batteries in the battery compartment. When you do not plan to use your VOICE-2000S™ DVR for a long time, remove the batteries to prevent any damage caused by battery leakage.

The LCD Display

The LCD display keeps you informed of the DVR's current operating status. The following table will explain each of the LCD display icons.

ICON	Meaning
00 - 99	A number from 00 to 99 indicates the total number of recorded messages.
00 - 99	When this display flashes, it indicates that the message is being played back.
	When battery power is critically low, a Battery Low icon will be shown on the LCD display. You should replace the batteries as soon as possible. Refer to the previous section for instructions on replacing the batteries.
	This circulating display indicates that the VOICE-2000S™ DVR is recording.
	This display indicates that the VOICE-2000S™ DVR is paused.
DE	This display indicates that a message is being erased.
FULL	When the flash memory is full, this display appears.

Memory Full Indicator

When you have recorded 99 messages, or the maximum amount of recording time has been reached, the FULL icon appears in the display window. You will hear three short beeps if you attempt to record more messages. You must delete some messages before you can continue recording.

Using the DVR

Recording a Message	1. Push and hold the Record button for two seconds. 2. Speak into the microphone. Press the Stop button when you have finished recording your message.
<i>Note! The message being recorded is added to the messages already stored in the VOICE-2000S™ DVR. Will not record message less than 2-second in length.</i>	
Playing Back a Message	1. Turn the VOICE-2000S™ DVR on. 2. Press the Play button once. 3. Use the Forward or Rewind buttons to scroll to the message you wish to play back.
<i>Note! To replay the same message, press the Play button after the message has finished playing.</i>	

Pausing when Recording or During Playback	1. Press and release the Pause button. The PAUSE icon will appear in the display window indicating that the unit is paused. 2. Press and release the Pause button to resume playback or recording. 3. Press and release the Stop button to stop playback or recording.
Note: If you do not resume playback or recording while in pause mode, the VOICE-2000S™ DVR will automatically shut down the power after 30 seconds.	
Deleting a Single Message	1. Press the Play button to begin playing the message. 2. Use the Forward or Rewind buttons to scroll to the message you wish to delete. 3. Press the Erase button until you hear a long beep and the DE icon is shown in the display window. 4. When you hear two short beeps, it indicates that the message has been deleted.
Deleting All Messages	1. Press and hold the Erase button until you hear two short beeps and the DE icon is shown in the display window. 2. Wait a few seconds until you hear a long beep. The message number will be set to 00. All your messages have been deleted.



You cannot use the delete function when the battery low indicator is on.



Never open the battery compartment when deleting messages. You can cause permanent damage to the VOICE-2000S™ DVR.

Specifications

Recording Media	Built-in Flash Memory
Power Current	Record: 70 mA Play: 85 mA
Power Source	Three 1.5V "AAA" alkaline batteries.
Weight	80 grams (without Batteries)
Dimensions	48mm X 110mm X 22mm (W) X (L) X (H)

Troubleshooting

Symptom	Possible Cause	Possible Solution
The unit does not operate.	The batteries have been inserted with incorrect polarity.	Re-install the batteries with the correct polarity.
	The batteries are weak.	Replace the 3 AAA alkaline batteries.
	The battery compartment cover is not completely closed.	Make sure the battery compartment is completely closed.
The display turns off.	Auto power off has occurred.	Press the Power ON button.
	Low battery	Replace the 3 AAA alkaline batteries.
The unit does not operate properly.	Irregular handling	Wait for the auto power off to reset the unit.

Symptom	Possible Cause	Possible Solution
Cannot record	89 messages have been recorded or maximum recording time (20 minutes) has been reached	Delete some messages to make more room in memory.
	Low battery	Replace the 3 AAA alkaline batteries.
Poor sound quality	Low battery	Replace the 3 AAA alkaline batteries.
	Volume setting is too low	Adjust the volume using the VOL button.
Playback stops before end of message	Low battery	Replace the 3 AAA alkaline batteries.

Limited Warranty

VOICE-2000S™ Inc., grants a warranty for this product for 90 days starting from the date of purchase of this product. Please retain the sales receipt as proof of purchase. During the warranty period, the product is eligible for replacement in case of defects in material and workmanship. In such case, the defective unit will be repaired or replaced according to the assessment of VOICE-2000S™ Inc. However, this warranty does not cover damages caused by improper use or from unauthorized modifications by third parties. In addition, this warranty does not cover expendable materials and defects, which constitute as normal wear and tear. Please contact our toll-free line at 1-877-4420007 (HI-2000S) for the limited warranty service.